



DF-790/DF-790(B)/DF-790(C)
BF-730
MT-730/MT-730(B)
AK-731/AK-730/AK-735
PH-7A/7C/7D
PARTS LIST

Published in March 2013

3NBPL073

843NB123

Rev.3

DF-790/DF-790(B)/DF-790(C)

———— CONTENTS ————

FIG. 1	Covers	2
FIG. 2	Frames	4
FIG. 3	Paper Feed Section 1	6
FIG. 4	Paper Feed Section 2	8
FIG. 5	Paper Feed Section 3	10
FIG. 6	Main Exit Section	12
FIG. 7	Drive Section	14
FIG. 8	Electrical Components	16
FIG. 9	Accessories.....	18
	• INDEX	20

FIG. 1 Covers

3NB-2

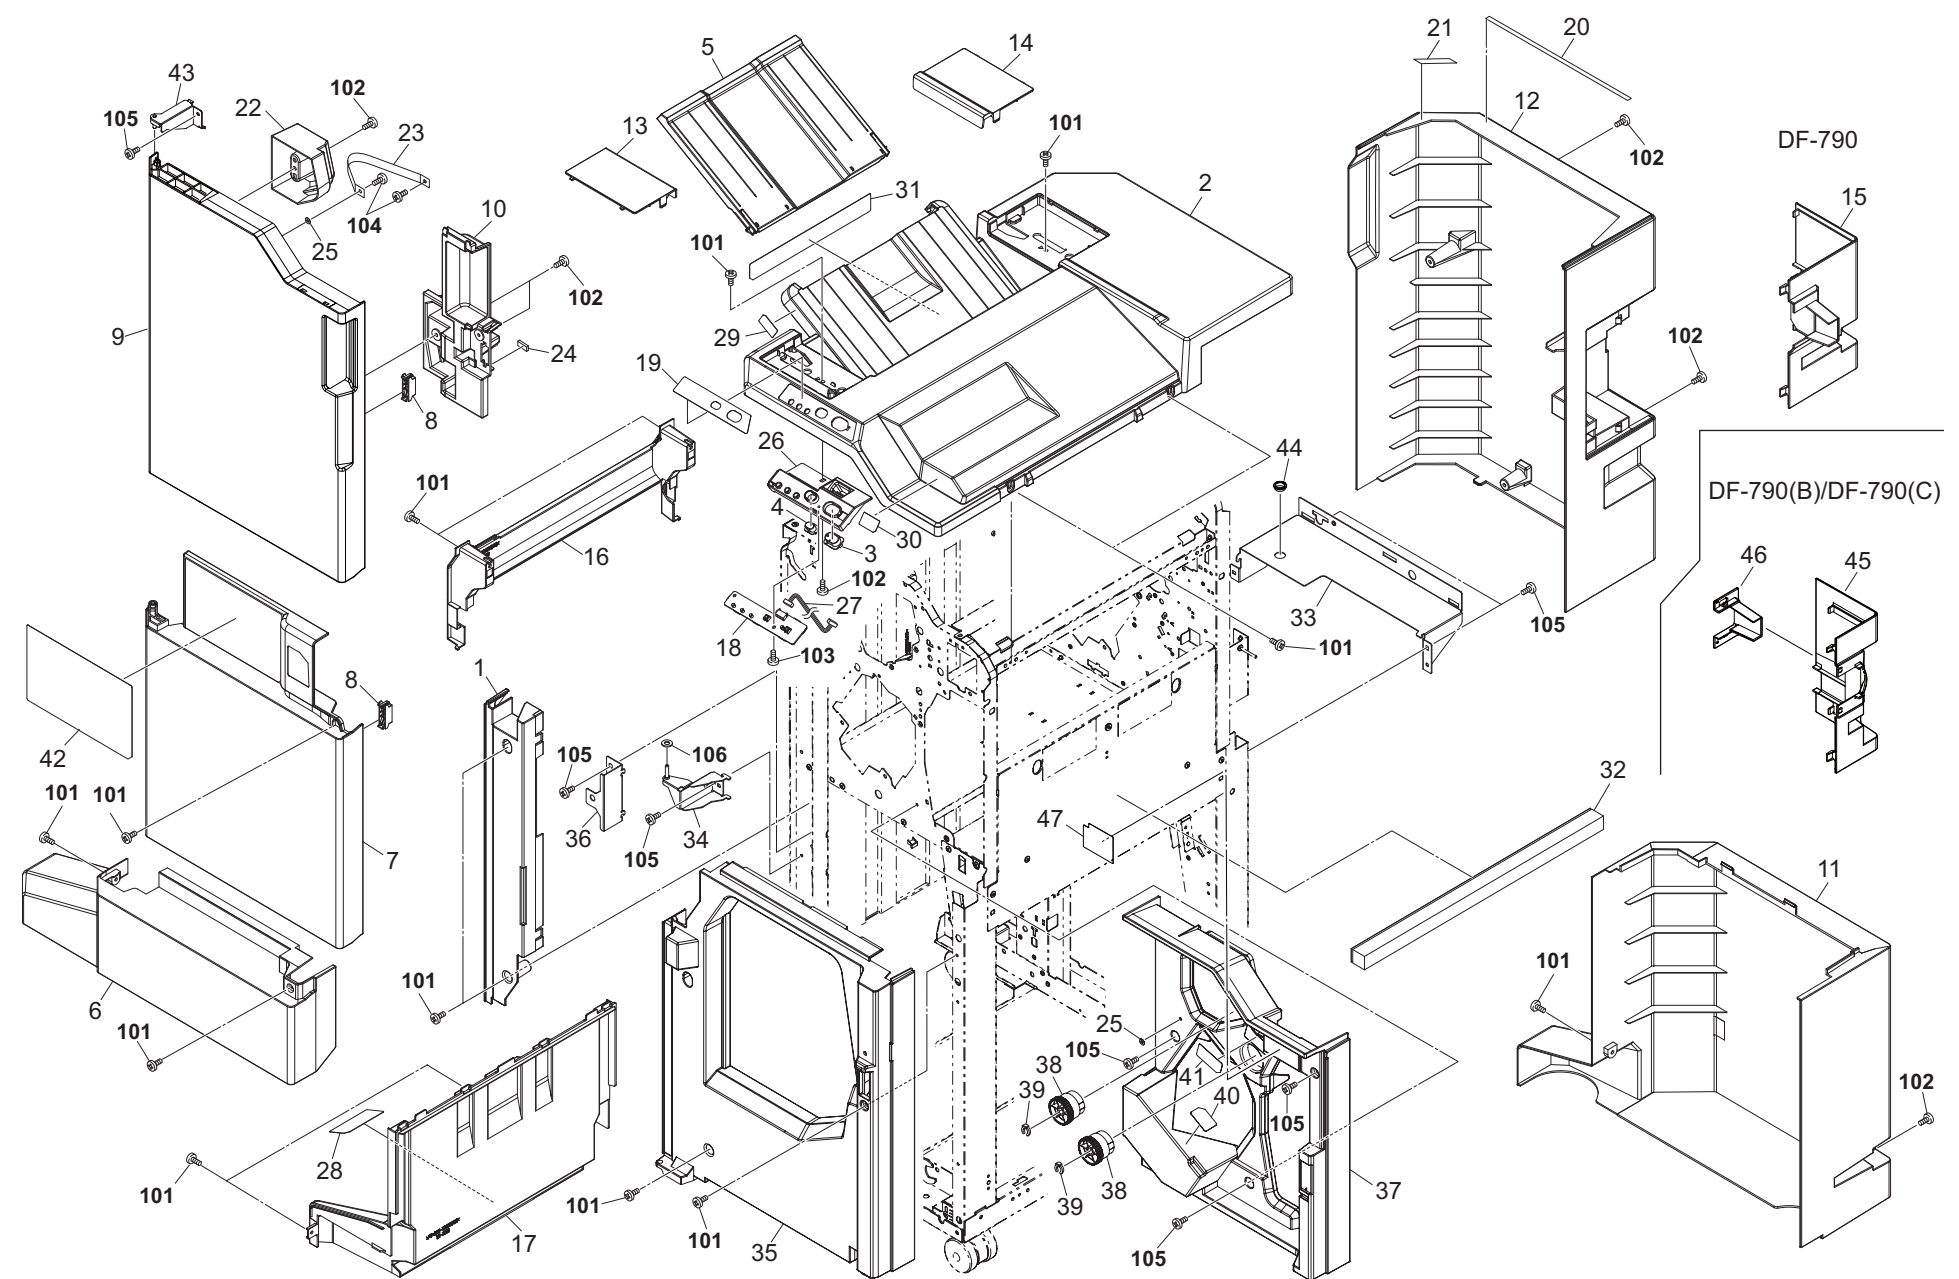


FIG. 1 Covers

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303NB04050	3NB04050	COVER FRONT LEFT UPPER		1
⊙	2	303NB04011	3NB04011	COVER TOP		1
	3	303NB04230	3NB04230	KEY STAPLER		1
	4	303NB04240	3NB04240	KEY SELECT		1
	5	303NB04111	3NB04111	TRAY B SLIDE		1
⊙	6	303NB04040	3NB04040	COVER FRONT LOWER		1
⊙	7	303NB04031	3NB04031	COVER FRONT MIDDLE		1
	8	302H004660	2H004660	MAGNET CATCH		2
⊙	9	303NB04022	3NB04022	COVER FRONT UPPER		1
⊙	10	303NB04171	3NB04171	COVER HANDLE		1
⊙	11	303NB04090	3NB04090	COVER REAR LOWER		1
⊙	12	303NB04081	3NB04081	COVER REAR UPPER		1
⊙	13	303NB04120	3NB04120	LID TOP FRONT		1
⊙	14	303NB04130	3NB04130	LID TOP REAR		1
⊙	15	303NB04161	3NB04161	COVER LID REAR	DF-790	1
⊙	16	303NB04141	3NB04141	COVER MAIN EXIT		1
⊙	17	303NB04151	3NB04151	COVER LEFT LOWER		1
⊙	18	303NB94030	3NB94030	PARTS PWB OPERATION ASSY SP		1
	19	303NB04221	3NB04221	SHEET OPERATION		1
	20	302H715300	2H715300	FILM MAG COVER C		1
	21	302HN02930	2HN02930	SHEET HOUSING LEFT		1
	22	303NB04320	3NB04320	STOPPER FRONT COVER		1
	23	302BL04681	2BL04681	STRAP COVER		1
	24	63213320	63213320	CUSHION,ORIGINAL COLLECTION		1
	25	302LW04260	2LW04260	SPACER USB		2
	26	303NB04211	3NB04211	MOUNT OPERATION		1
	27	303NB46160	3NB46160	WIRE OPERATION		1
	28	303NB34220	3NB34220	LABEL CAUTION MAIN TRAY		1
	29	303NB34070	3NB34070	LABEL B		1
	30	303NB34080	3NB34080	LABEL C		1
	31	303NB34230	3NB34230	LABEL MANUAL STAPLER		1
	32	303NB02310	3NB02310	SPONGE JOINT		1
	33	303NB04310	3NB04310	MOUNT REAR COVER		1
	34	303NB04260	3NB04260	FULCRUM-PLATE COVER MIDDLE		1
	35	303NB04071	3NB04071	COVER INNER LOWER		1
	36	303NB04330	3NB04330	REINFORCEMENT FULCRUM MIDDLE		1
	37	303NB04063	3NB04063	COVER INNER UPPER		1
	38	303NB04200	3NB04200	HANDLE JAM REMOVENT		2
	39	2BC06910	2BC06910	STOPPER 6		2
	40	303NB34240	3NB34240	LABEL A STAPLER		1
	41	303NB34210	3NB34210	LABEL D3 D5		1
	42	303NB34200	3NB34200	LABEL OPERATION		1
	43	303NB04250	3NB04250	FULCRUM-PLATE COVER UPPER		1
	44	7YZM110001++H01	YZ009420	ACCESS.BUSHING		1
⊙	45	303NC04062	3NC04062	COVER LID REAR	DF-790(B)/ DF-790(C)	1
⊙	46	303NC04190	3NC04190	COVER LID REAR S	DF-790(B)/ DF-790(C)	1
	47	303NB34250	3NB34250	LABEL D1		1

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	101	7BB782410H	BB111310	+TP-FLAT T.T S SCREW 4X10 SR(BLACK)		
	102	7BB200410H	BB105700	+BIND T.T P SCREW 4X10		
	103	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	104	7BB282308H	BB111240	+TP-FLAT T.T P SCREW 3X8(BLACK)		
	105	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
	106	C2804100	C2804100	POLYESTER SLIDER WASHER 4.1X10X0.5T		

- Parts with "+" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

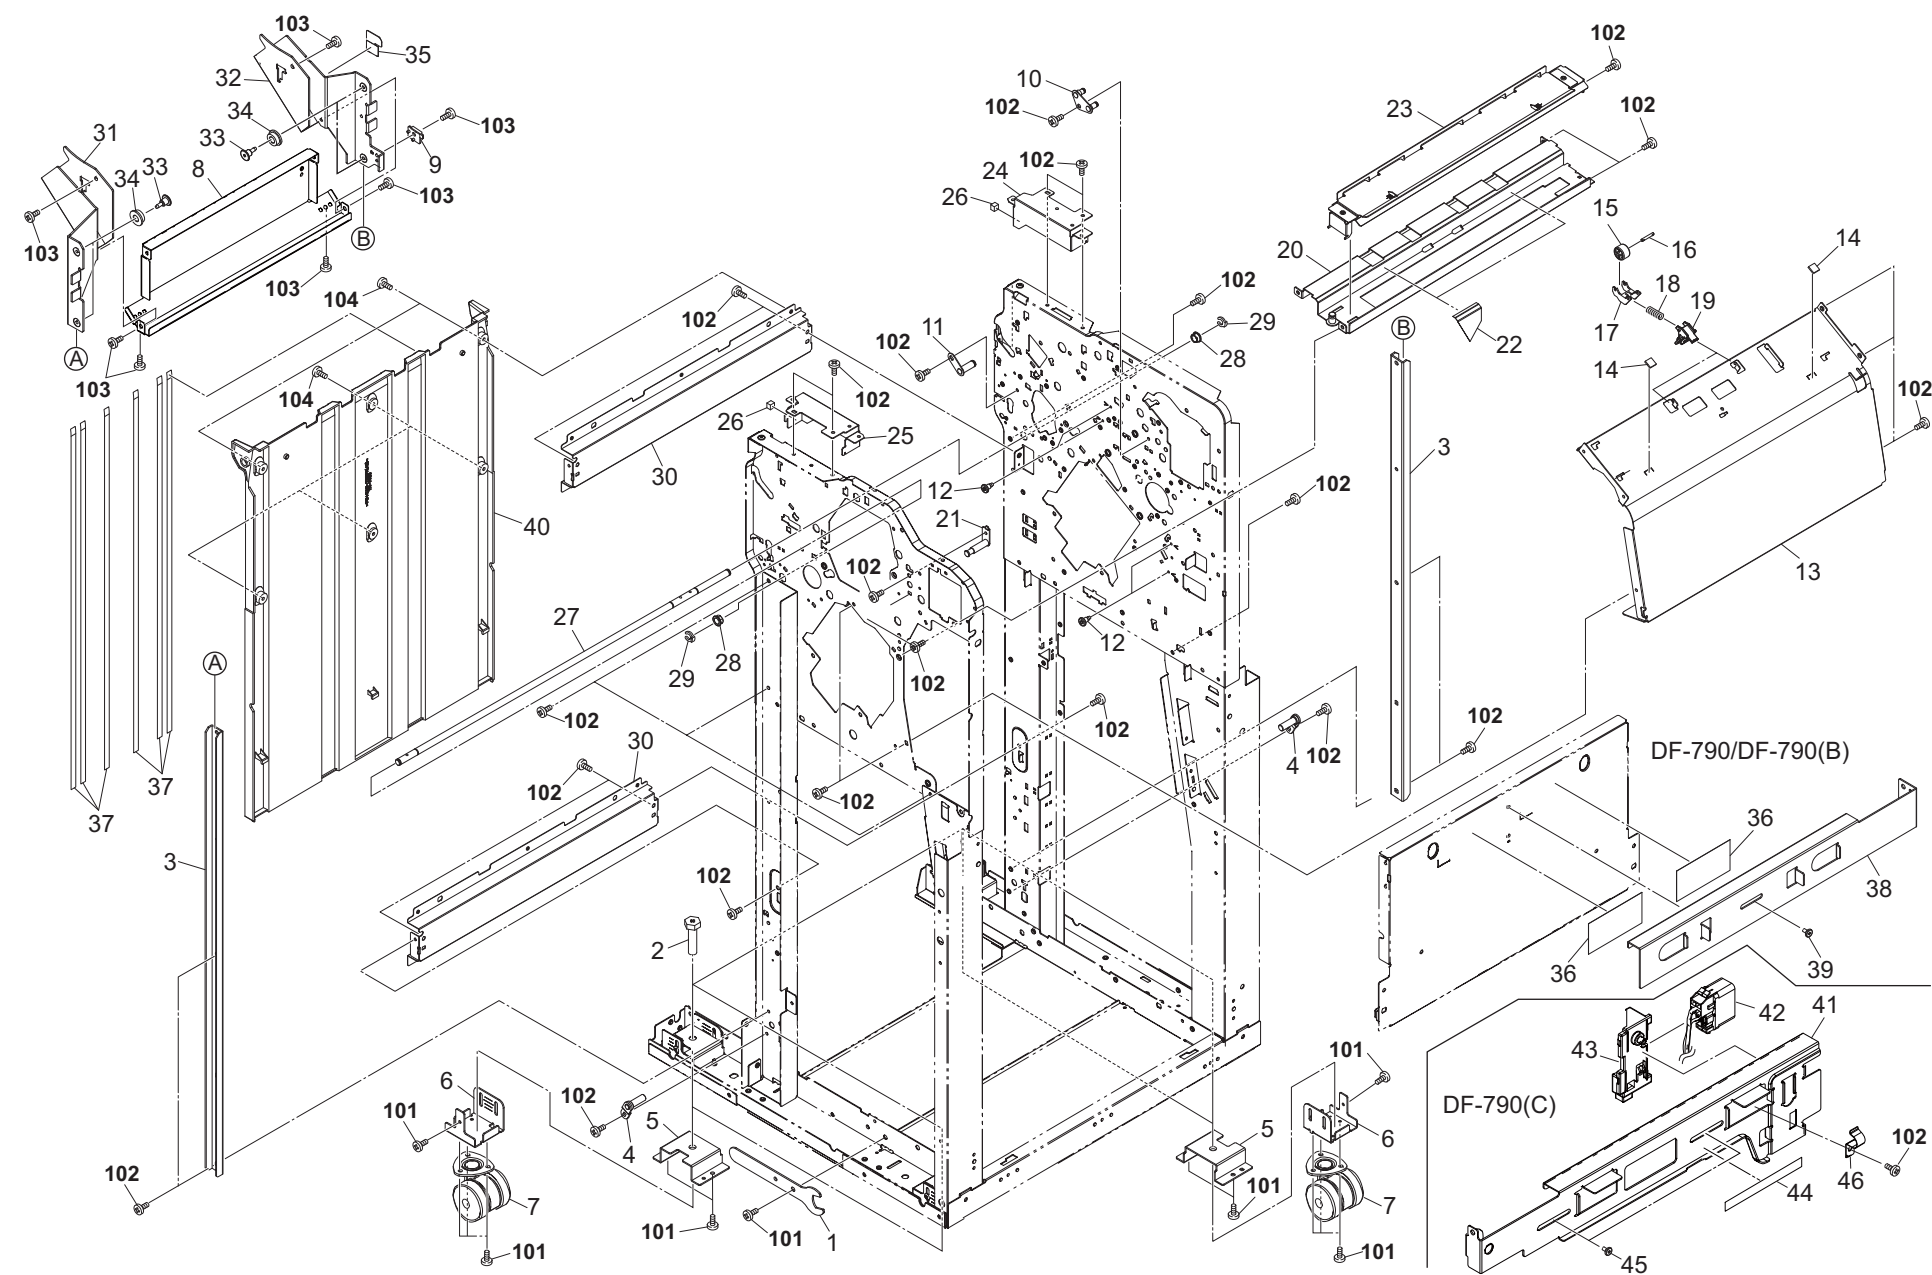


FIG. 2 Frames

3NB-3

Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
1	303LT03130	3LT03130	SPANNER		1
2	303LT03140	3LT03140	BOLT M10L40		4
3	303NB37180	3NB37180	RAIL MAIN TRAY		2
4	303ND02360	3ND02360	PIN HOOK BOOKLET		2
5	303NB02220	3NB02220	PLATE HOLDER CASTER		4
6	303NB02210	3NB02210	PLATE CASTER		4
7	302A002171	2A002171	CASTER UA		4
8	303NB37110	3NB37110	FRAME MAIN TRAY CENTER		1
9	303NB37090	3NB37090	LEVER SENSOR		1
10	303NB31030	3NB31030	MOUNT FEED IDLE		1
11	303NB31110	3NB31110	PIN EJECT DRIVE		1
12	302GR25241	2GR25241	PIN GUIDE CHUTE		4
13	303NB24090	3NB24090	GUIDE BOOKLET LEFT		1
14	303H321120	3H321120	CUSHION HOLDER		2
15	303NB36661	3NB36661	PULLEY MIDDLE		2
16	303NB36110	3NB36110	SHAFT MIDDLE PULLEY		2
17	303NB36100	3NB36100	HOLDER MIDDLE PULLEY		2
18	303NB36670	3NB36670	SPRING PULLEY		2
19	303NB36120	3NB36120	MOUNT MIDDLE PULLEY		2
20	303NB07030	3NB07030	STAY PUNCH		1
21	303NB04290	3NB04290	PLATE PIN HANDLE		1
22	303NB07140	3NB07140	SHEET ROLLER FEED		2
23	303NB07040	3NB07040	GUIDE PUNCH		1
24	303NB02240	3NB02240	MOUNT MAIL REAR		1
25	303NB02230	3NB02230	MOUNT MAIL FRONT		1
26	303JY24AD0	3JY24AD0	CUSHION B		2
27	303NB37070	3NB37070	SHAFT MAIN TRAY		1
28	28107310	49028101	BUSH 8		2
29	2BC06910	2BC06910	STOPPER 6		2
30	303NB02180	3NB02180	STAY PARTITION		2
31	303NB37100	3NB37100	FRAME MAIN TRAY FRONT		1
32	303NB37120	3NB37120	FRAME MAIN TRAY REAR		1
33	303NB37130	3NB37130	PIN RAIL		4
34	3AK20200	3AK20200	PULLEY,MAIN TRAY		4
35	303NB37190	3NB37190	FILM FRAME TRAY		1
36	303NB02190	3NB02190	FILM STAY RIGHT	DF-790/ F-790(B)	2
37	303NB02200	3NB02200	FILM PARTITION		6
38	303NB02250	3NB02250	PLATE LOCK JUNCTION	DF-790/ 790(B)	1
39	2FB16280	2FB16280	PIN DRUM LIFT	DF-790/ DF-790(B)	1
40	303NB02171	3NB02171	PARTITION FINISHER		1
41	303NB02341	3NB02341	PLATE LOCK JUNCTION D	DF-790(C)	1
42	303NB46190	3NB46190	WIRE INTERFACE B	DF-790(C)	1
43	303NB02360	3NB02360	GUIDE DRAWER	DF-790(C)	1
44	302KP29200	2KP29200	FILM SIDE REGIST	DF-790(C)	1
45	3CZ02230	3CZ02230	PIN,HOOK FULCRUM	DF-790(C)	2
46	303NB02130	3NB02130	SPRING-PLATE JUNCTION	DF-790(C)	1

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
101	7BB700412H	BB106830	+BIND T.T S SCREW 4X12 SR		
102	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
103	7BB782410H	BB111310	+TP-FLAT T.T S SCREW 4X10 SR(BLACK)		
104	7BB782308H	BB111300	+TP-FLAT T.T S SCREW 3X8 SR(BLACK)		

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 3 Paper Feed Section 1

3NB-2

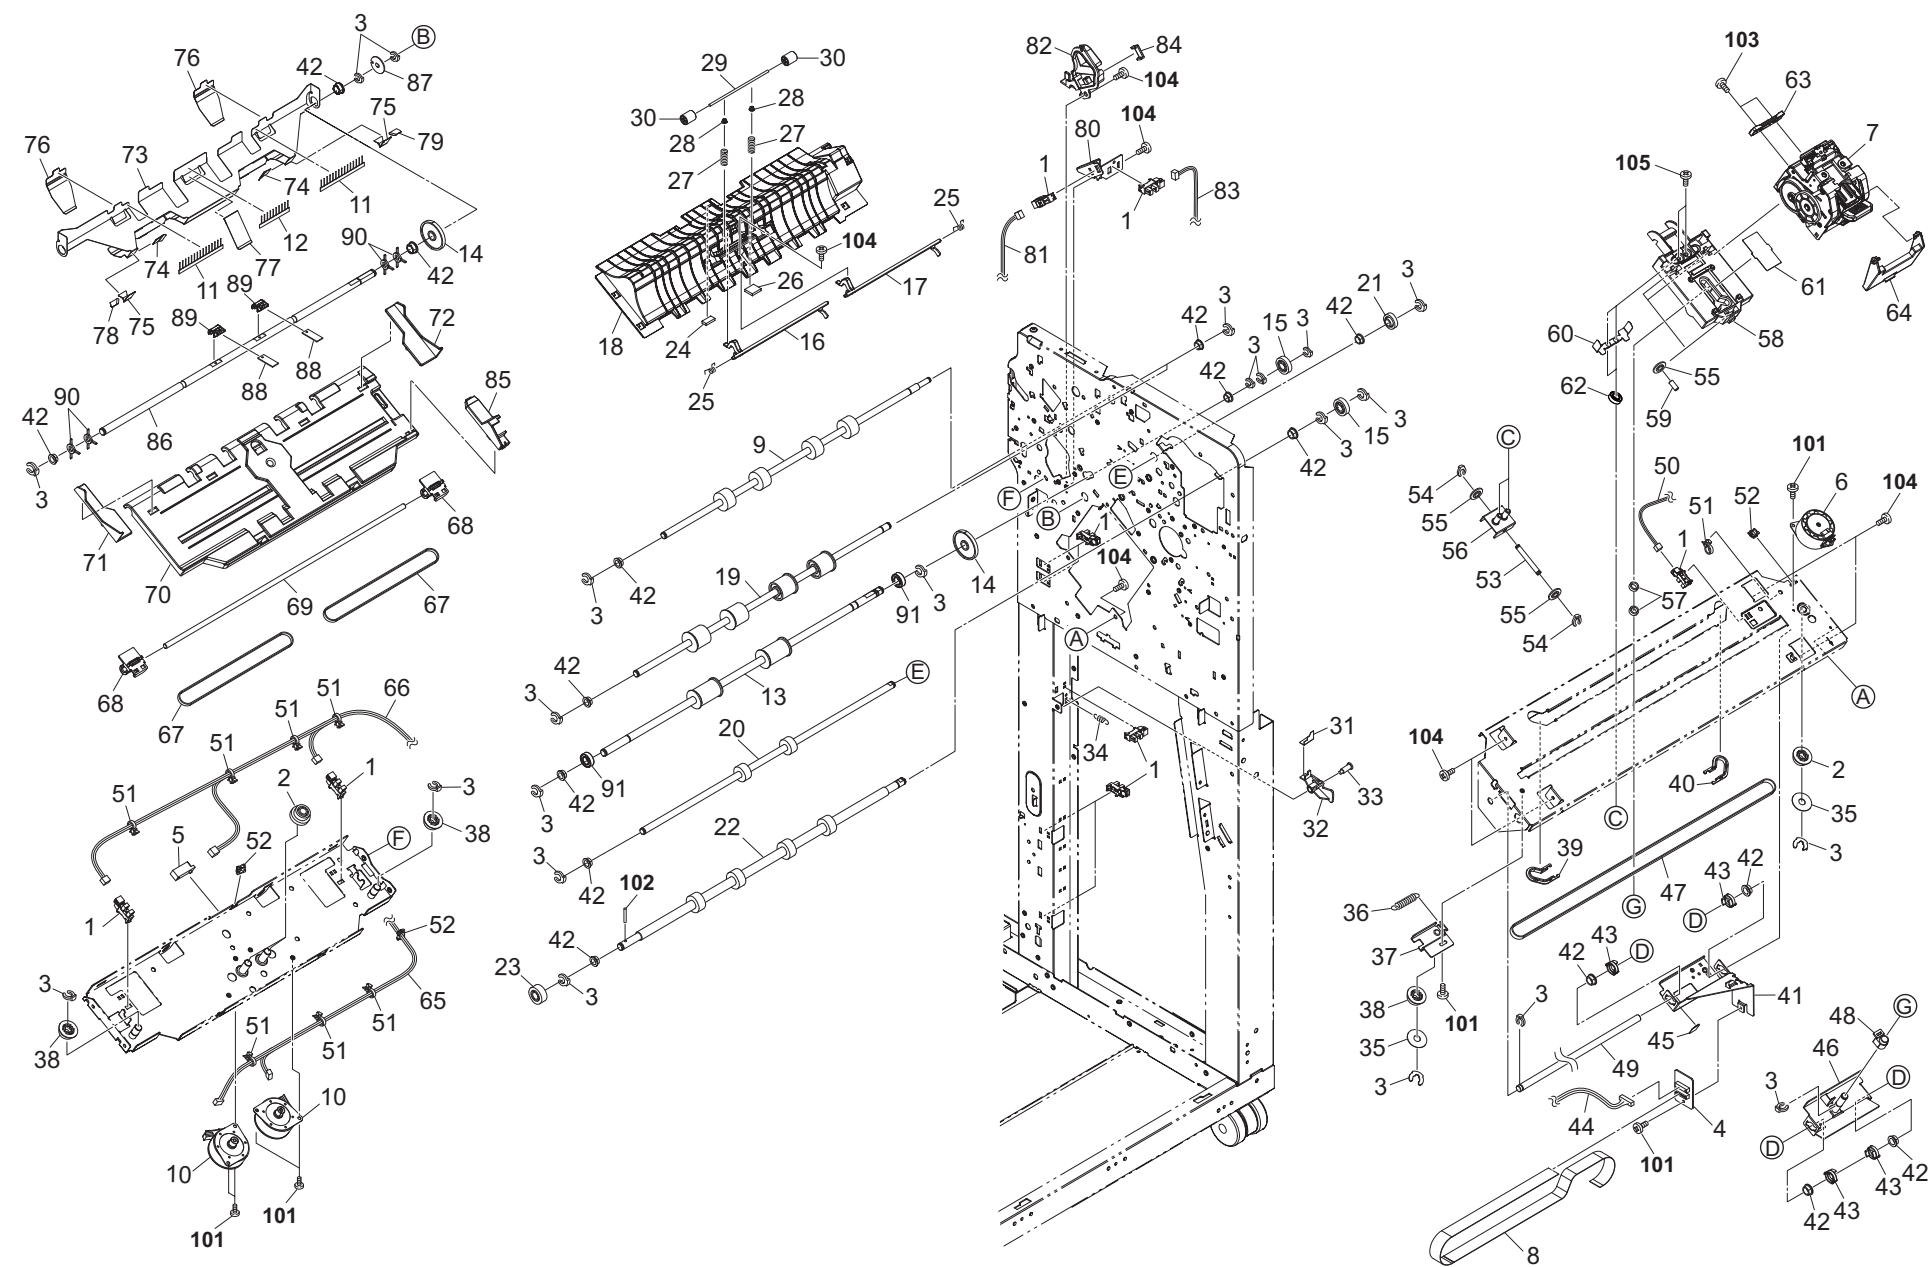


FIG. 3 Paper Feed Section 1

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303M894260	3M894260	PARTS SENSOR OPT SP		10
⊙	2	303NB28130	3NB28130	GEAR Z45-P30		3
	3	2BC06910	2BC06910	STOPPER 6		21
⊙	4	303NB94020	3NB94020	PARTS PWB STAPLER ASSY SP		1
⊙	5	303NW94060	3NW94060	PARTS SENSOR OPT. SP		1
⊙	6	303NB94040	3NB94040	PARTS MOTOR-PM MOVING SP		1
⊙	7	303NB94130	3NB94130	PARTS STAPLER EH600 SP		1
	8	303NB46110	3NB46110	WIRE FFC		1
⊙	9	303NB94090	3NB94090	PARTS ROLLER EXIT SP		1
⊙	10	302HN44100	2HN44100	MOTOR REVERSE		2
				STATIC-ELIMINATOR PAPER STOPPER		2
	11	303NB36580	3NB36580	STATIC-ELIMINATOR EJECT		1
	12	303NB36460	3NB36460	PARTS ROLLER MIDDLE SP		1
⊙	13	303NB94080	3NB94080	GEAR 41 PADDLE A		2
⊙	14	303NB36150	3NB36150	GEAR Z35R		2
⊙	15	303NB31010	3NB31010	ACTUATOR MIDDLE		1
	16	303NB24181	3NB24181	ACTUATOR DRUM		1
	17	303NB24190	3NB24190	GUIDE MIDDLE CONVEYING LOWER		1
⊙	18	303NB24050	3NB24050	PARTS ROLLER SUB EXIT SP		1
⊙	19	303NB94060	3NB94060	PARTS ROLLER SUB CONVEYING SP		1
⊙	20	303NB94070	3NB94070	GEAR Z35L		1
⊙	21	303NB31020	3NB31020	PARTS ROLLER FEED LOWER SP		1
⊙	22	303NB94100	3NB94100	GEAR 18		1
⊙	23	302KS08110	2KS08110	CUSHION,ORIGINAL COLLECTION		1
	24	63213320	63213320	SPRING-TORSION SWITCHBACK		2
	25	302K928190	2K928190	CUSHION HOLDER		1
	26	303H321120	3H321120	SPRING EXIT PULLEY		2
	27	302H728100	2H728100	CAP SPRING /B-11 ENCLOSURE A4		2
	28	2FM04150	5MVM163DN005	SHAFT FEED		1
	29	302K324460	2K324460	PULLEY SUB EJECT		2
	30	303B817020	3B817020	FILM SENSOR		1
	31	303NB37161	3NB37161	PLATE DETECTION		1
	32	303NB37171	3NB37171	PIN PAPER FEED		1
	33	303J902280	3J902280	SPRING LEVER EF		1
	34	302F902180	2F902180	SPACER 25		2
	35	303JY38240	3JY38240	SPRING, BLADE		1
	36	72418140	72418140	PLATE STAPLER UNIT TENSION		1
	37	303NB38100	3NB38100	PULLEY 30,DUPLEX		3
	38	3AP02040	3AP02040	RAIL STAPLER SHIFT FRONT		1
	39	303NB38071	3NB38071	RAIL STAPLER SHIFT REAR		1
	40	303NB38121	3NB38121	MOUNT PRINT STAPLER		1
	41	303NB38131	3NB38131	BUSH 8		16
	42	28107310	49028101	STOPPER BUSH		4
	43	303NB38150	3NB38150	WIRE STAPLER		1
	44	303NC46100	3NC46100	FILM DU GUIDE		1
	45	302KK24390	2KK24390	PLATE STAPLER SHIFT		1
	46	303NB38051	3NB38051	BELT STAPLER SHIFT		1
	47	303NB38030	3NB38030	STOPPER DRIVE BELT		1
	48	303NB38110	3NB38110	SHAFT STAPLER SHIFT		1
	49	303NB38040	3NB38040			1

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

3NB-2

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	50	303NC46160	3NC46160	WIRE STP HP SENSOR		1
	51	M21AH010	M21AH010	BAND,RSG-130-V0(KITAGAWA)		8
	52	M2104350	M2104350	EDGING,EDS-0607M(KITAGAWA)		3
	53	303NB38080	3NB38080	SHAFT STOPPER PULLEY		1
	54	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		2
	55	5MVM176DN001	3B706020	PULLEY RAIL CASS /40283V0034 A4		5
	56	303NB38060	3NB38060	STOPPER STAPLER MOUNT		1
	57	3B807230	3B807230	COLLAR,MIDDLE BELT		2
	58	303NB38021	3NB38021	MOUNT STAPLER		1
	59	303NB38090	3NB38090	SHAFT MOUNT PULLEY		3
	60	303NB38190	3NB38190	PLATE EARTH STAPLER		1
	61	303NB38160	3NB38160	FILM STAPLER		1
	62	7BE006124431H01	BE119720	BEARING MR126ZZ		2
	63	303NB38180	3NB38180	GUIDE STAPLER		1
	64	303NB38140	3NB38140	COVER STAPLER		1
	65	303NC46150	3NC46150	WIRE MID TRAY MOTOR		1
	66	303NC46140	3NC46140	WIRE MID TRAY SENSOR		1
	67	302FB09720	2FB09720	BELT FRONT DRIVE		2
	68	303NB36070	3NB36070	HOLDER CURSOR		2
	69	303NB36060	3NB36060	SHAFT CURSOR		1
	70	303NB36021	3NB36021	GUIDE MIDDLE TRAY		1
	71	303NB36031	3NB36031	CURSOR F MIDDLE TRAY		1
	72	303NB36041	3NB36041	CURSOR R MIDDLE TRAY		1
	73	303NB36082	3NB36082	GUIDE PAPER STOPPER		1
	74	303NB36420	3NB36420	FILM GUIDE STOPPER		2
	75	303NB36510	3NB36510	FILM GUIDE STOPPER B		2
	76	303NB36442	3NB36442	FILM GUIDE STOPPER S		2
	77	303NB36430	3NB36430	FILM GUIDE STOPPER C		1
	78	303NB36650	3NB36650	FILM GUIDE STOPPER E		1
	79	303NB36640	3NB36640	FILM GUIDE STOPPER D		1
	80	303NB36321	3NB36321	MOUNT PI UPPER GUIDE		1
	81	303NC46080	3NC46080	WIRE CI SENSOR		1
	82	303NB36050	3NB36050	DUCT UPPER GUIDE WIRE 1		1
	83	303NB46080	3NB46080	WIRE MTRAY SURF		1
	84	303LL02330	3LL02330	HOLDER WIRE D		1
	85	303NB36450	3NB36450	COVER MIDDLE TRAY WIRE		1
	86	303NB36141	3NB36141	SHAFT PADDLE A		1
	87	303NB36160	3NB36160	PLATE PULSE PADDLE A		1
	88	303NB36130	3NB36130	SHEET PADDLE A		2
	89	303NB36240	3NB36240	HOLDER PADDLE		2
	90	303NB36550	3NB36550	RUBBER FEED		4
	91	7BE008165431H01	BE119730	BEARING 688ZZ		2
	101	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	102	5MBP2012WXSP	E0020120	SPRING PIN/M2 X 12 S-BLK		
	103	7BB202306H	BB106940	+TP-FLAT T.T P SCREW 3X6		
	104	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
	105	7BB607410H	BB106870	+TP-CUP M SCREW 4X10 R		

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 4 Paper Feed Section 2

3NB-3

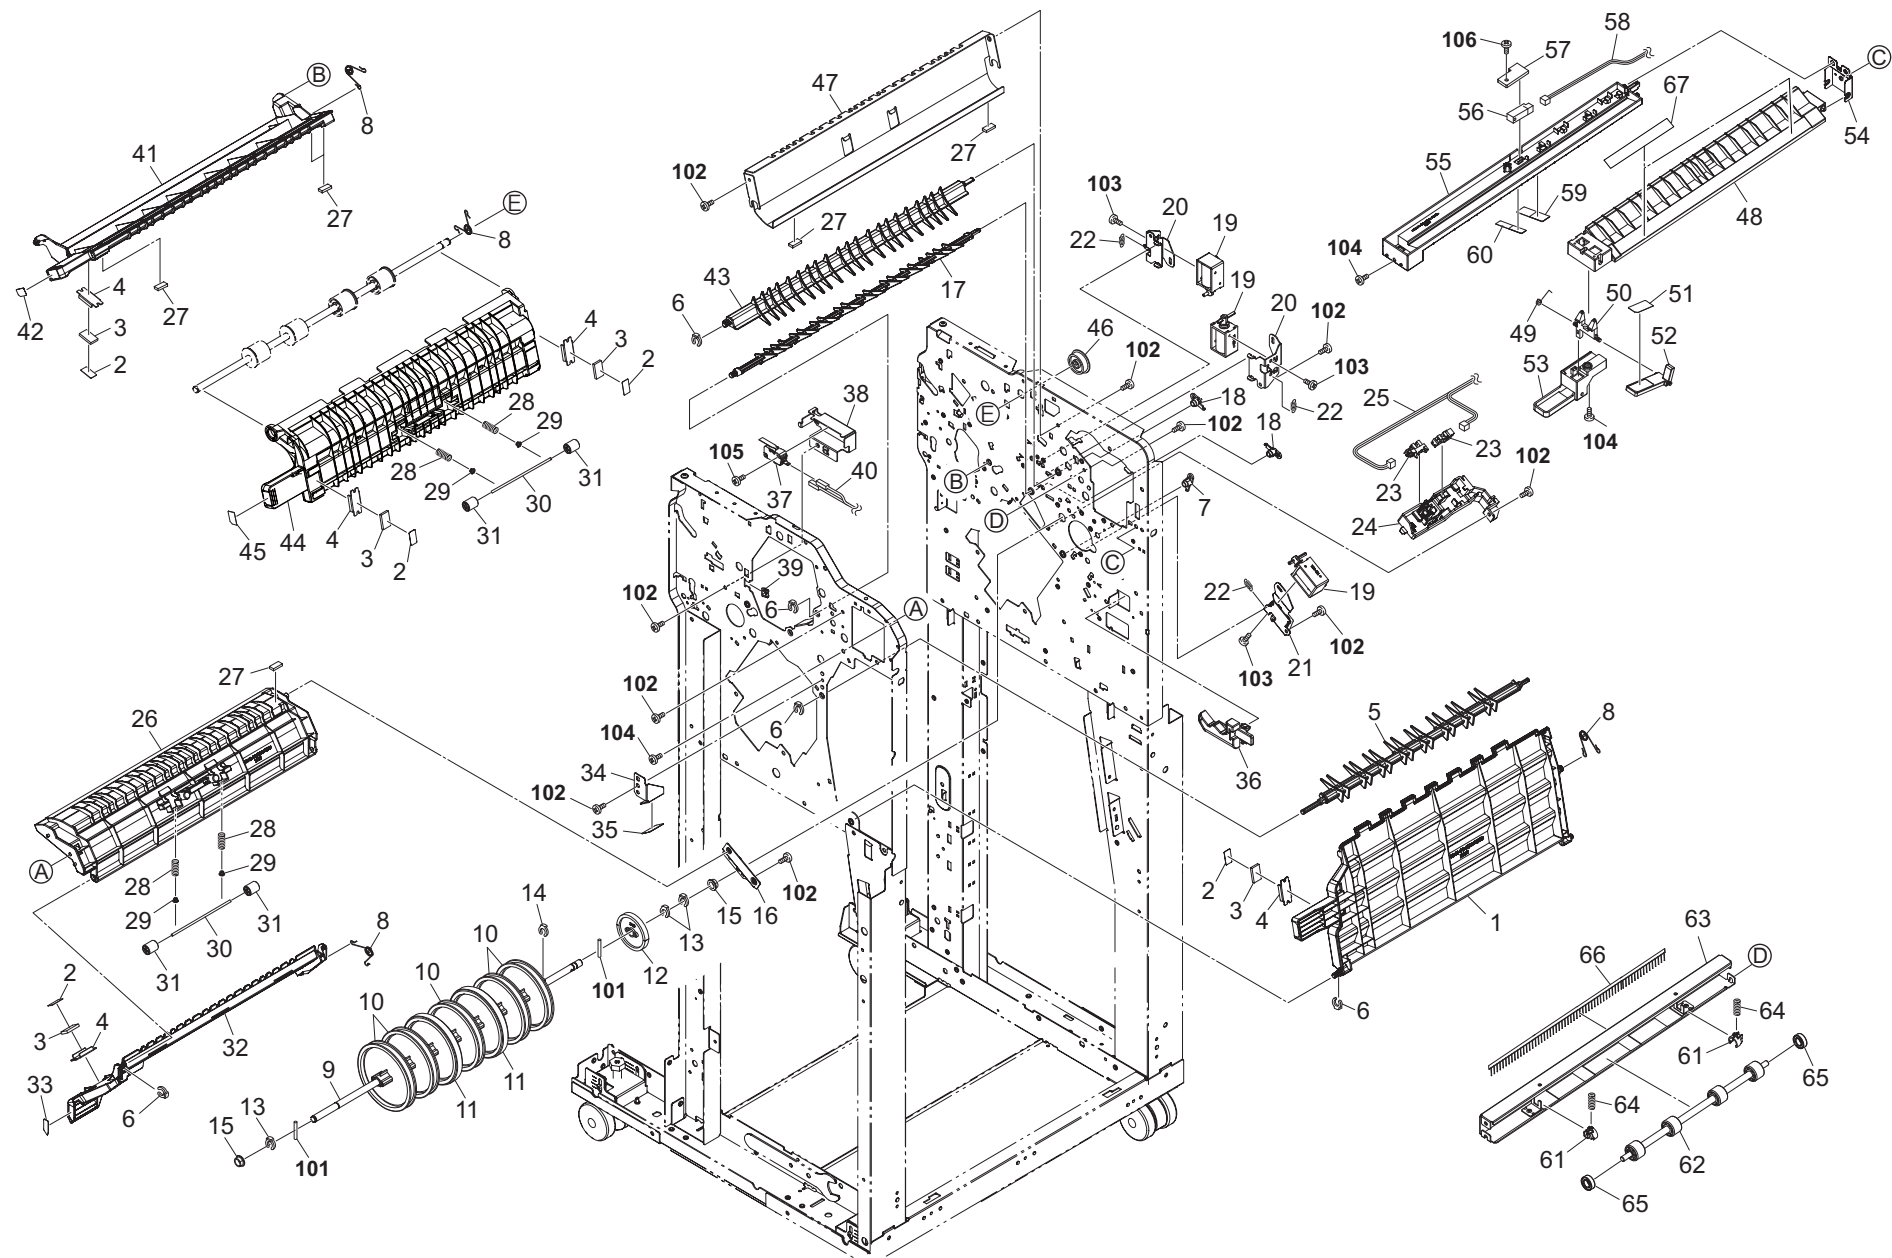


FIG. 4 Paper Feed Section 2

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303NB24080	3NB24080	GUIDE BOOKLET RIGHT		1	⊙	51	303NB07100	3NB07100	HOOK GUIDE FEED LOWER		1
	2	302GR04380	2GR04380	SEAL MAGNET		5		51	303NC34020	3NC34020	LABEL D1		1
	3	302GR04370	2GR04370	MAGNET CLIP DISH		5		52	303NB07110	3NB07110	LEVER GUIDE FEED LOWER		1
	4	303NB24210	3NB24210	HOLDER MAGNET		5		53	303NB07091	3NB07091	HANDLE GUIDE FEED LOWER		1
	5	303NB24120	3NB24120	GUIDE FEED SHIFT BOOKLET		1		54	303NB07080	3NB07080	MOUNT LOWER GUIDE FEED		1
	6	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		5		55	303NB07011	3NB07011	GUIDE FEED UPPER		1
	7	303NB24160	3NB24160	LEVER SOLENOID C		1		56	303NW94060	3NW94060	PARTS SENSOR OPT. SP		1
	8	303NB24220	3NB24220	SPRING GUIDE HOLD		4		57	303NB07150	3NB07150	LID SENSOR		1
	9	303NB24260	3NB24260	SHAFT DRUM		1		58	303NC46080	3NC46080	WIRE CI SENSOR		1
	10	303H316390	3H316390	GUIDE WHEEL DRUM		5		59	303NB07170	3NB07170	SHEET FEED IN A		1
	11	303H316370	3H316370	GUIDE DRUM ASS'Y		2		60	303NB07180	3NB07180	SHEET FEED IN B		1
	12	3H316050	3H316050	GEAR 46 DRUM DRIVE		1		61	303NB07160	3NB07160	HOLDER BEARING		2
	13	2BC06910	2BC06910	STOPPER 6		3		62	303NB94111	3NB94111	PARTS ROLLER FEED UPPER SP		1
	14	33973300	33973300	STOPPER 7,CARTRIDGE		1		63	303NB07071	3NB07071	GUIDE FEED ROLLER		1
	15	28107310	49028101	BUSH 8		2		64	302H724030	2H724030	SPRING REGIST F		2
	16	303NB24290	3NB24290	MOUNT GUIDE DRUM		1		65	7BE006124431H01	BE119720	BEARING MR126ZZ		2
	17	303NB24111	3NB24111	GUIDE FEED SHIFT DRUM		1		66	63212210	63212210	STATIC ELIMINATOR,EJECT		1
	18	303NB24140	3NB24140	LEVER SOLENOID AB		2		67	303NB07190	3NB07190	SHEET FEED IN C		2
	19	302K994370	2K994370	PARTS SOLENOID FEED SHIFT SP		3	⊙	101	7BP512514B0CH01	BP126560	PARALLEL PIN 2.5X14		
	20	303NB24130	3NB24130	MOUNT SOLENOID AB		2		102	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
	21	303NB24150	3NB24150	MOUNT SOLENOID C		1		103	7BB007303H	BB105750	+TP-CUP M SCREW 3X3		
	22	302FZ08190	2FZ08190	SPRING HOLDER MPT		3		104	7BB200410H	BB105700	+BIND T.T P SCREW 4X10		
	23	303M894260	3M894260	PARTS SENSOR OPT SP		2		105	7BB700316H	BB106910	+BIND T.T S SCREW 3X16 SR		
	24	303NB24200	3NB24200	MOUNT PI ACTUATOR		1		106	7BB282308H	BB111240	+TP-FLAT T.T P SCREW 3X8(BLACK)		
	25	303NB46100	3NB46100	WIRE ME SENSOR		1							
	26	303NB24060	3NB24060	GUIDE DRUM UPPER		1							
	27	63213320	63213320	CUSHION,ORIGINAL COLLECTION		6							
	28	302H728100	2H728100	SPRING EXIT PULLEY		4							
	29	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		4							
	30	302K324460	2K324460	SHAFT FEED		2							
	31	303B817020	3B817020	PULLEY SUB EJECT		4							
	32	303NB24071	3NB24071	GUIDE DRUM LOWER		1							
	33	303NB34170	3NB34170	LABEL D6 NEW		1							
	34	303NB24280	3NB24280	MOUNT MAGNET		1							
	35	303NB24330	3NB24330	FILM MAGNET		1							
	36	303NB24320	3NB24320	STOPPER GUIDE		1							
	37	2FB27160	2FB27160	INTER LOCK SWITCH		1							
	38	303NB36330	3NB36330	MOUNT INTERLOCK UPPER GUIDE		1							
	39	M2104350	M2104350	EDGING,EDS-0607M(KITAGAWA)		1							
	40	303NB46070	3NB46070	WIRE FRONT		1							
	41	303NB24040	3NB24040	GUIDE MIDDLE CONVEYING UPPER		1							
	42	303NB34040	3NB34040	LABEL D4		1							
	43	303NB24100	3NB24100	GUIDE FEED SHIFT SUB		1							
	44	303NB24031	3NB24031	GUIDE SUB LEFT OPEN		1							
	45	303NB34020	3NB34020	LABEL D2		1							
	46	303JY31150	3JY31150	PULLEY 42		1							
	47	303NB24010	3NB24010	GUIDE SUB RIGHT		1							
	48	303NB07021	3NB07021	GUIDE FEED LOWER		1							
	49	303NB07120	3NB07120	SPRING-TORSION GUIDE HOOK		1							

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

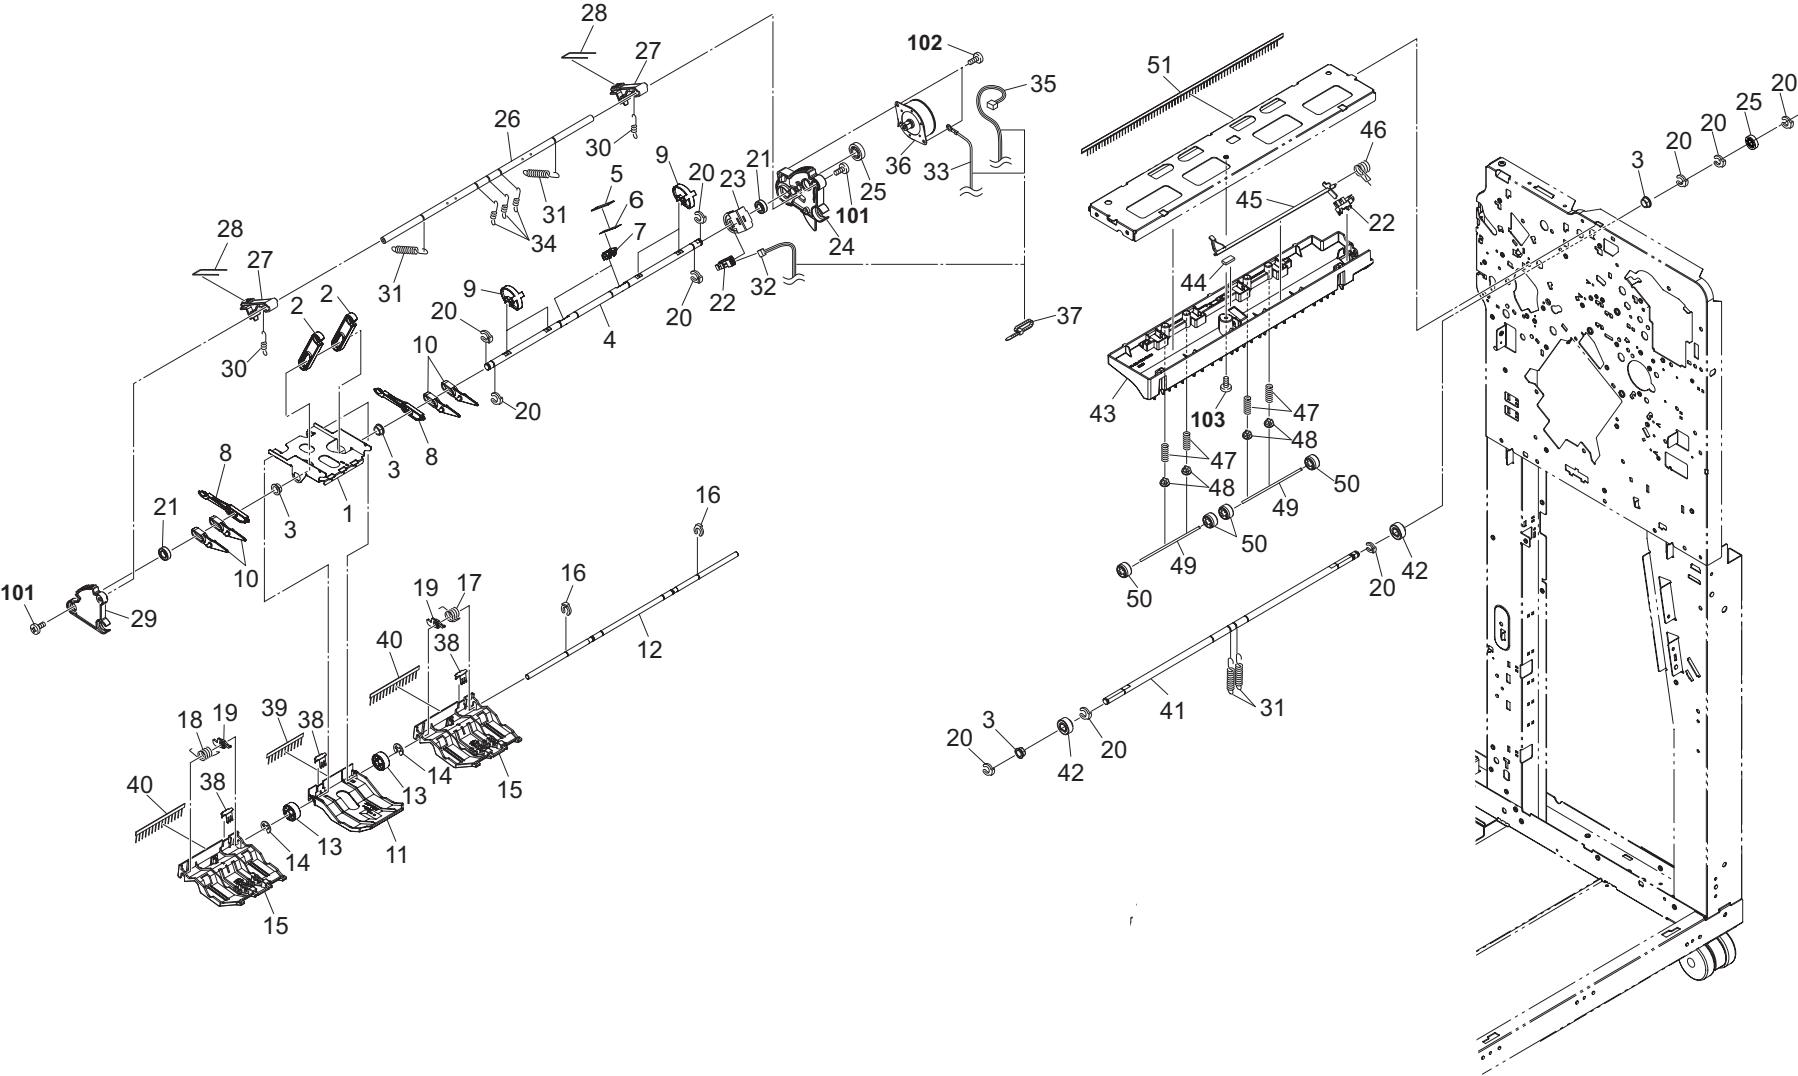


FIG. 5 Paper Feed Section 3

3NB-2

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	1	303NB36190	3NB36190	MOUNT EXIT PULLEY		1		50	303NB24310	3NB24310	PULLEY SUB EJECT		4
	2	303NB36370	3NB36370	LEVER UPPER EXIT		2		51	303NB24300	3NB24300	STATIC-ELIMINATOR SUB EJECT		1
	3	28107310	49028101	BUSH 8		4							
	4	303NB36271	3NB36271	SHAFT PADDLE B		1							
	5	303NB36260	3NB36260	SHEET PADDLE B		2							
	6	303NB36480	3NB36480	FILM PADDLE B		2							
	7	303NB36240	3NB36240	HOLDER PADDLE		2							
	8	303NB36380	3NB36380	BRAKE EXIT		2		101	7BB607410H	BB106870	+TP-CUP M SCREW 4X10 R		
	9	303NB36600	3NB36600	CAM PADDLE		4		102	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	10	303NB36591	3NB36591	LEVER PAPER PRESS		4		103	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
	11	303NB36350	3NB36350	GUIDE CENTER		1							
	12	303NB36230	3NB36230	SHAFT PAPER PRESS		1							
	13	303NB36200	3NB36200	PULLEY EXIT		2							
	14	302FB09830	2FB09830	CUT WASHER 4		2							
	15	303NB36224	3NB36224	GUIDE PAPER PRESS		2							
	16	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		2							
	17	303NB36540	3NB36540	SPRING EXIT R		1							
	18	303NB36530	3NB36530	SPRING EXIT F		1							
	19	303NB36521	3NB36521	GUIDE PAPER EXIT		2							
	20	2BC06910	2BC06910	STOPPER 6		10							
	21	7BE008165431H01	BE119730	BEARING 688ZZ		2							
⊙	22	303M894260	3M894260	PARTS SENSOR OPT SP		2							
	23	303NB36250	3NB36250	MOUNT PI PADDLE B		1							
	24	303NB36180	3NB36180	FRAME EXIT REAR		1							
⊙	25	303NB31010	3NB31010	GEAR Z35R		2							
	26	303NB36210	3NB36210	SHAFT UPPER GUIDE		1							
	27	303NB36390	3NB36390	LEVER BRAKE EXIT		2							
	28	303NB36410	3NB36410	SPRING LEVER BRAKE		2							
	29	303NB36170	3NB36170	FRAME EXIT FRONT		1							
	30	303NB36290	3NB36290	SPRING EXIT PULLEY		2							
	31	303NB36300	3NB36300	SPRING GUIDE PAPER PRESS		4							
	32	303NC46120	3NC46120	WIRE PADDLE SENSOR		1							
	33	303NC46170	3NC46170	WIRE MOTOR EARTH		1							
	34	303NB36630	3NB36630	SPRING EXIT PRESS		3							
	35	303NC46110	3NC46110	WIRE NCK MOTOR		1							
⊙	36	302HN44100	2HN44100	MOTOR REVERSE		1							
	37	7YZM420003++H01	YZ052580	ACCESS.BAND		1							
	38	303NB36471	3NB36471	PLATE EARTH EJECT		3							
	39	303NB36500	3NB36500	STATIC-ELIMINATOR EJECT CENTER		1							
	40	303NB36490	3NB36490	STATIC-ELIMINATOR EJECT SIDE		2							
	41	303NB36310	3NB36310	SHAFT UPPER EXIT DRIVE		1							
⊙	42	2BL21430	2BL21430	GEAR EXIT Z20		2							
	43	303NB24020	3NB24020	GUIDE SUB EJECT		1							
	44	63213320	63213320	CUSHION,ORIGINAL COLLECTION		1							
	45	303NB24170	3NB24170	ACTUATOR SUB		1							
	46	302K928190	2K928190	SPRING-TORSION SWITCHBACK		1							
	47	302H728100	2H728100	SPRING EXIT PULLEY		4							
	48	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		4							
	49	302K324460	2K324460	SHAFT FEED		2							

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

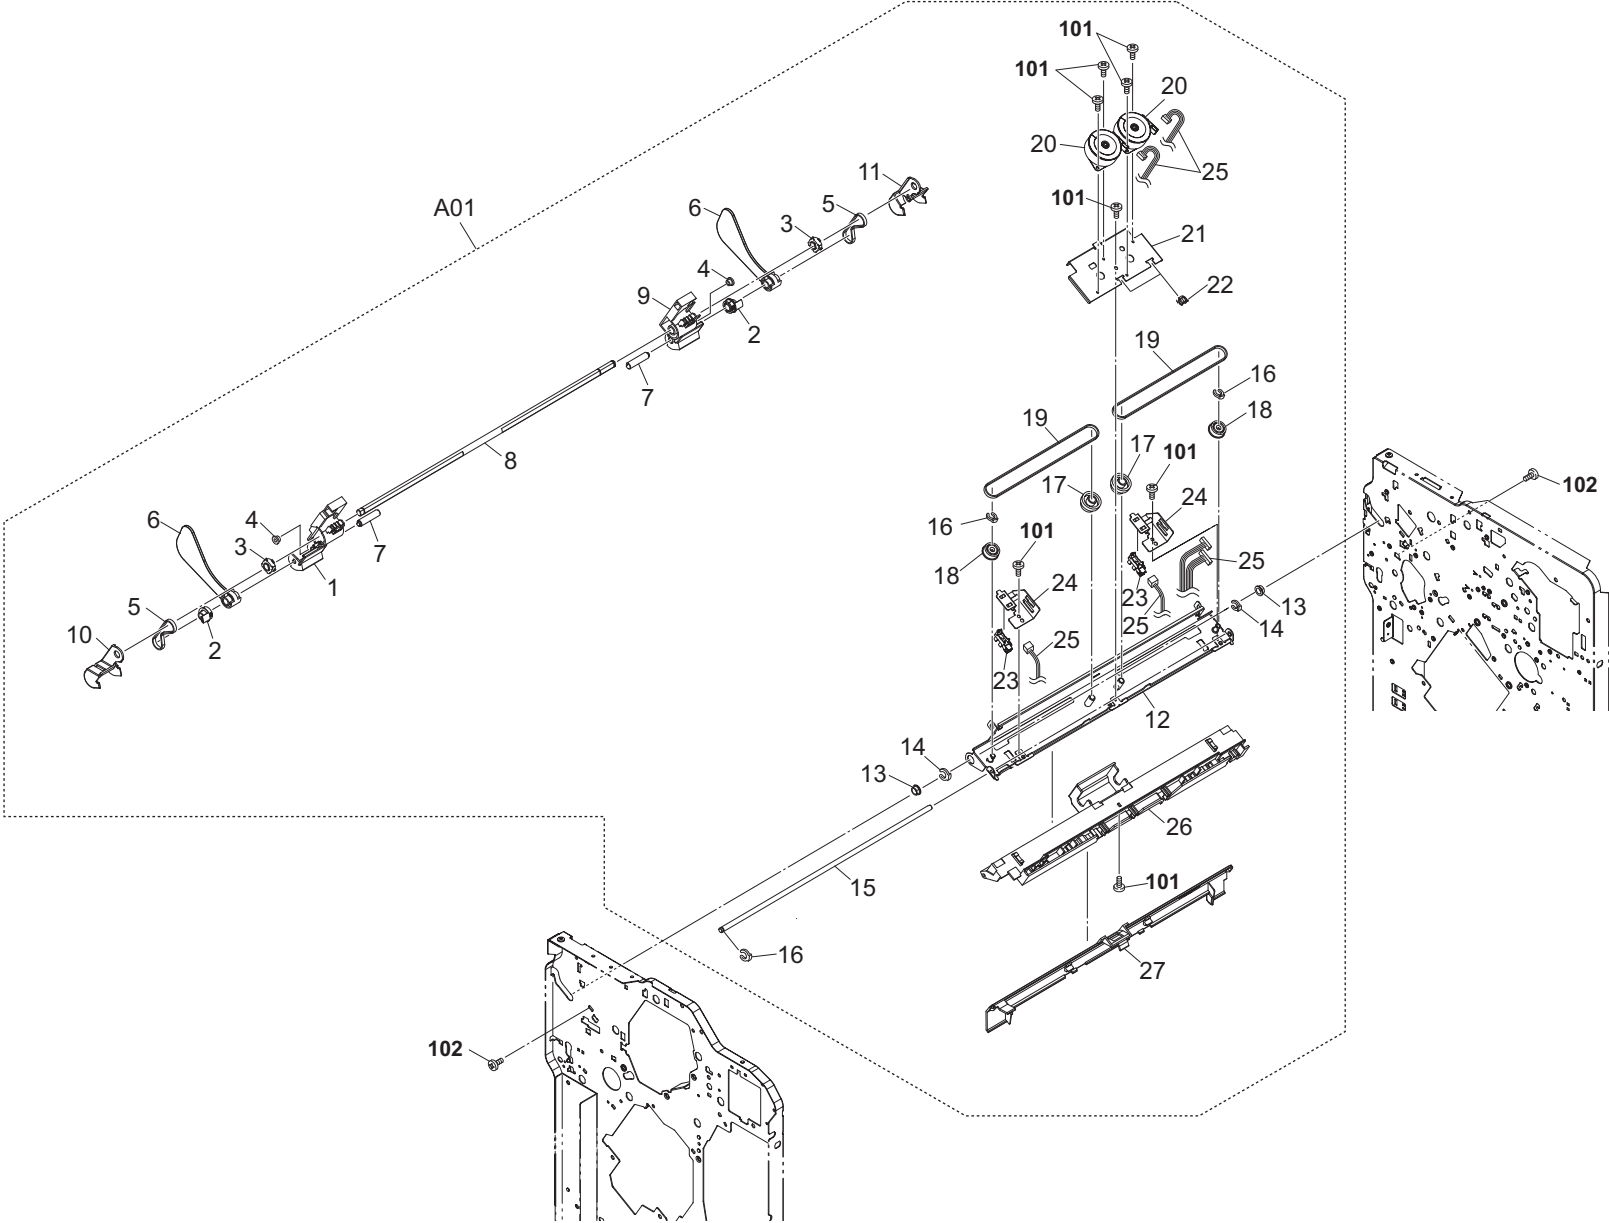


FIG. 6 Main Exit Section

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	A01	303NB94121	3NB94121	PARTS MAIN EXIT SP		1
	1	*303NB28020	3NB28020	SLIDER F MAIN EXIT		1
	2	*303NB28060	3NB28060	PULLEY 26 TURN		2
	3	*302H029110	2H029110	PULLEY 26 DU		2
	4	*2C902520	2C902520	COLLAR LEVER CONT.		2
	5	*303NB28070	3NB28070	BELT 138		2
	6	*303NB28010	3NB28010	CURSOR MAIN EXIT		2
	7	*303NB28080	3NB28080	SHAFT CURSOR		2
	8	*303NB28090	3NB28090	SHAFT DRIVE		1
	9	*303NB28030	3NB28030	SLIDER R MAIN EXIT		1
	10	*303NB28040	3NB28040	CAP F MAIN EXIT		1
	11	*303NB28050	3NB28050	CAP R MAIN EXIT		1
	12	*303NB28120	3NB28120	STAY MAIN EXIT		1
	13	*28107310	49028101	BUSH 8		2
	14	*2BC06910	2BC06910	STOPPER 6		2
	15	*303NB28100	3NB28100	SHAFT GUIDE		1
	16	*5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		4
⊙	17	*303NB28130	3NB28130	GEAR Z45-P30		2
	18	*302FB09610	2FB09610	PULLEY 30 DU		2
	19	*303NB28110	3NB28110	BELT 396		2
⊙	20	*302HN44100	2HN44100	MOTOR REVERSE		2
	21	*303NB28140	3NB28140	MOUNT SLIDE DRIVE		1
	22	*M2104350	M2104350	EDGING.EDS-0607M(KITAGAWA)		2
⊙	23	*303M894260	3M894260	PARTS SENSOR OPT SP		2
	24	*303NB28150	3NB28150	MOUNT PI SLIDE		2
	25	*303NB46140	3NB46140	WIRE SHIFT		1
	26	*303NB28160	3NB28160	GUIDE RETAINING		1
	27	*303NB28222	3NB28222	GUIDE TURN		1

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	101	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	102	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 7 Drive Section

3NB-2

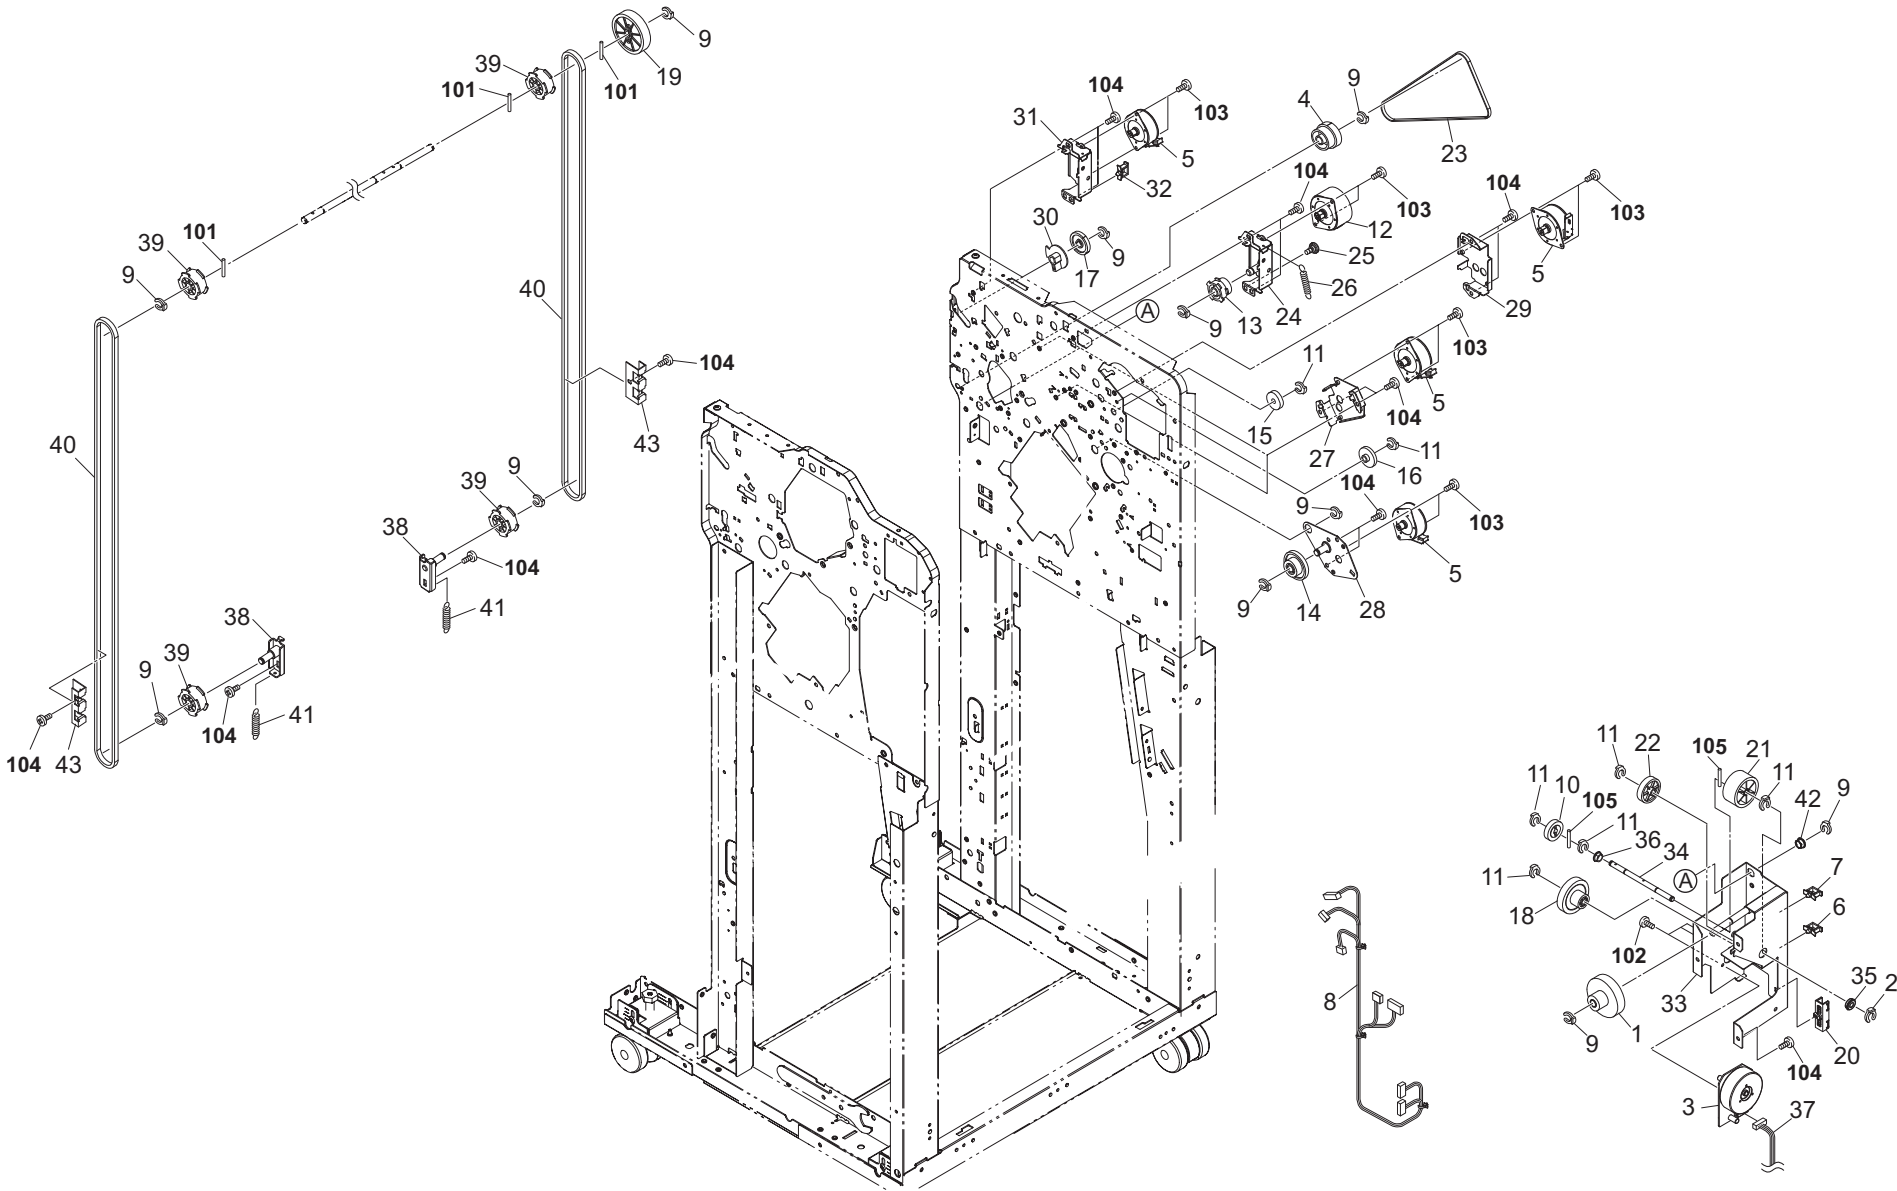


FIG. 7 Drive Section

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	3AK20080	3AK20080	GEAR 18/50		1		101	E5125200	E5125200	PARALLEL PIN H7A 2.5X20 SUS		
	2	302FZ25740	2FZ25740	STOPPER 4		1		102	7BB007304H	BB105810	+TP-CUP M SCREW 3X4		
⊙	3	303NB94051	3NB94051	PARTS MOTOR-BL BRAKE SP		1		103	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
⊙	4	303NB31100	3NB31100	GEAR Z35L-P42		1		104	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
⊙	5	302HN44100	2HN44100	MOTOR REVERSE		5		105	5MBP2012WPLD	E5120120	PARALLEL PIN/M2 X 12 SUS-DP		
	6	7YZM610003+++H01	YZ010250	ACCESS SADDLE		1							
	7	7YZM610004+++H01	YZ012210	ACCESS SADDLE		1							
	8	303NB46050	3NB46050	WIRE MOTOR 2		1							
	9	2BC06910	2BC06910	STOPPER 6		11							
⊙	10	302H731280	2H731280	GEAR Z29R MIDDLE		1							
	11	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		7							
⊙	12	303NB94040	3NB94040	PARTS MOTOR-PM MOVING SP		1							
⊙	13	303NB31070	3NB31070	GEAR Z35R-P35		1							
⊙	14	303NB31050	3NB31050	GEAR Z70R-Z20		1							
⊙	15	303K531040	3K531040	GEAR 42		1							
⊙	16	303K531120	3K531120	GEAR 48 LOOP ROLLER		1							
⊙	17	303NB28180	3NB28180	GEAR Z55R		1							
⊙	18	303NB37030	3NB37030	GEAR Z34L Z52L		1							
⊙	19	3AK20090	3AK20090	GEAR 51		1							
	20	302LF39050	2LF39050	GUIDE WIRE FRONT PWB		1							
⊙	21	303NB37040	3NB37040	GEAR WORM		1							
⊙	22	303NB37050	3NB37050	GEAR Z60R		1							
	23	303NB31090	3NB31090	BELT 504		1							
	24	303NB31080	3NB31080	MOUNT EJECT DRIVE		1							
	25	3CZ02230	3CZ02230	PIN,HOOK FULCRUM		1							
	26	27302160	48527301	SPRING,RELEASE LEVER		1							
	27	303NB31120	3NB31120	MOUNT CONVEYING		2							
	28	303NB31060	3NB31060	MOUNT DRUM DRIVE		1							
	29	303NB31040	3NB31040	MOUNT FEED IN DRIVE		1							
	30	303NB28170	3NB28170	PLATE TURN PULSE		1							
	31	303NB28190	3NB28190	MOUNT TURN DRIVE		1							
	32	7YZM610007+++H01	YZ023340	ACCESS.SADDLE		1							
	33	303NB37011	3NB37011	MOUNT DRIVE		1							
	34	303NB37020	3NB37020	SHAFT WORM		1							
	35	74808080	74808080	BEARING,686ZZNR		1							
	36	302K324450	2K324450	BUSH 6		1							
	37	303NB46090	3NB46090	WIRE MTRAY MOTOR		1							
	38	303NB37060	3NB37060	PLATE TENSION		2							
	39	303NB37200	3NB37200	PULLEY 20S5M		4							
	40	303NB37080	3NB37080	BELT LIFT		2							
	41	303JY28200	3JY28200	SPRING MAIN TRAY		2							
	42	28107310	49028101	BUSH 8		1							
	43	3AK20050	3AK20050	HOLDER,TIMING BELT		2							

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 8 Electrical Components

3NB-3

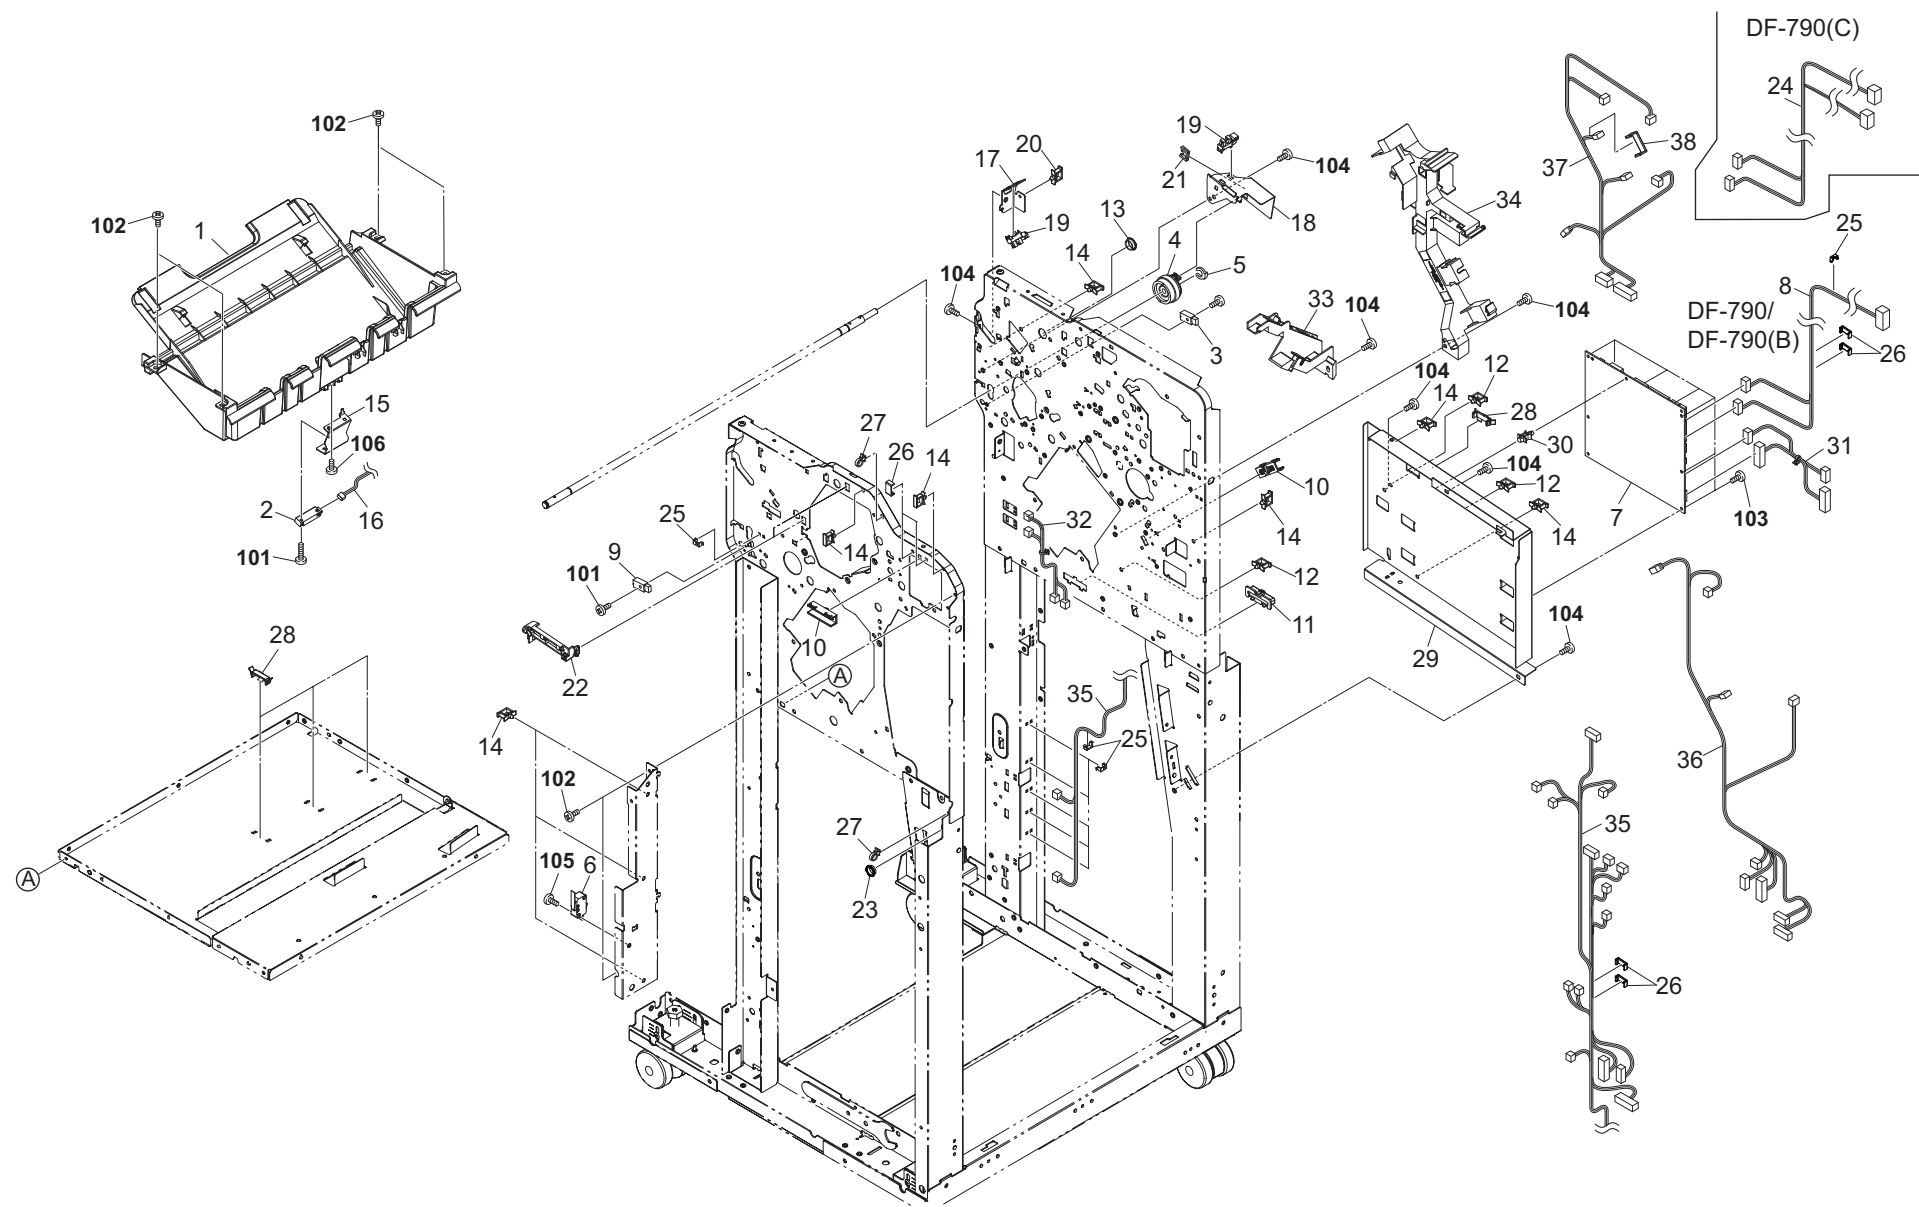


FIG. 8 Electrical Components

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303NB04100	3NB04100	COVER TRAY B EJECT		1		101	7BB700312H	BB106820	+BIND T.T S SCREW 3X12 SR		
⊙	2	303NW94050	3NW94050	PARTS SENSOR OPT. SP		1		102	7BB782410H	BB111310	+TP-FLAT T.T S SCREW 4X10 SR(BLACK)		
⊙	3	303NB94140	3NB94140	PARTS SENSOR OPT. SP		1							
⊙	4	302KV44041	2KV44041	CLUTCH 50 Z35R		1		103	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	5	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		1		104	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
⊙	6	2FB27160	2FB27160	INTER LOCK SWITCH		1		105	7BB600314H	BB112160	+BIND M SCREW 3X14 R		
⊙	7	303NB94012	3NB94012	PARTS PWB MAIN ASSY SP		1		106	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	8	303NB46010	3NB46010	WIRE INTERFACE	DF-790/ DF-790(B)	1							
⊙	9	303H327460	3H327460	SENSOR A,SEPARATION		1							
	10	302LF39050	2LF39050	GUIDE WIRE FRONT PWB		2							
	11	303JY38601	3JY38601	EDGING FFC		1							
	12	7YZM610004++H01	YZ012210	ACCESS SADDLE		3							
	13	7YZM110001++H01	YZ009420	ACCESS.BUSHING		1							
	14	7YZM610001++H01	YZ010230	ACCESS SADDLE		9							
	15	303NB24250	3NB24250	MOUNT LIMIT SENSOR SUB		1							
	16	303NB46170	3NB46170	WIRE B-TRAY FULL		1							
	17	303NB28210	3NB28210	MOUNT PI HOME		1							
	18	303NB28200	3NB28200	MOUNT PI SET		1							
⊙	19	303M894260	3M894260	PARTS SENSOR OPT SP		2							
	20	7YZM610007++H01	YZ023340	ACCESS.SADDLE		1							
	21	M2104350	M2104350	EDGING,EDS-0607M(KITAGAWA)		1							
	22	303NB39040	3NB39040	GUIDE WIRE FRONT		2							
	23	7YZM110003++H01	YZ034780	ACCESS.BUSHING		1							
	24	303NB46200	3NB46200	WIRE INTERFACE C	DF-790(C)	1							
	25	302K931080	2K931080	WIRE STOPPER		8							
	26	303LL02330	3LL02330	HOLDER WIRE D		6							
	27	M21AH010	M21AH010	BAND,RSG-130-V0(KITAGAWA)		2							
	28	7YZM390015++H01	YZ124850	ACCESS.CLAMP		4							
	29	303NB39010	3NB39010	MOUNT PWB		1							
	30	7YZM510007++H01	YZ042780	ACCESS.SPACER		1							
	31	303NB46060	3NB46060	WIRE BOOKLET		1							
	32	303NB46120	3NB46120	WIRE MTRAY HP		1							
	33	303NB39021	3NB39021	GUIDE WIRE REAR LEFT		1							
	34	303NB39030	3NB39030	GUIDE WIRE REAR RIGHT		1							
	35	303NB46030	3NB46030	WIRE SENSOR 2		1							
	36	303NB46020	3NB46020	WIRE SENSOR 1		1							
	37	303NB46040	3NB46040	WIRE MOTOR 1		1							
	38	303LL02180	3LL02180	HOLDER WIRE A		1							

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

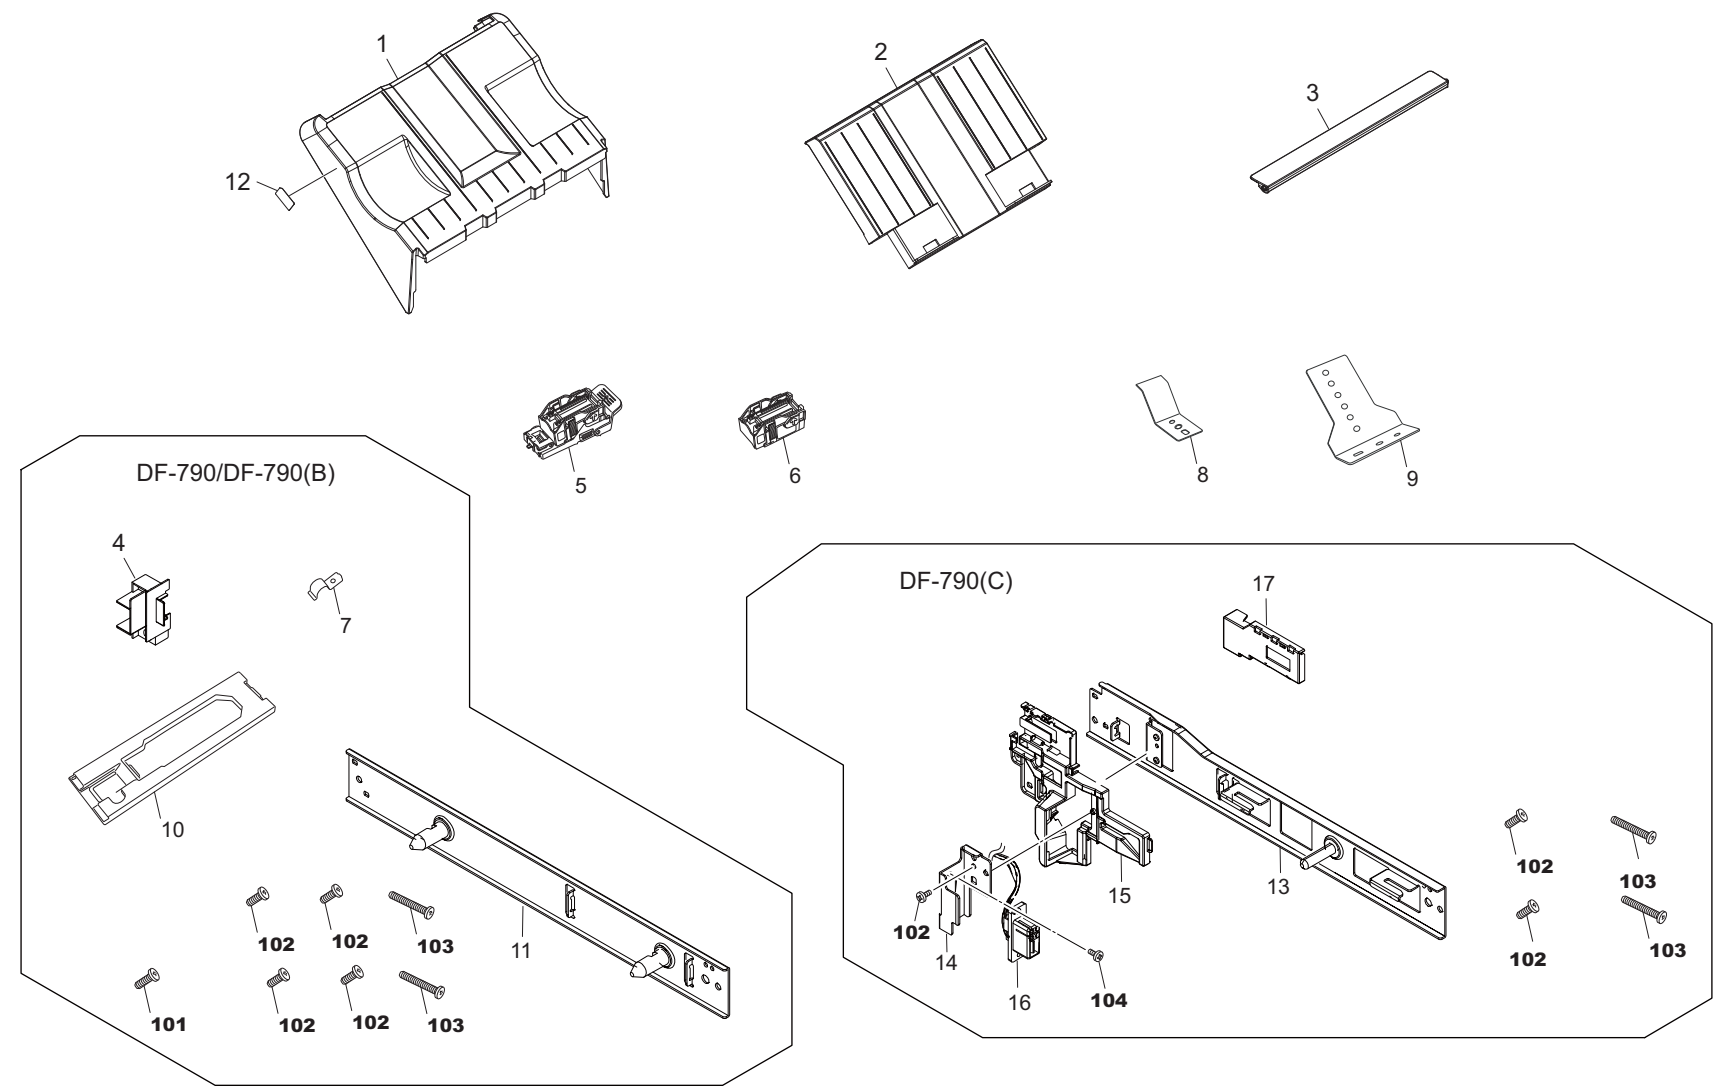


FIG. 9 Accessories

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303NB37140	3NB37140	TRAY MAIN UP		1		101	7BB782410H	BB111310	+TP-FLAT T.T S SCREW 4X10 SR(BLACK)		
	2	303NB37150	3NB37150	TRAY MAIN LOW		1		102	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
	3	303NB04190	3NB04190	COVER JUNCTION TRAY C		1		103	7BB780420H	BB116060	+BIND T.T S SCREW 4X20 SR(BLACK)		
	4	303NB04272	3NB04272	COVER INTERFACE	DF-790/ DF-790(B)	1		104	7BB700412H	BB106830	+BIND T.T S SCREW 4X12 SR		
	5	303NB38200	3NB38200	CARTRIDGE EH600		1							
	6	1903NB0UN0	093NB0UN	SH-12/STAPLE HOLDER	OPTION	1							
	7	303NB02130	3NB02130	SPRING-PLATE JUNCTION	DF-790/ DF-790(B)	1							
	8	303JY02400	3JY02400	PLATE EARTH RAIL		1							
	9	303NB02120	3NB02120	PLATE HOLDER EARTH		1							
	10	303NB02270	3NB02270	COVER PLATE	DF-790/ DF-790(B)	1							
	11	303NB02261	3NB02261	PLATE JUNCTION	DF-790/ DF-790(B)	1							
	12	303NB34060	3NB34060	LABEL A		1							
	13	303NB02370	3NB02370	PLATE JUNCTION D	DF-790(C)	1							
	14	303NB02381	3NB02381	MOUNT DRAWER	DF-790(C)	1							
	15	303NB02390	3NB02390	SLIDER DRAWER	DF-790(C)	1							
	16	303NB46180	3NB46180	WIRE INTERFACE A	DF-790(C)	1							
	17	303NB02420	3NB02420	COVER INTERFACE	DF-790(C)	1							

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

INDEX

3NB-3

	Part.No.	Alternative.	Description	Fig.No.
	1903NB0UN0	093NB0UN	SH-12/STAPLE HOLDER	9
	27302160	48527301	SPRING,RELEASE LEVER	7
	28107310	49028101	BUSH 8	2,3,4,5,6,7
	2BC06910	2BC06910	STOPPER 6	1,2,3,4,5,6,7
⊙	2BL21430	2BL21430	GEAR EXIT Z20	5
	2C902520	2C902520	COLLAR LEVER CONT.	6
	2FB16280	2FB16280	PIN DRUM LIFT	2
⊙	2FB27160	2FB27160	INTER LOCK SWITCH	4,8
	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4	3,4,5
	33973300	33973300	STOPPER 7,CARTRIDGE	4
	302A002171	2A002171	CASTER UA	2
	302BL04681	2BL04681	STRAP COVER	1
	302F902180	2F902180	SPRING LEVER EF	3
	302FB09610	2FB09610	PULLEY 30 DU	6
	302FB09720	2FB09720	BELT FRONT DRIVE	3
	302FB09830	2FB09830	CUT WASHER 4	5
	302FZ08190	2FZ08190	SPRING HOLDER MPT	4
	302FZ25740	2FZ25740	STOPPER 4	7
	302GR04370	2GR04370	MAGNET CLIP DISH	4
	302GR04380	2GR04380	SEAL MAGNET	4
	302GR25241	2GR25241	PIN GUIDE CHUTE	2
	302H004660	2H004660	MAGNET CATCH	1
	302H029110	2H029110	PULLEY 26 DU	6
	302H715300	2H715300	FILM MAG COVER C	1
	302H724030	2H724030	SPRING REGIST F	4
	302H728100	2H728100	SPRING EXIT PULLEY	3,4,5
⊙	302H731280	2H731280	GEAR Z29R MIDDLE	7
	302HN02930	2HN02930	SHEET HOUSING LEFT	1
⊙	302HN44100	2HN44100	MOTOR REVERSE	3,5,6,7
	302K324450	2K324450	BUSH 6	7
	302K324460	2K324460	SHAFT FEED	3,4,5
	302K928190	2K928190	SPRING-TORSION SWITCHBACK	3,5
	302K931080	2K931080	WIRE STOPPER	8
⊙	302K994370	2K994370	PARTS SOLENOID FEED SHIFT SP	4
	302KK24390	2KK24390	FILM DU GUIDE	3
	302KP29200	2KP29200	FILM SIDE REGIST	2
⊙	302KS08110	2KS08110	GEAR 18	3
⊙	302KV44041	2KV44041	CLUTCH 50 Z35R	8
	302LF39050	2LF39050	GUIDE WIRE FRONT PWB	7,8
	302LW04260	2LW04260	SPACER USB	1
	303B817020	3B817020	PULLEY SUB EJECT	3,4
	303H316370	3H316370	GUIDE DRUM ASS'Y	4
	303H316390	3H316390	GUIDE WHEEL DRUM	4
	303H321120	3H321120	CUSHION HOLDER	2,3
⊙	303H327460	3H327460	SENSOR A,SEPARATION	8
	303J902280	3J902280	PIN PAPER FEED	3
	303JY02400	3JY02400	PLATE EARTH RAIL	9
	303JY24AD0	3JY24AD0	CUSHION B	2
	303JY28200	3JY28200	SPRING MAIN TRAY	7
	303JY31150	3JY31150	PULLEY 42	4

	Part.No.	Alternative.	Description	Fig.No.
	303JY38240	3JY38240	SPACER 25	3
	303JY38601	3JY38601	EDGING FFC	8
⊙	303K531040	3K531040	GEAR 42	7
⊙	303K531120	3K531120	GEAR 48 LOOP ROLLER	7
	303LL02180	3LL02180	HOLDER WIRE A	8
	303LL02330	3LL02330	HOLDER WIRE D	3,8
	303LT03130	3LT03130	SPANNER	2
	303LT03140	3LT03140	BOLT M10L40	2
⊙	303M894260	3M894260	PARTS SENSOR OPT SP	3,4,5,6,8
	303NB02120	3NB02120	PLATE HOLDER EARTH	9
	303NB02130	3NB02130	SPRING-PLATE JUNCTION	2,9
	303NB02171	3NB02171	PARTITION FINISHER	2
	303NB02180	3NB02180	STAY PARTITION	2
	303NB02190	3NB02190	FILM STAY RIGHT	2
	303NB02200	3NB02200	FILM PARTITION	2
	303NB02210	3NB02210	PLATE CASTER	2
	303NB02220	3NB02220	PLATE HOLDER CASTER	2
	303NB02230	3NB02230	MOUNT MAIL FRONT	2
	303NB02240	3NB02240	MOUNT MAIL REAR	2
	303NB02250	3NB02250	PLATE LOCK JUNCTION	2
	303NB02261	3NB02261	PLATE JUNCTION	9
	303NB02270	3NB02270	COVER PLATE	9
	303NB02310	3NB02310	SPONGE JOINT	1
	303NB02341	3NB02341	PLATE LOCK JUNCTION D	2
	303NB02360	3NB02360	GUIDE DRAWER	2
	303NB02370	3NB02370	PLATE JUNCTION D	9
	303NB02381	3NB02381	MOUNT DRAWER	9
	303NB02390	3NB02390	SLIDER DRAWER	9
	303NB02420	3NB02420	COVER INTERFACE	9
⊙	303NB04011	3NB04011	COVER TOP	1
⊙	303NB04022	3NB04022	COVER FRONT UPPER	1
⊙	303NB04031	3NB04031	COVER FRONT MIDDLE	1
⊙	303NB04040	3NB04040	COVER FRONT LOWER	1
⊙	303NB04050	3NB04050	COVER FRONT LEFT UPPER	1
	303NB04063	3NB04063	COVER INNER UPPER	1
	303NB04071	3NB04071	COVER INNER LOWER	1
⊙	303NB04081	3NB04081	COVER REAR UPPER	1
⊙	303NB04090	3NB04090	COVER REAR LOWER	1
	303NB04100	3NB04100	COVER TRAY B EJECT	8
⊙	303NB04111	3NB04111	TRAY B SLIDE	1
⊙	303NB04120	3NB04120	LID TOP FRONT	1
⊙	303NB04130	3NB04130	LID TOP REAR	1
⊙	303NB04141	3NB04141	COVER MAIN EXIT	1
⊙	303NB04151	3NB04151	COVER LEFT LOWER	1
⊙	303NB04161	3NB04161	COVER LID REAR	1
⊙	303NB04171	3NB04171	COVER HANDLE	1
⊙	303NB04190	3NB04190	COVER JUNCTION TRAY C	9
	303NB04200	3NB04200	HANDLE JAM REMOVAL	1
	303NB04211	3NB04211	MOUNT OPERATION	1
	303NB04221	3NB04221	SHEET OPERATION	1

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.
⊙	303NB04230	3NB04230	KEY STAPLER	1
	303NB04240	3NB04240	KEY SELECT	1
	303NB04250	3NB04250	FULCRUM-PLATE COVER UPPER	1
	303NB04260	3NB04260	FULCRUM-PLATE COVER MIDDLE	1
	303NB04272	3NB04272	COVER INTERFACE	9
	303NB04290	3NB04290	PLATE PIN HANDLE	2
	303NB04310	3NB04310	MOUNT REAR COVER	1
	303NB04320	3NB04320	STOPPER FRONT COVER	1
	303NB04330	3NB04330	REINFORCEMENT FULCRUM MIDDLE	1
	303NB07011	3NB07011	GUIDE FEED UPPER	4
	303NB07021	3NB07021	GUIDE FEED LOWER	4
	303NB07030	3NB07030	STAY PUNCH	2
	303NB07040	3NB07040	GUIDE PUNCH	2
	303NB07071	3NB07071	GUIDE FEED ROLLER	4
	303NB07080	3NB07080	MOUNT LOWER GUIDE FEED	4
	303NB07091	3NB07091	HANDLE GUIDE FEED LOWER	4
	303NB07100	3NB07100	HOOK GUIDE FEED LOWER	4
	303NB07110	3NB07110	LEVER GUIDE FEED LOWER	4
	303NB07120	3NB07120	SPRING-TORSION GUIDE HOOK	4
	303NB07140	3NB07140	SHEET ROLLER FEED	2
	303NB07150	3NB07150	LID SENSOR	4
	303NB07160	3NB07160	HOLDER BEARING	4
	303NB07170	3NB07170	SHEET FEED IN A	4
	303NB07180	3NB07180	SHEET FEED IN B	4
	303NB07190	3NB07190	SHEET FEED IN C	4
	303NB24010	3NB24010	GUIDE SUB RIGHT	4
	303NB24020	3NB24020	GUIDE SUB EJECT	5
	303NB24031	3NB24031	GUIDE SUB LEFT OPEN	4
	303NB24040	3NB24040	GUIDE MIDDLE CONVEYING UPPER	4
	303NB24050	3NB24050	GUIDE MIDDLE CONVEYING LOWER	3
	303NB24060	3NB24060	GUIDE DRUM UPPER	4
	303NB24071	3NB24071	GUIDE DRUM LOWER	4
	303NB24080	3NB24080	GUIDE BOOKLET RIGHT	4
	303NB24090	3NB24090	GUIDE BOOKLET LEFT	2
	303NB24100	3NB24100	GUIDE FEED SHIFT SUB	4
	303NB24111	3NB24111	GUIDE FEED SHIFT DRUM	4
	303NB24120	3NB24120	GUIDE FEED SHIFT BOOKLET	4
	303NB24130	3NB24130	MOUNT SOLENOID AB	4
	303NB24140	3NB24140	LEVER SOLENOID AB	4
	303NB24150	3NB24150	MOUNT SOLENOID C	4
	303NB24160	3NB24160	LEVER SOLENOID C	4
	303NB24170	3NB24170	ACTUATOR SUB	5
	303NB24181	3NB24181	ACTUATOR MIDDLE	3
	303NB24190	3NB24190	ACTUATOR DRUM	3
	303NB24200	3NB24200	MOUNT PI ACTUATOR	4
	303NB24210	3NB24210	HOLDER MAGNET	4
	303NB24220	3NB24220	SPRING GUIDE HOLD	4
	303NB24250	3NB24250	MOUNT LIMIT SENSOR SUB	8
	303NB24260	3NB24260	SHAFT DRUM	4
	303NB24280	3NB24280	MOUNT MAGNET	4

	Part.No.	Alternative.	Description	Fig.No.
⊙	303NB24290	3NB24290	MOUNT GUIDE DRUM	4
	303NB24300	3NB24300	STATIC-ELIMINATOR SUB EJECT	5
	303NB24310	3NB24310	PULLEY SUB EJECT	5
	303NB24320	3NB24320	STOPPER GUIDE	4
	303NB24330	3NB24330	FILM MAGNET	4
	303NB28010	3NB28010	CURSOR MAIN EXIT	6
	303NB28020	3NB28020	SLIDER F MAIN EXIT	6
	303NB28030	3NB28030	SLIDER R MAIN EXIT	6
	303NB28040	3NB28040	CAP F MAIN EXIT	6
	303NB28050	3NB28050	CAP R MAIN EXIT	6
	303NB28060	3NB28060	PULLEY 26 TURN	6
	303NB28070	3NB28070	BELT 138	6
	303NB28080	3NB28080	SHAFT CURSOR	6
	303NB28090	3NB28090	SHAFT DRIVE	6
	303NB28100	3NB28100	SHAFT GUIDE	6
	303NB28110	3NB28110	BELT 396	6
	303NB28120	3NB28120	STAY MAIN EXIT	6
	303NB28130	3NB28130	GEAR Z45-P30	3,6
	303NB28140	3NB28140	MOUNT SLIDE DRIVE	6
	303NB28150	3NB28150	MOUNT PI SLIDE	6
	303NB28160	3NB28160	GUIDE RETAINING	6
	303NB28170	3NB28170	PLATE TURN PULSE	7
	303NB28180	3NB28180	GEAR Z55R	7
	303NB28190	3NB28190	MOUNT TURN DRIVE	7
	303NB28200	3NB28200	MOUNT PI SET	8
	303NB28210	3NB28210	MOUNT PI HOME	8
	303NB28222	3NB28222	GUIDE TURN	6
	303NB31010	3NB31010	GEAR Z35R	3,5
	303NB31020	3NB31020	GEAR Z35L	3
	303NB31030	3NB31030	MOUNT FEED IDLE	2
	303NB31040	3NB31040	MOUNT FEED IN DRIVE	7
	303NB31050	3NB31050	GEAR Z70R-Z20	7
	303NB31060	3NB31060	MOUNT DRUM DRIVE	7
	303NB31070	3NB31070	GEAR Z35R-P35	7
	303NB31080	3NB31080	MOUNT EJECT DRIVE	7
	303NB31090	3NB31090	BELT 504	7
	303NB31100	3NB31100	GEAR Z35L-P42	7
	303NB31110	3NB31110	PIN EJECT DRIVE	2
	303NB31120	3NB31120	MOUNT CONVEYING	7
	303NB34020	3NB34020	LABEL D2	4
	303NB34040	3NB34040	LABEL D4	4
	303NB34060	3NB34060	LABEL A	9
	303NB34070	3NB34070	LABEL B	1
	303NB34080	3NB34080	LABEL C	1
	303NB34170	3NB34170	LABEL D6 NEW	4
	303NB34200	3NB34200	LABEL OPERATION	1
	303NB34210	3NB34210	LABEL D3 D5	1
	303NB34220	3NB34220	LABEL CAUTION MAIN TRAY	1
	303NB34230	3NB34230	LABEL MANUAL STAPLER	1
	303NB34240	3NB34240	LABEL A STAPLER	1

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.
⊙	303NB34250	3NB34250	LABEL D1	1
	303NB36021	3NB36021	GUIDE MIDDLE TRAY	3
	303NB36031	3NB36031	CURSOR F MIDDLE TRAY	3
	303NB36041	3NB36041	CURSOR R MIDDLE TRAY	3
	303NB36050	3NB36050	DUCT UPPER GUIDE WIRE 1	3
	303NB36060	3NB36060	SHAFT CURSOR	3
	303NB36070	3NB36070	HOLDER CURSOR	3
	303NB36082	3NB36082	GUIDE PAPER STOPPER	3
	303NB36100	3NB36100	HOLDER MIDDLE PULLEY	2
	303NB36110	3NB36110	SHAFT MIDDLE PULLEY	2
	303NB36120	3NB36120	MOUNT MIDDLE PULLEY	2
	303NB36130	3NB36130	SHEET PADDLE A	3
	303NB36141	3NB36141	SHAFT PADDLE A	3
	303NB36150	3NB36150	GEAR 41 PADDLE A	3
	303NB36160	3NB36160	PLATE PULSE PADDLE A	3
	303NB36170	3NB36170	FRAME EXIT FRONT	5
	303NB36180	3NB36180	FRAME EXIT REAR	5
	303NB36190	3NB36190	MOUNT EXIT PULLEY	5
	303NB36200	3NB36200	PULLEY EXIT	5
	303NB36210	3NB36210	SHAFT UPPER GUIDE	5
	303NB36224	3NB36224	GUIDE PAPER PRESS	5
	303NB36230	3NB36230	SHAFT PAPER PRESS	5
	303NB36240	3NB36240	HOLDER PADDLE	3,5
	303NB36250	3NB36250	MOUNT PI PADDLE B	5
	303NB36260	3NB36260	SHEET PADDLE B	5
	303NB36271	3NB36271	SHAFT PADDLE B	5
	303NB36290	3NB36290	SPRING EXIT PULLEY	5
	303NB36300	3NB36300	SPRING GUIDE PAPER PRESS	5
	303NB36310	3NB36310	SHAFT UPPER EXIT DRIVE	5
	303NB36321	3NB36321	MOUNT PI UPPER GUIDE	3
	303NB36330	3NB36330	MOUNT INTERLOCK UPPER GUIDE	4
	303NB36350	3NB36350	GUIDE CENTER	5
	303NB36370	3NB36370	LEVER UPPER EXIT	5
	303NB36380	3NB36380	BRAKE EXIT	5
	303NB36390	3NB36390	LEVER BRAKE EXIT	5
	303NB36410	3NB36410	SPRING LEVER BRAKE	5
	303NB36420	3NB36420	FILM GUIDE STOPPER	3
	303NB36430	3NB36430	FILM GUIDE STOPPER C	3
	303NB36442	3NB36442	FILM GUIDE STOPPER S	3
	303NB36450	3NB36450	COVER MIDDLE TRAY WIRE	3
	303NB36460	3NB36460	STATIC-ELIMINATOR EJECT	3
	303NB36471	3NB36471	PLATE EARTH EJECT	5
	303NB36480	3NB36480	FILM PADDLE B	5
	303NB36490	3NB36490	STATIC-ELIMINATOR EJECT SIDE	5
	303NB36500	3NB36500	STATIC-ELIMINATOR EJECT CENTER	5
	303NB36510	3NB36510	FILM GUIDE STOPPER B	3
	303NB36521	3NB36521	GUIDE PAPER EXIT	5
	303NB36530	3NB36530	SPRING EXIT F	5
	303NB36540	3NB36540	SPRING EXIT R	5
	303NB36550	3NB36550	RUBBER FEED	3

	Part.No.	Alternative.	Description	Fig.No.
⊙	303NB36580	3NB36580	STATIC-ELIMINATOR PAPER STOPPER	3
	303NB36591	3NB36591	LEVER PAPER PRESS	5
	303NB36600	3NB36600	CAM PADDLE	5
	303NB36630	3NB36630	SPRING EXIT PRESS	5
	303NB36640	3NB36640	FILM GUIDE STOPPER D	3
	303NB36650	3NB36650	FILM GUIDE STOPPER E	3
	303NB36661	3NB36661	PULLEY MIDDLE	2
	303NB36670	3NB36670	SPRING PULLEY	2
	303NB37011	3NB37011	MOUNT DRIVE	7
	303NB37020	3NB37020	SHAFT WORM	7
	303NB37030	3NB37030	GEAR Z34L Z52L	7
	303NB37040	3NB37040	GEAR WORM	7
	303NB37050	3NB37050	GEAR Z60R	7
	303NB37060	3NB37060	PLATE TENSION	7
	303NB37070	3NB37070	SHAFT MAIN TRAY	2
	303NB37080	3NB37080	BELT LIFT	7
	303NB37090	3NB37090	LEVER SENSOR	2
	303NB37100	3NB37100	FRAME MAIN TRAY FRONT	2
	303NB37110	3NB37110	FRAME MAIN TRAY CENTER	2
	303NB37120	3NB37120	FRAME MAIN TRAY REAR	2
	303NB37130	3NB37130	PIN RAIL	2
	303NB37140	3NB37140	TRAY MAIN UP	9
	303NB37150	3NB37150	TRAY MAIN LOW	9
	303NB37161	3NB37161	FILM SENSOR	3
	303NB37171	3NB37171	PLATE DETECTION	3
	303NB37180	3NB37180	RAIL MAIN TRAY	2
	303NB37190	3NB37190	FILM FRAME TRAY	2
	303NB37200	3NB37200	PULLEY 20S5M	7
	303NB38021	3NB38021	MOUNT STAPLER	3
	303NB38030	3NB38030	BELT STAPLER SHIFT	3
	303NB38040	3NB38040	SHAFT STAPLER SHIFT	3
	303NB38051	3NB38051	PLATE STAPLER SHIFT	3
	303NB38060	3NB38060	STOPPER STAPLER MOUNT	3
	303NB38071	3NB38071	RAIL STAPLER SHIFT FRONT	3
	303NB38080	3NB38080	SHAFT STOPPER PULLEY	3
	303NB38090	3NB38090	SHAFT MOUNT PULLEY	3
	303NB38100	3NB38100	PLATE STAPLER UNIT TENSION	3
	303NB38110	3NB38110	STOPPER DRIVE BELT	3
	303NB38121	3NB38121	RAIL STAPLER SHIFT REAR	3
	303NB38131	3NB38131	MOUNT PRINT STAPLER	3
	303NB38140	3NB38140	COVER STAPLER	3
	303NB38150	3NB38150	STOPPER BUSH	3
	303NB38160	3NB38160	FILM STAPLER	3
	303NB38180	3NB38180	GUIDE STAPLER	3
	303NB38190	3NB38190	PLATE EARTH STAPLER	3
	303NB38200	3NB38200	CARTRIDGE EH600	9
	303NB39010	3NB39010	MOUNT PWB	8
	303NB39021	3NB39021	GUIDE WIRE REAR LEFT	8
	303NB39030	3NB39030	GUIDE WIRE REAR RIGHT	8
	303NB39040	3NB39040	GUIDE WIRE FRONT	8

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.		Part.No.	Alternative.	Description	Fig.No.
	303NB46010	3NB46010	WIRE INTERFACE	8		3AP02040	3AP02040	PULLEY 30,DUPLEX	3
	303NB46020	3NB46020	WIRE SENSOR 1	8		3B807230	3B807230	COLLAR,MIDDLE BELT	3
	303NB46030	3NB46030	WIRE SENSOR 2	8		3CZ02230	3CZ02230	PIN,HOOK FULCRUM	2,7
	303NB46040	3NB46040	WIRE MOTOR 1	8	⊙	3H316050	3H316050	GEAR 46 DRUM DRIVE	4
	303NB46050	3NB46050	WIRE MOTOR 2	7		5MVM176DN001	3B706020	PULLEY RAIL CASS /40283V0034 A4	3
	303NB46060	3NB46060	WIRE BOOKLET	8		5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	3,4,5,6,7,8
	303NB46070	3NB46070	WIRE FRONT	4		63212210	63212210	STATIC ELIMINATOR,EJECT	4
	303NB46080	3NB46080	WIRE MTRAY SURF	3		63213320	63213320	CUSHION,ORIGINAL COLLECTION	1,3,4,5
	303NB46090	3NB46090	WIRE MTRAY MOTOR	7		72418140	72418140	SPRING, BLADE	3
	303NB46100	3NB46100	WIRE ME SENSOR	4		74808080	74808080	BEARING,686ZZNR	7
	303NB46110	3NB46110	WIRE FFC	3		7BE006124431H01	BE119720	BEARING MR126ZZ	3,4
	303NB46120	3NB46120	WIRE MTRAY HP	8		7BE008165431H01	BE119730	BEARING 688ZZ	3,5
	303NB46140	3NB46140	WIRE SHIFT	6		7YZM110001++H01	YZ009420	ACCESS,BUSHING	1,8
	303NB46160	3NB46160	WIRE OPERATION	1		7YZM110003++H01	YZ034780	ACCESS,BUSHING	8
	303NB46170	3NB46170	WIRE B-TRAY FULL	8		7YZM390015++H01	YZ124850	ACCESS.CLAMP	8
	303NB46180	3NB46180	WIRE INTERFACE A	9		7YZM420003++H01	YZ052580	ACCESS.BAND	5
	303NB46190	3NB46190	WIRE INTERFACE B	2		7YZM510007++H01	YZ042780	ACCESS.SPACER	8
	303NB46200	3NB46200	WIRE INTERFACE C	8		7YZM610001++H01	YZ010230	ACCESS SADDLE	8
⊙	303NB94012	3NB94012	PARTS PWB MAIN ASSY SP	8		7YZM610003++H01	YZ010250	ACCESS SADDLE	7
⊙	303NB94020	3NB94020	PARTS PWB STAPLER ASSY SP	3		7YZM610004++H01	YZ012210	ACCESS SADDLE	7,8
⊙	303NB94030	3NB94030	PARTS PWB OPERATION ASSY SP	1		7YZM610007++H01	YZ023340	ACCESS.SADDLE	7,8
⊙	303NB94040	3NB94040	PARTS MOTOR-PM MOVING SP	3,7		M2104350	M2104350	EDGING,EDS-0607M(KITAGAWA)	3,4,6,8
⊙	303NB94051	3NB94051	PARTS MOTOR-BL BRAKE SP	7		M21AH010	M21AH010	BAND,RSG-130-V0(KITAGAWA)	3,8
⊙	303NB94060	3NB94060	PARTS ROLLER SUB EXIT SP	3					
⊙	303NB94070	3NB94070	PARTS ROLLER SUB CONVEYING SP	3					
⊙	303NB94080	3NB94080	PARTS ROLLER MIDDLE SP	3					
⊙	303NB94090	3NB94090	PARTS ROLLER EXIT SP	3					
⊙	303NB94100	3NB94100	PARTS ROLLER FEED LOWER SP	3					
⊙	303NB94111	3NB94111	PARTS ROLLER FEED UPPER SP	4					
⊙	303NB94121	3NB94121	PARTS MAIN EXIT SP	6					
⊙	303NB94130	3NB94130	PARTS STAPLER EH600 SP	3					
⊙	303NB94140	3NB94140	PARTS SENSOR OPT. SP	8					
⊙	303NC04062	3NC04062	COVER LID REAR	1					
⊙	303NC04190	3NC04190	COVER LID REAR S	1					
	303NC34020	3NC34020	LABEL D1	4					
	303NC46080	3NC46080	WIRE CI SENSOR	3,4					
	303NC46100	3NC46100	WIRE STAPLER	3					
	303NC46110	3NC46110	WIRE NCK MOTOR	5					
	303NC46120	3NC46120	WIRE PADDLE SENSOR	5					
	303NC46140	3NC46140	WIRE MID TRAY SENSOR	3					
	303NC46150	3NC46150	WIRE MID TRAY MOTOR	3					
	303NC46160	3NC46160	WIRE STP HP SENSOR	3					
	303NC46170	3NC46170	WIRE MOTOR EARTH	5					
	303ND02360	3ND02360	PIN HOOK BOOKLET	2					
⊙	303NW94050	3NW94050	PARTS SENSOR OPT. SP	8					
⊙	303NW94060	3NW94060	PARTS SENSOR OPT. SP	3,4					
	3AK20050	3AK20050	HOLDER,TIMING BELT	7					
⊙	3AK20080	3AK20080	GEAR 18/50	7					
⊙	3AK20090	3AK20090	GEAR 51	7					
	3AK20200	3AK20200	PULLEY,MAIN TRAY	2					

• Parts with "⊙" indicate regular maintenance parts.

BF-730

Rev.3

—— CONTENTS ——

FIG. 1	Booklet Folder 1	2
FIG. 2	Booklet Folder 2	4
FIG. 3	Booklet Folder 3	6
FIG. 4	Booklet Folder 4	8
FIG. 5	Accessories	10

• INDEX	12
---------------	----

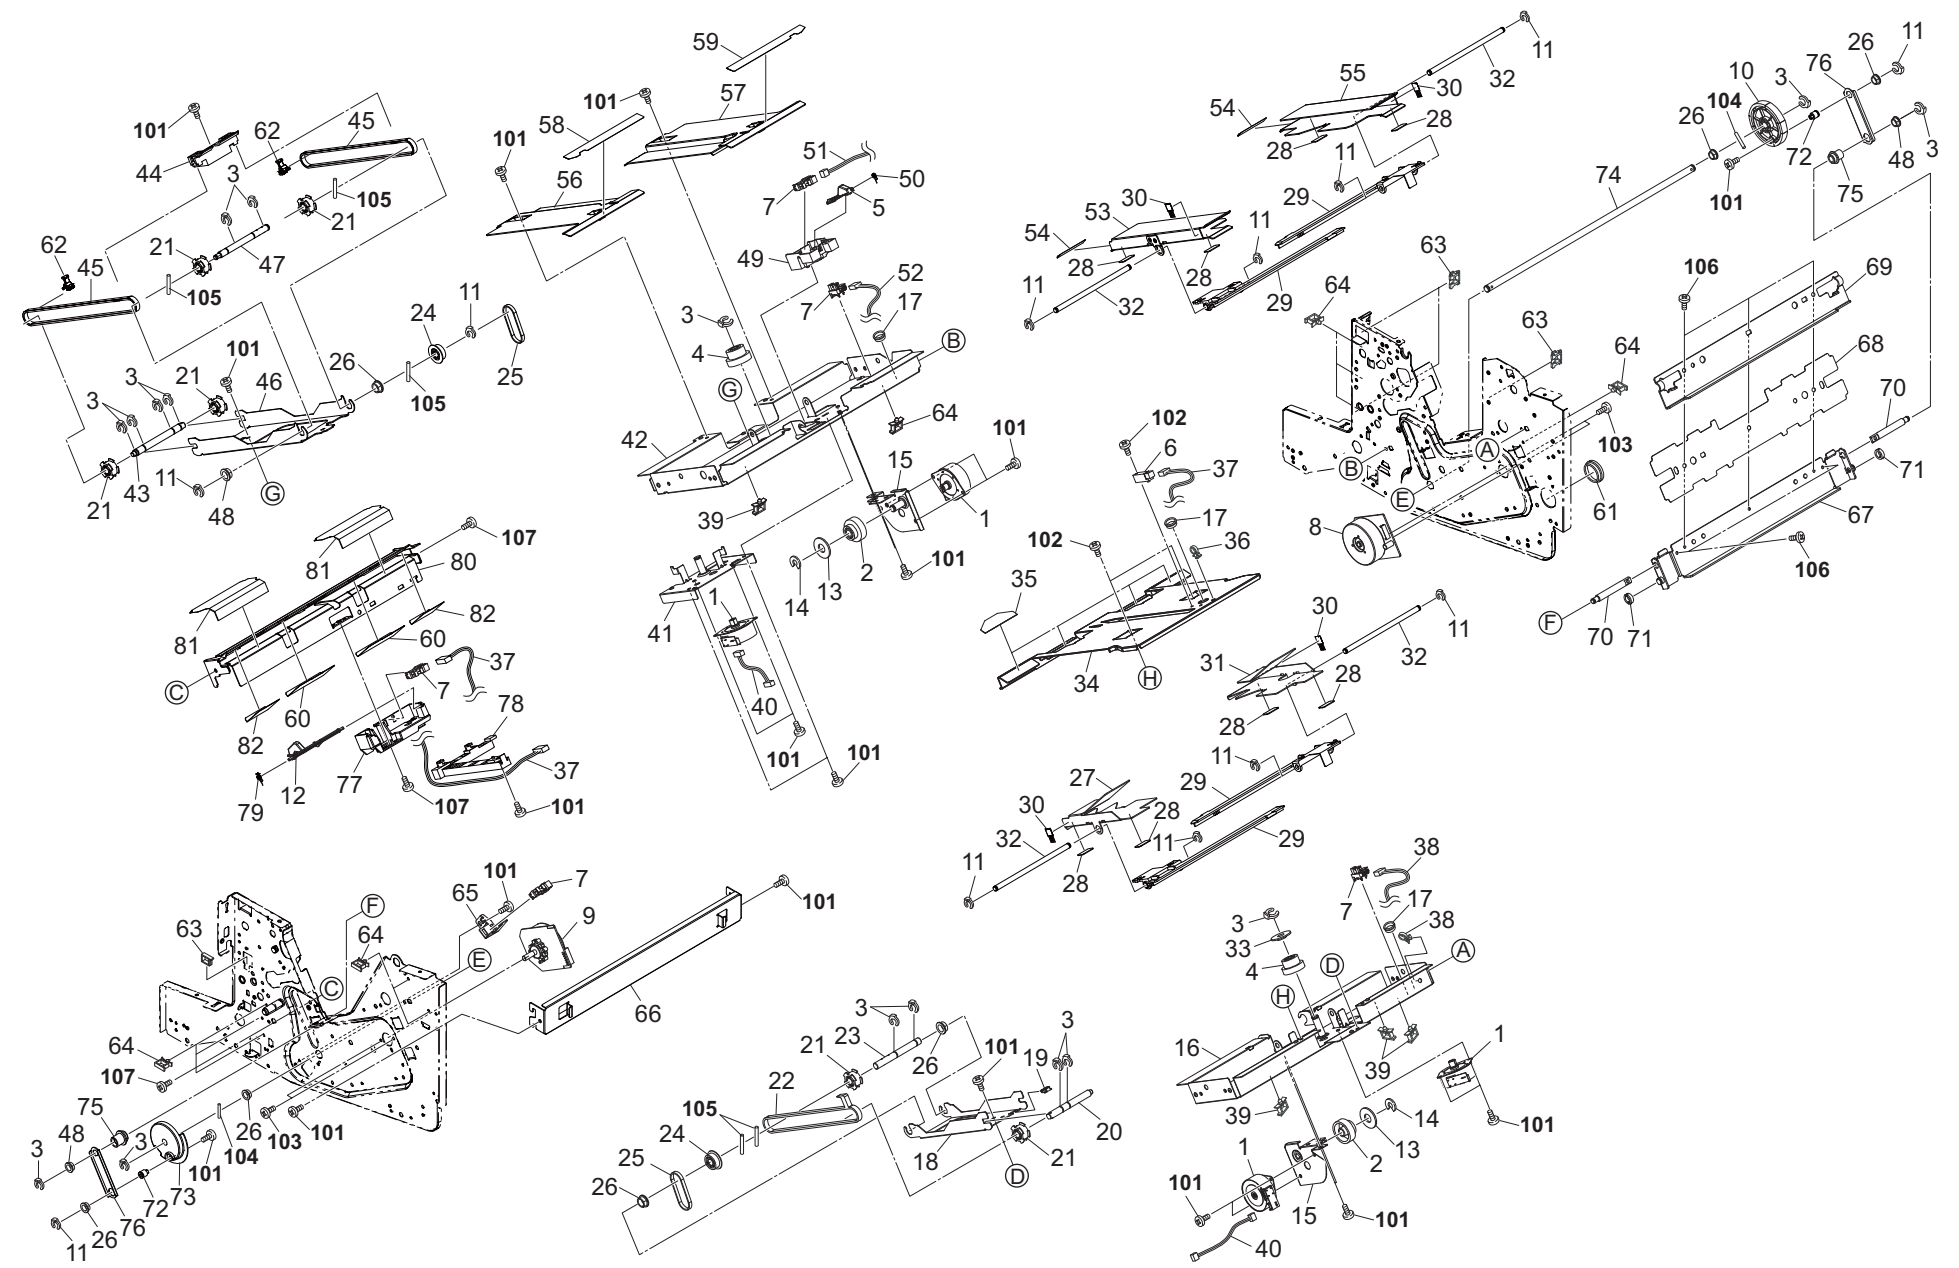


FIG. 1 Booklet Folder 1

3ND-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	302HN44100	2HN44100	MOTOR REVERSE		4	50	302K928190	2K928190		SPRING-TORSION SWITCHBACK		1
⊙	2	303ND24070	3ND24070	GEAR Z54-P30		2	51	303ND46170	3ND46170		WIRE BUNDUP SENSOR		1
	3	2BC06910	2BC06910	STOPPER 6		16	52	303ND46180	3ND46180		WIRE UNDER WIDTH SENSOR		1
⊙	4	303ND24060	3ND24060	GEAR Z56R-Z26S		2	53	303J124341	3J124341		CURSOR FW FRONT		1
	5	303ND24140	3ND24140	ACTUATOR HOLDER SENSOR		1	54	303J124660	3J124660		SHEET CURSOR FW		2
⊙	6	303NW94060	NX124090	SENSOR OPT.		1	55	303J124351	3J124351		CURSOR FW REAR		1
⊙	7	303M894260	NX120700	SENSOR OPT.		5	56	303J124231	3J124231		GUIDE CONVEYING LOWER F		1
⊙	8	303NB94051	3NB94051	PARTS MOTOR-BL BRAKE SP		1	57	303J124241	3J124241		GUIDE CONVEYING LOWER R		1
⊙	9	302LC94281	2LC94281	PARTS MOTOR-BL W40 SP		1	58	303ND24270	3ND24270		FILM BLADE F		1
⊙	10	303J124170	3J124170	GEAR 55 BLADE PRESSURE		1	59	303ND24280	3ND24280		FILM BLADE R		1
	11	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		12	60	303ND24300	3ND24300		SHEET STAY SADDLE UP M		2
	12	303ND24160	3ND24160	ACTUATOR PAPER		1	61	7YZM110003++H01	YZ034780		ACCESS,BUSHING		1
	13	303JY38240	3JY38240	SPACER 25		2	62	303ND24330	3ND24330		JOINT CONVEYING BELT		2
	14	302K921420	2K921420	CUT-WASHER 6		2	63	7YZM210006++H01	YZ038000		ACCESS.EDGING		4
	15	303ND24030	3ND24030	MOUNT MOTOR		2	64	7YZM610007++H01	YZ023340		ACCESS.SADDLE		10
	16	303ND24010	3ND24010	STAY SIDE REGIST UP		1	65	303J131340	3J131340		MOUNT BLADE PI		1
	17	7YZM110001++H01	YZ009420	ACCESS.BUSHING		3	66	303ND02320	3ND02320		STAY RIGHT		1
	18	303J124481	3J124481	MOUNT BELT R		1	67	303J124151	3J124151		PLATE BLADE SUPPORT		1
	19	M2104390	M2104390	EDGING,EDS-0607L(KITAGAWA)		1	68	303J124142	3J124142		BLADE MID PRESSING		1
	20	303J124080	3J124080	SHAFT CONVEYING IDLE R		1	69	303J124160	3J124160		HOLDER BLADE		1
	21	3AK07230	3AK07230	PULLEY 20S3M		6	70	303J124450	3J124450		SHAFT BLADE		2
	22	303J124110	3J124110	BELT CONVEYING REGIST		1	71	303J124210	3J124210		BUSHING BLADE		2
	23	303J124070	3J124070	SHAFT CONVEYING DRIVE R		1	72	303ND31340	3ND31340		PIN BLADE DRIVE		2
	24	3AP02040	3AP02040	PULLEY 30,DUPLEX		2	73	303ND31280	3ND31280		CAM BLADE		1
	25	302H017260	2H017260	BELT SCANNER		2	74	303J131040	3J131040		SHAFT BLADE DRIVE L		1
	26	28107310	49028101	BUSH 8		7	75	303J124670	3J124670		SPACER BLADE		2
	27	303J124020	3J124020	CURSOR FRONT		1	76	303ND31040	3ND31040		ARM BLADE PRESS		2
	28	3B807640	3B807640	PAD,CURSOR		8	77	303ND24150	3ND24150		MOUNT PAPER SENSOR		1
	29	303J124370	3J124370	RACK CURSOR		4	78	303LV24010	3LV24010		COVER WIRE		1
	30	303JY37220	3JY37220	STATIC ELIMINATOR CURSOR		4	79	303ND24310	3ND24310		SPRING ACT		1
	31	303J124030	3J124030	CURSOR REAR		1	80	303J124221	3J124221		STAY SADDLE		1
	32	303J124050	3J124050	SHAFT LOWER CURSOR		4	81	303J124550	3J124550		SHEET STAY SADDLE LOW		2
	33	303ND24080	3ND24080	SPACER CURSOR		1	82	303ND24290	3ND24290		SHEET STAY SADDLE UP		2
	34	303J124041	3J124041	GUIDE REGIST		1							
	35	303J124562	3J124562	SHEET GUIDE REGIST		4							
	36	7YZM410001++H01	YZ037950	ACCESS.BAND		6							
	37	303ND46210	3ND46210	WIRE PAPER SENSOR		2	101	7BB700308H	BB105600		+BIND T.T S SCREW 3X8 SR		
	38	303ND46220	3ND46220	WIRE UPPER WIDTH SENSOR		1	102	7BB700316H	BB106910		+BIND T.T S SCREW 3X16 SR		
	39	7YZM610001++H01	YZ010230	ACCESS SADDLE		4	103	7BB000304H	BB105720		+BIND M SCREW 3X4		
	40	303ND46090	3ND46090	WIRE WIDTH MOTOR		2	104	7BP512516B0CH01	BP126540		PARALLEL PIN 2.5X16		
	41	303ND24040	3ND24040	PLATE ADJUST		1	105	7BP512512B0CH01	BP126420		PARALLEL PIN 2.5X12		
	42	303ND24020	3ND24020	STAY SIDE REGIST LOW		1	106	7BB000406H	BB112100		+BIND M SCREW 4X6		
	43	303J124440	3J124440	SHAFT CONVEYING IDLE		1	107	7BB700408H	BB105640		+BIND T.T S SCREW 4X8 SR		
	44	303J124460	3J124460	HOLDER CONVEYING LIFT		1							
	45	303ND24320	3ND24320	BELT CONVEYING POSITIONING		2							
	46	303J124490	3J124490	MOUNT BELT L		1							
	47	303ND24230	3ND24230	SHAFT CONVEYING DRIVE L		1							
	48	302K324450	2K324450	BUSH 6		3							
	49	303ND24130	3ND24130	MOUNT HOLDER SENSOR		1							

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "+" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

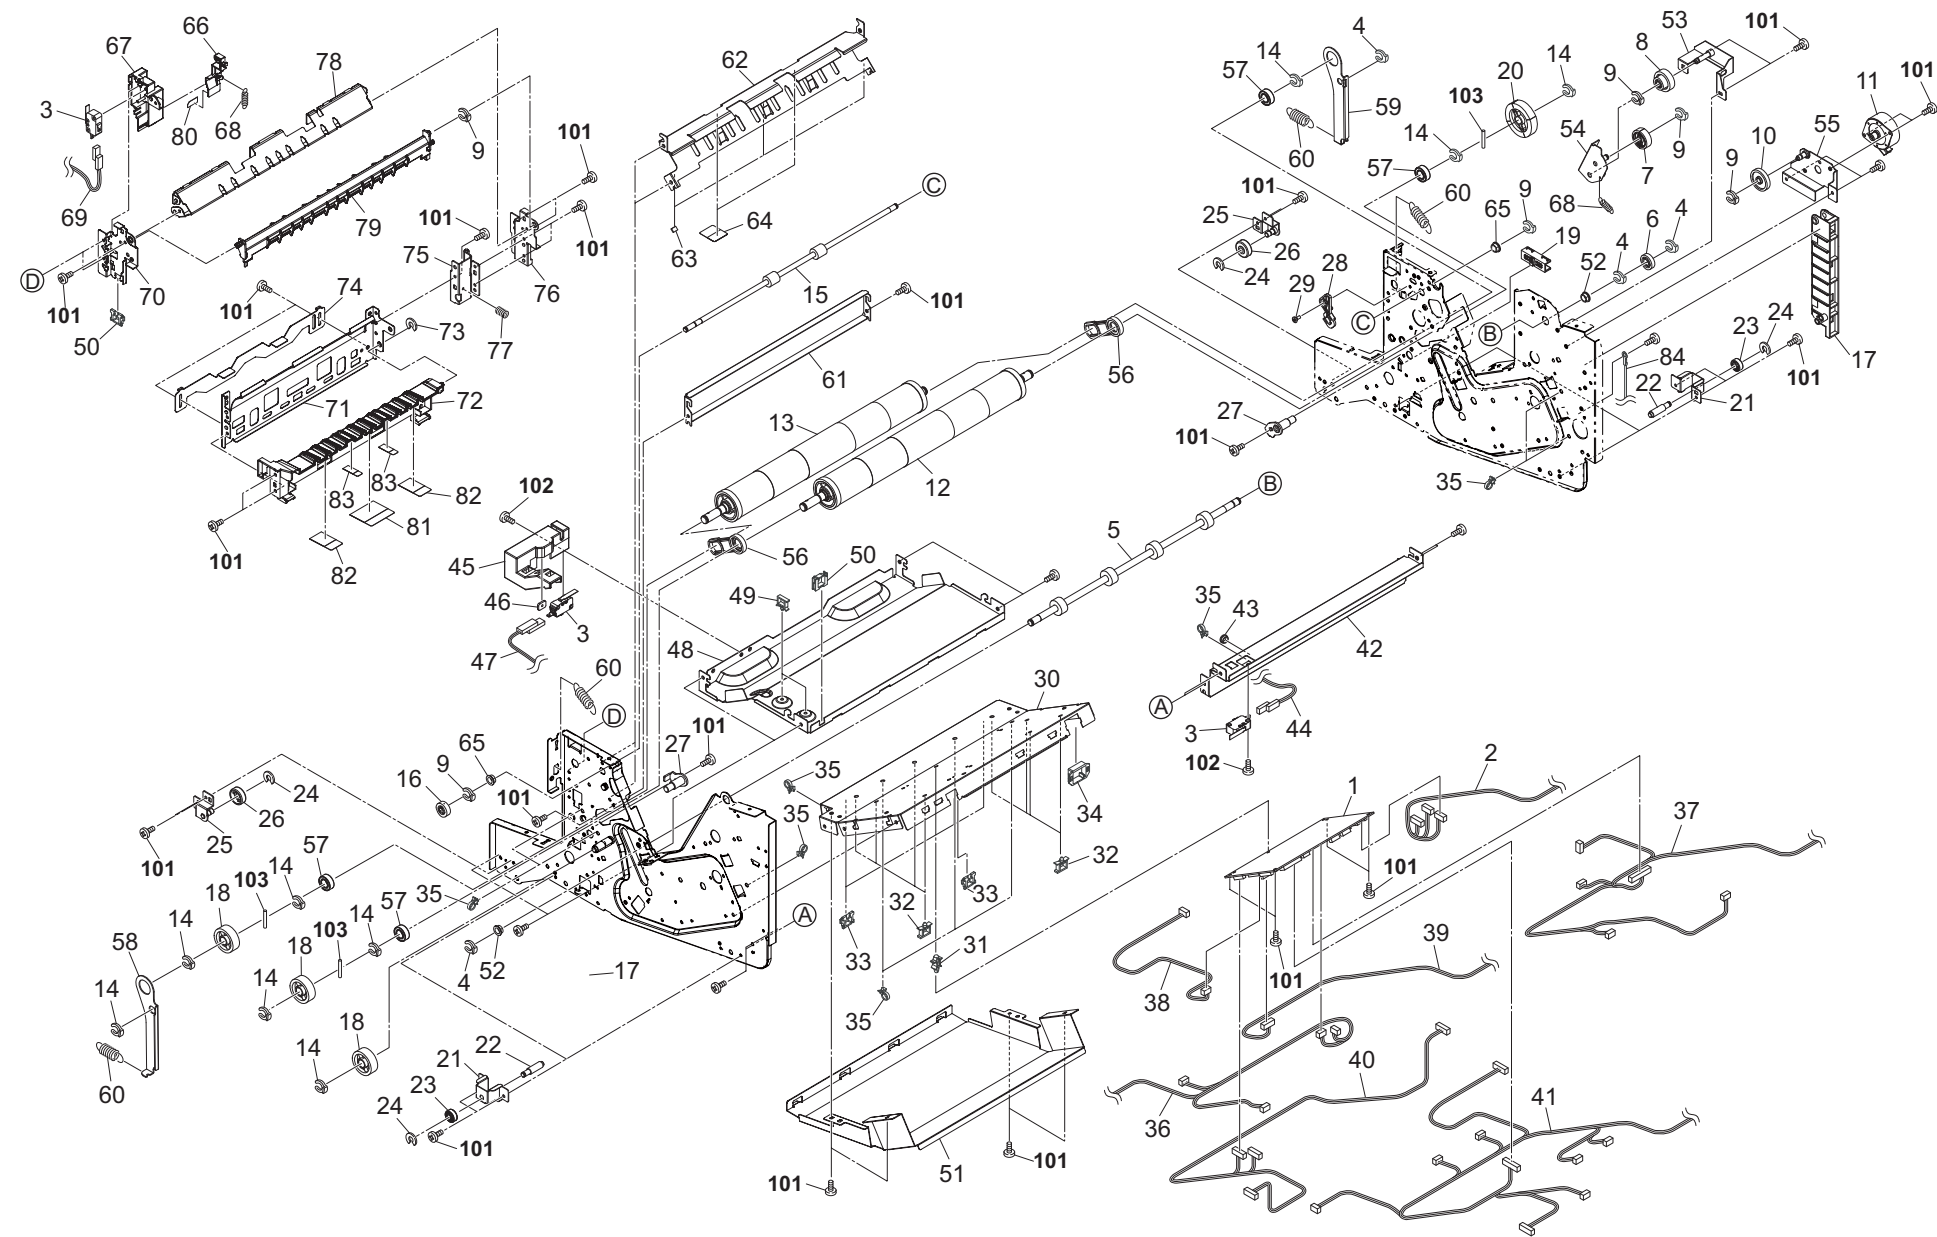


FIG. 2 Booklet Folder 2

3ND-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303ND94011	3ND94011	PARTS PWB MAIN ASSY SP		1
	2	303ND46010	3ND46010	WIRE INTERFACE		1
⊙	3	2FB27160	3NB27160	INTER LOCK SWITCH		3
	4	2BC06910	2BC06910	STOPPER 6		4
⊙	5	303ND94020	3ND24180	ROLLER FEED IN		1
⊙	6	303NB31010	3NB31010	GEAR Z35R		1
⊙	7	302K931490	2K931490	GEAR Z28L		1
⊙	8	303ND31510	3ND31510	GEAR Z30R Z30R		1
	9	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		5
⊙	10	303ND31520	3ND31520	GEAR Z52L		1
⊙	11	302HN44100	2HN44100	MOTOR REVERSE		1
⊙	12	303ND94050	3ND31012	ROLLER PRESS A		1
⊙	13	303ND94060	3ND31022	ROLLER PRESS B		1
	14	302K921120	2K921120	STOPPER 8		9
⊙	15	303ND94040	3ND28260	ROLLER EJECT 3 FOLD		1
⊙	16	302K031740	2K031740	GEAR BELT CLEANING DRIVE Z20L		1
	17	303ND02291	3ND02291	GUIDE WIRE		1
⊙	18	303ND31200	3ND31200	GEAR Z30 PRESS		3
	19	302LF39050	2LF39050	GUIDE WIRE FRONT PWB		1
⊙	20	303ND31210	3ND31210	GEAR Z16 PRESS		1
	21	303ND02060	3ND02060	MOUNT SHAFT RAIL		4
	22	303ND02070	3ND02070	SHAFT RAIL		4
	23	302FG07020	2FG07020	PULLEY,CASSETTE RAIL		4
	24	302FB09830	2FB09830	CUT WASHER 4		6
	25	303ND02200	3ND02200	MOUNT PULLEY RAIL		2
	26	34907150	34907150	PULLEY,CASSETTE		2
	27	303ND02281	3ND02281	FULCRUM PLATE RELEASE		2
	28	303ND28220	3ND28220	LEVER SOL GUIDE EXIT		1
	29	2FB20860	2FB20860	PIN FUSER COVER		1
	30	303ND02170	3ND02170	STAY BLADE LOWER		1
	31	7YZM510007++H01	YZ042780	ACCESS.SPACER		1
	32	7YZM610004++H01	YZ012210	ACCESS SADDLE		8
	33	7YZM210005++H01	YZ037990	ACCESS.EDGING		3
	34	7YZM210002++H01	YZ004730	ACCESS.EDGING		1
	35	7YZM410001++H01	YZ037950	ACCESS.BAND		10
	36	303ND46020	3ND46020	WIRE INTERLOCK SWITCH		1
	37	303ND46060	3ND46060	WIRE MOTOR ST ALL		1
	38	303ND46100	3ND46100	WIRE SOLENOID1		1
	39	303ND46110	3ND46110	WIRE STP MOTOR		1
	40	303ND46120	3ND46120	WIRE MOTOR		1
	41	303ND46160	3ND46160	WIRE SENSOR ALL		1
	42	303ND02160	3ND02160	STAY RIGHT LOW		1
	43	7YZM110001++H01	YZ009420	ACCESS.BUSHING		1
	44	303ND46040	3ND46040	WIRE UNITSET SWITCH		1
	45	303ND02180	3ND02180	MOUNT INTERLOCK TRAY		1
	46	302K926050	2K926050	NUT FUSER		1
	47	303ND46050	3ND46050	WIRE TRY SWITCH		1
	48	303ND02030	3ND02030	BASE LEFT		1
	49	7YZM610007++H01	YZ023340	ACCESS.SADDLE		2

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	50	7YZM210006++H01	YZ038000	ACCESS.EDGING		2
	51	303ND02350	3ND02350	PLATE COVER PWB		1
	52	28107310	49028101	BUSH 8		2
	53	303ND31540	3ND31540	PLATE JOINT FULCRUM		1
	54	303ND31500	3ND31500	PLATE JOINT DRIVE		1
	55	303ND31530	3ND31530	MOUNT MOTOR LOW		1
	56	303ND31100	3ND31100	SPACER ROLLER		2
	57	7BE010197431H01	BE119740	BEARING 6800ZZ(7MM)		4
	58	303ND31060	3ND31060	LEVER PRESSURE B FRONT		1
	59	303ND31070	3ND31070	LEVER PRESSURE B REAR		1
	60	303LV28051	3LV28051	SPRING PRESSURE		4
	61	303ND02050	3ND02050	STAY LEFT		1
	62	303ND28061	3ND28061	GUIDE CONVEYING EXIT		1
	63	303ND28310	3ND28310	CUSHION GUIDE		3
	64	303ND28340	3ND28340	FILM EXIT GUIDE		2
	65	302K324450	2K324450	BUSH 6		2
	66	303ND28150	3ND28150	LEVER LEFT		1
	67	303ND28180	3ND28180	MOUNT INTERLOCK LEFT		1
	68	303J102210	3J102210	SPRING RELEASE		2
	69	303ND46030	3ND46030	WIRE GIDE L SWITCH		1
	70	303ND28130	3ND28130	FRAME LEFT FRONT		1
	71	303ND28010	3ND28010	GUIDE STOP UP		1
	72	303ND28021	3ND28021	GUIDE STOP LOW		1
	73	2BL16290	2BL16290	CUT WASHER 3		1
	74	303ND28030	3ND28030	GUIDE STOP		1
	75	303ND28200	3ND28200	HINGE LEFT		1
	76	303ND28140	3ND28140	FRAME LEFT REAR		1
	77	303ND28290	3ND28290	SPRING LEFT		1
	78	303ND28050	3ND28050	GUIDE EXIT		1
	79	303ND28040	3ND28040	GUIDE EXIT SHIFT		1
	80	303ND34050	3ND34050	LABEL UP		1
	81	303ND28360	3ND28360	FILM STOP LOW A		1
	82	303ND28370	3ND28370	FILM STOP LOW B		2
	83	303ND28380	3ND28380	FILM STOP LOW C		2
	84	303ND46250	3ND46250	WIRE EARTH		1
	101	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	102	7BB700316H	BB106910	+BIND T.T S SCREW 3X16 SR		
	103	7BP513022B0CH01	BP126790	PARALLEL PIN 3X22		

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "+" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

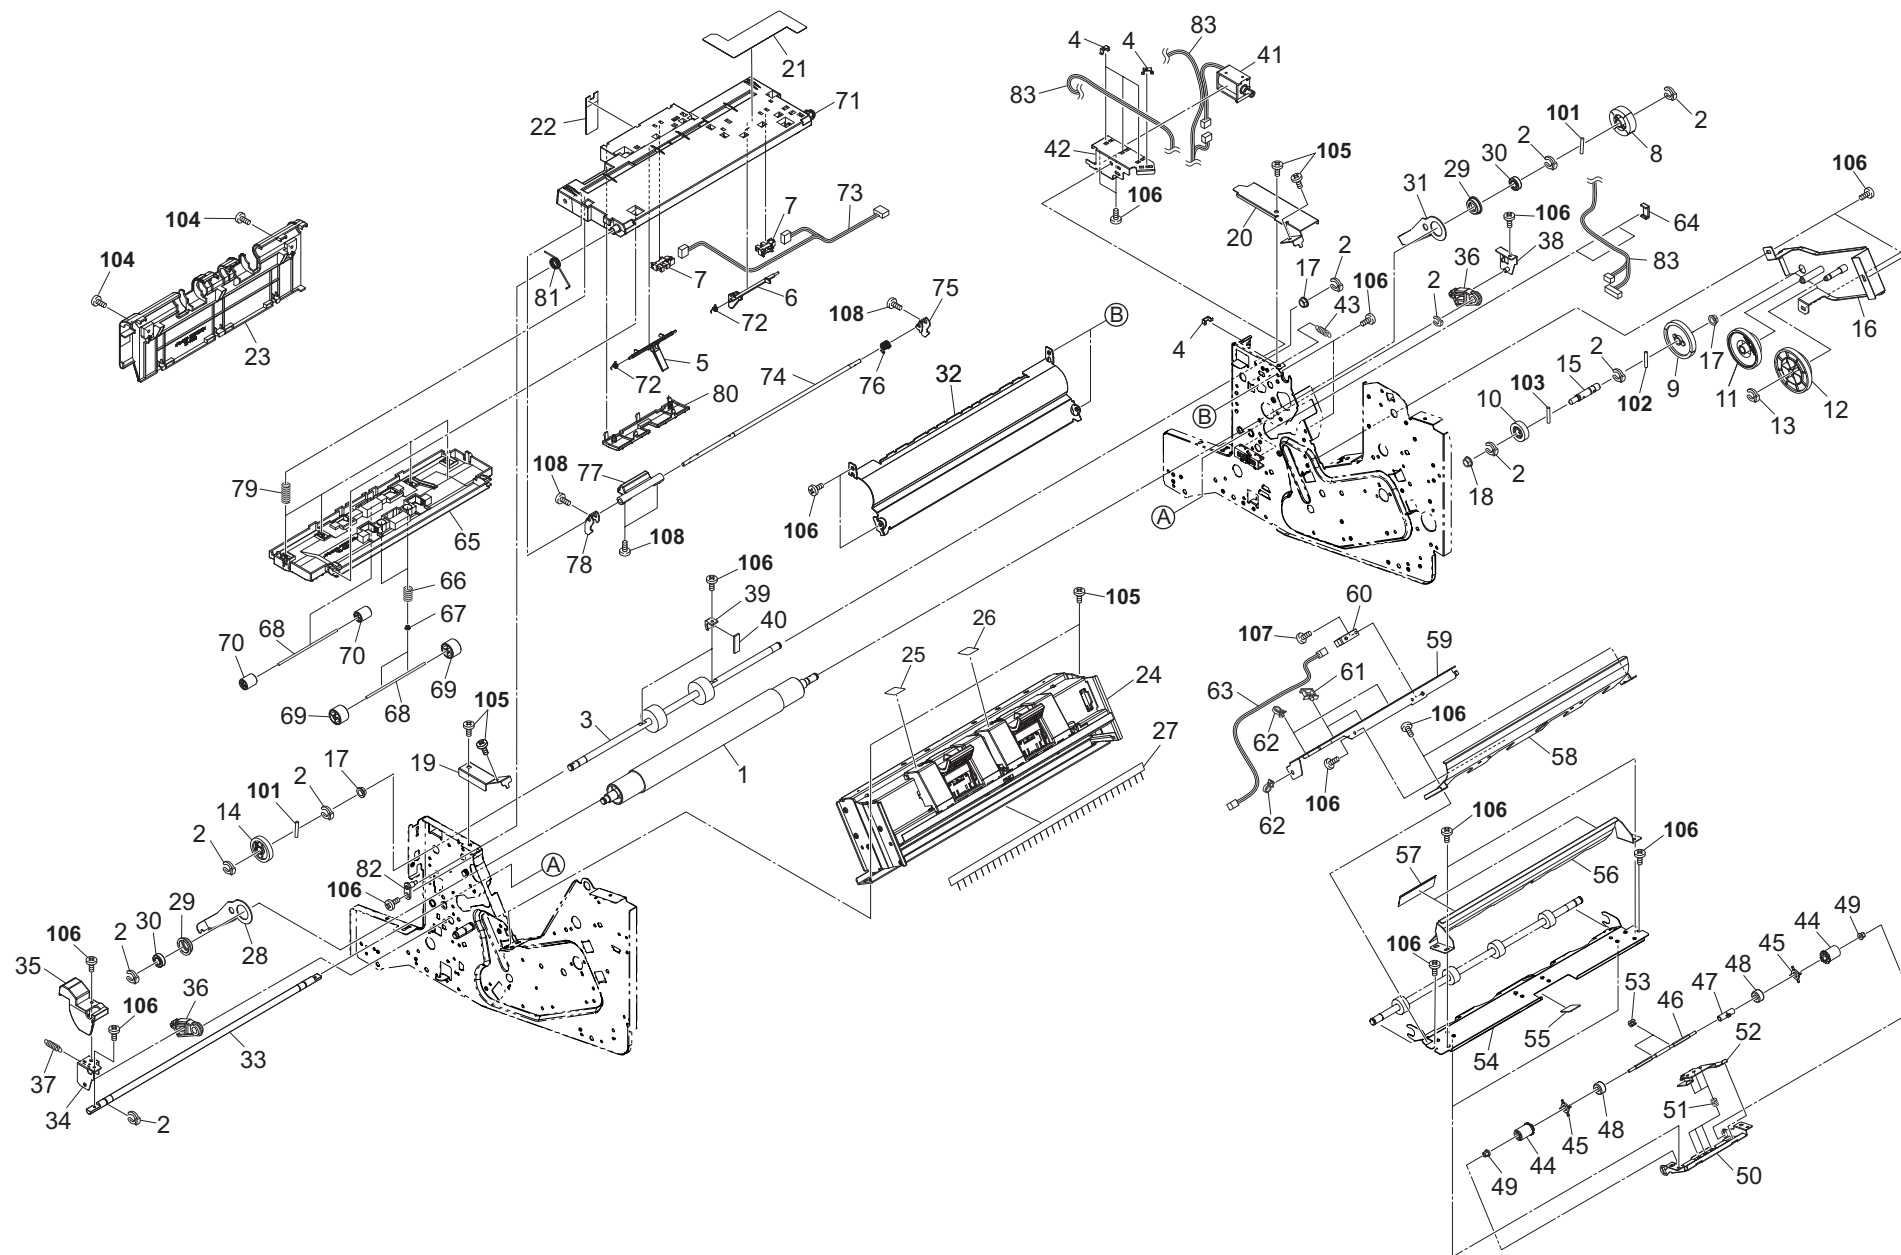


FIG. 3 Booklet Folder 3

3ND-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303ND94070	3ND31032	ROLLER PRESS C		1
	2	2BC06910	2BC06910	STOPPER 6		10
⊙	3	303ND94030	3ND28120	ROLLER EJECT		1
	4	302K931080	2K931080	WIRE STOPPER		5
	5	303ND28252	3ND28252	ACTUATOR STACK LIMIT		1
	6	303ND28170	3ND28170	ACTUATOR EXIT		1
⊙	7	303M894260	NX120700	SENSOR OPT.		2
⊙	8	303ND31220	3ND31220	GEAR Z12 PRESS		1
⊙	9	3H316050	3H316050	GEAR 46 DRUM DRIVE		1
⊙	10	33414050	33414050	GEAR 22,SLEEVE		1
⊙	11	303ND31120	3ND31120	GEAR Z28 Z62		1
⊙	12	303ND31150	3ND31150	GEAR Z53Z120R		1
	13	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		1
⊙	14	303ND31260	3ND31260	GEAR Z30 EXIT		1
	15	303ND31160	3ND31160	SHAFT BLADE DRIVE		1
	16	303ND31110	3ND31110	MOUNT BLADE DRIVE		1
	17	28107310	49028101	BUSH 8		3
	18	302K324450	2K324450	BUSH 6		1
	19	303ND02130	3ND02130	MOUNT STAPLER FRONT		1
	20	303ND02140	3ND02140	MOUNT STAPLER REAR		1
	21	303ND28330	3ND28330	SHEET EXIT OPEN		1
	22	303ND28351	3ND28351	FILM STACK PAPER		1
⊙	23	303ND04051	3ND04051	COVER LEFT		1
⊙	24	303J144010	3J144010	STAPLER EH280		1
	25	3B805070	3B805070	LABEL B		1
	26	3B805080	3B805080	LABEL C		1
	27	303JY37400	3JY37400	DISCHARGER GUIDE UP		1
	28	303ND31080	3ND31080	LEVER PRESSURE C FRONT		1
	29	302K931960	2K931960	HOLDER BEARING 688ZZ		2
	30	7BE008165431H01	BE119730	BEARING 688ZZ		2
	31	303ND31090	3ND31090	LEVER PRESSURE C REAR		1
	32	303ND28090	3ND28090	GUIDE CONVEYING 3 FOLD		1
	33	303ND02150	3ND02150	SHAFT RELEASE		1
	34	303ND02110	3ND02110	WORK PLATE RELEASE FRONT		1
	35	303ND02100	3ND02100	LEVER RELEASE		1
	36	303ND02190	3ND02190	HOOK RELEASE FRONT		2
	37	303JY37260	3JY37260	SPRING SOL A		1
	38	303ND02120	3ND02120	WORK PLATE RELEASE REAR		1
	39	3CA16220	3CA16220	HOLDER,PAPER EJECT REGISTRA TION BRUSH		2
⊙	40	303ND28300	3ND28300	BRUSH PAPER EJ REGIST		2
	41	302K994370	2K944120	SOLENOID FEED SHIFT		1
	42	303ND28211	3ND28211	MOUNT SOLENOID		1
	43	2FG20350	2FG20350	SPRING CLAW		1
	44	303J124610	3J124610	PULLEY FEED IN		4
	45	303ND24240	3ND24240	RUBBER FEED IN		4
	46	303J124640	3J124640	SHAFT PULLEY FEED IN		2
	47	303J124700	3J124700	COLLAR FEED IN		2
	48	66321290	66321290	PULLEY,EJECT		4

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	49	303J124720	3J124720	BUSHING FEED IN		4
	50	303J124630	3J124630	HOLDER PULLEY FEED IN		2
	51	303JX24190	3JX24190	SPRING CONVEYING		6
	52	303J124620	3J124620	MOUNT PULLEY FEED IN		2
	53	303J124710	3J124710	SPACER FEED IN		4
	54	303ND24171	3ND24171	GUIDE FEED IN		1
	55	303ND24210	3ND24210	PAD SENSOR		1
	56	303ND24110	3ND24110	GUIDE FEED LOW		1
	57	303ND24260	3ND24260	FILM FEED IN		2
	58	303ND24120	3ND24120	GUIDE FEED UP		1
	59	303ND24220	3ND24220	GUIDE WIRE FEED		1
⊙	60	303NW94060	NX124090	SENSOR OPT.		1
	61	7YZM610007++H01	YZ023340	ACCESS.SADDLE		2
	62	7YZM410001++H01	YZ037950	ACCESS.BAND		3
	63	303ND46240	3ND46240	WIRE CARRY SENSOR		1
	64	303LL02330	3LL02330	HOLDER WIRE D		2
	65	303ND28071	3ND28071	GUIDE EXIT OPEN		1
	66	2C907360	2C907360	SPRING CURSOR R		2
	67	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		2
	68	302K324460	2K324460	SHAFT FEED		2
	69	302KV06330	2KV06330	PULLEY MIDDLE		2
	70	302F929260	2F929260	PULLEY DU LOW		2
	71	303ND28080	3ND28080	COVER EXIT OPEN		1
	72	302H725A00	2H725A00	SPRING FUSER ACTUATOR		2
	73	303ND46190	3ND46190	WIRE MID SENSOR		1
	74	303ND28190	3ND28190	SHAFT LEFT UP OPEN		1
	75	303J128160	3J128160	PLATE EXIT REAR		1
	76	303J128170	3J128170	SPRING EXIT HOOK		1
	77	303ND28110	3ND28110	HANDLE EXIT		1
	78	303J128150	3J128150	PLATE EXIT FRONT		1
	79	303ND28410	3ND28410	SPRING EJECT		4
	80	303ND28280	3ND28280	LID COVER EXIT		1
	81	2BL16200	2BL16200	SPRING CONVEYING		1
	82	303J902330	3J902330	PIN TABLE FULCRUM B		1
	83	303ND46130	3ND46130	WIRE SOLENOID2		1
	101	7BP512016B0CH01	BP126140	PARALLEL PIN 2.0X16		
	102	7BP512514B0CH01	BP126560	PARALLEL PIN 2.5X14		
	103	5MBP2012WXSP	E0020120	SPRING PIN/ M2 X 12 S-BLK		
	104	7BB782308H	BB111300	+TP-FLAT T.T S SCREW 3X8 SR(BLACK)		
	105	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
	106	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	107	7BB700316H	BB106910	+BIND T.T S SCREW 3X16 SR		
	108	7BB6BB306H	BB105730	+BIND M SCREW 3X6 R		

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

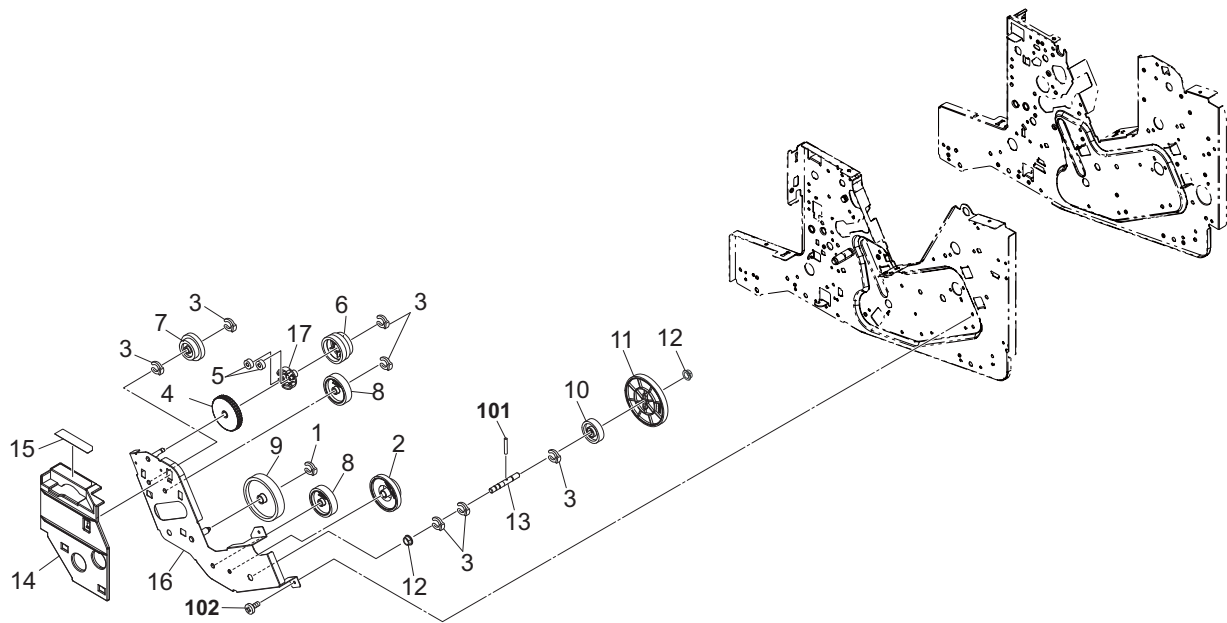


FIG. 4 Booklet Folder 4

3ND-2

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	2BC06910	2BC06910	STOPPER 6		1
	2	303ND31120	3ND31120	GEAR Z28 Z62		1
	3	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		7
⊙	4	303ND31330	3ND31330	HANDLE PRESS DRIVE		1
⊙	5	303ND31310	3ND31310	GEAR Z12S		2
⊙	6	303ND31300	3ND31300	GEAR Z28S Z40R		1
⊙	7	303ND31230	3ND31230	GEAR Z24 Z32		1
⊙	8	303ND31180	3ND31180	GEAR Z36 PRESS		2
⊙	9	303ND31190	3ND31190	GEAR Z56 PRESS		1
⊙	10	303ND31170	3ND31170	GEAR Z38 PRESS		1
⊙	11	303ND31130	3ND31130	GEAR Z126R PRESS		1
	12	302K324450	2K324450	BUSH 6		2
	13	303ND31270	3ND31270	SHAFT PRESS DRIVE		1
	14	303ND31290	3ND31290	COVER PRESS DRIVE		1
	15	303ND34040	3ND34040	LABEL D9		1
	16	303ND31250	3ND31250	PLATE PRESS DRIVE		1
	17	303ND31320	3ND31320	PLATE HANDLE DRIVE		1

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	101	7BP512016B0CH01	BP126140	PARALLEL PIN 2.0X16		
	102	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

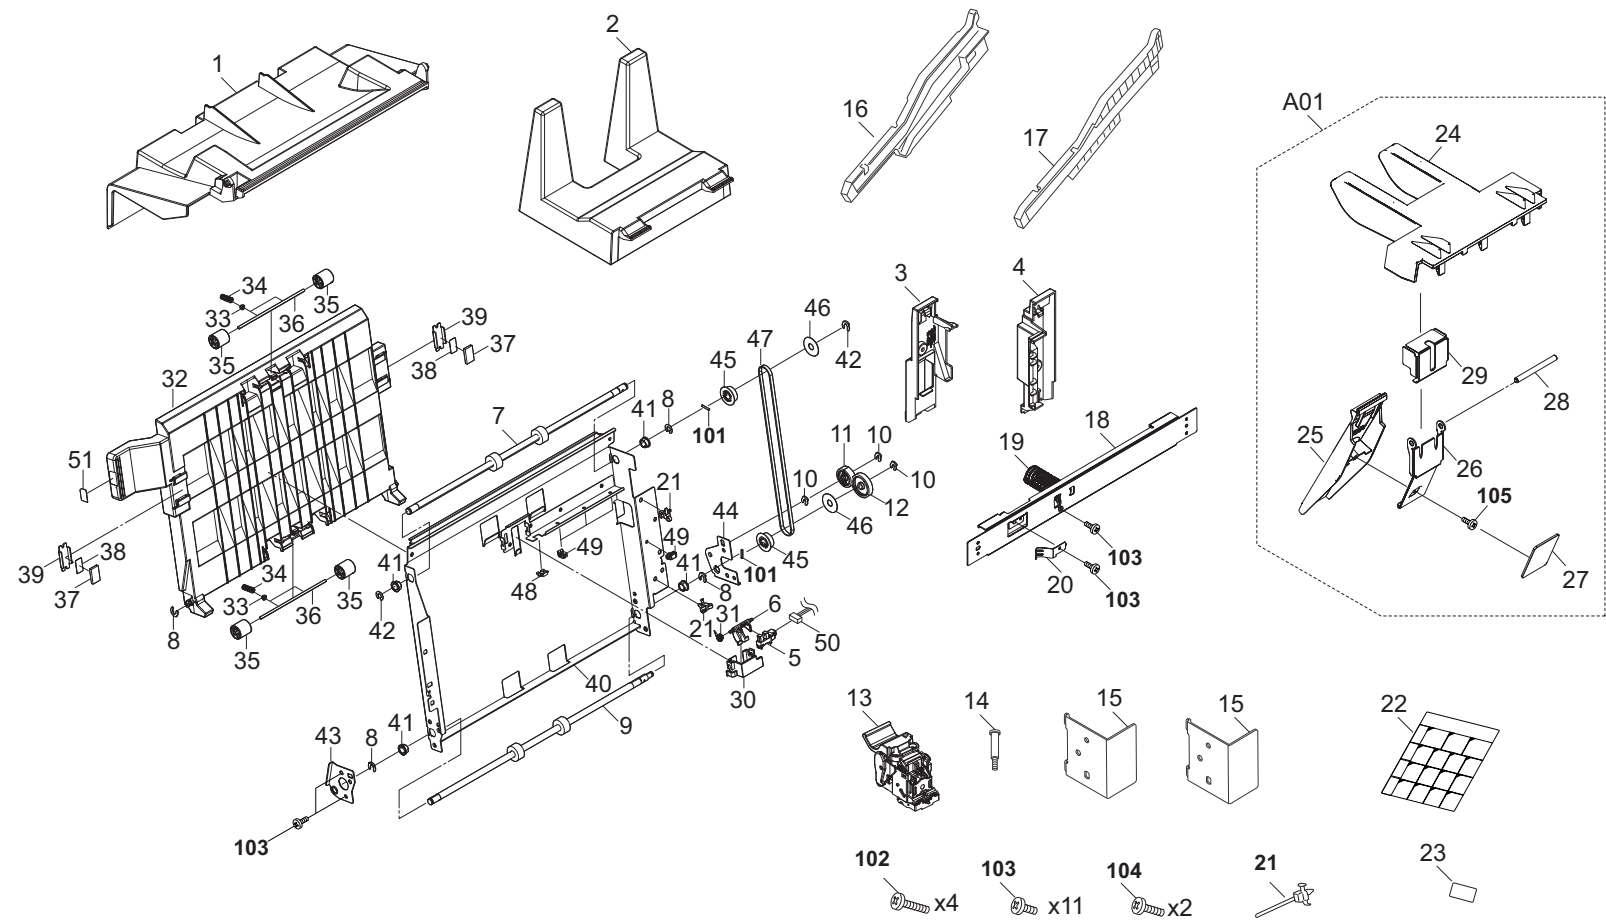


FIG. 5 Accessories

3ND-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303ND04010	3ND04010	TRAY EJECT BASE		1		48	7YZM210006++H01	YZ038000	ACCESS.EDGING		1
⊙	2	303ND04020	3ND04020	TRAY EJECT STOCK		1		49	7YZM610007++H01	YZ023340	ACCESS.SADDLE		3
⊙	3	303ND04030	3ND04030	COVER SADDLE F		1		50	303ND46200	3ND46200	WIRE TRANSPORT SENSOR		1
⊙	4	303ND04041	3ND04041	COVER SADDLE R		1		51	303ND34030	3ND34030	LABEL D8		1
⊙	5	303M894260	NX120700	SENSOR OPT.		1							
⊙	6	303ND37090	3ND37090	ACTUATOR PI		1							
⊙	7	303ND94080	3ND37030	ROLLER BRIDGE UP		1							
	8	2BC06910	2BC06910	STOPPER 6		4							
⊙	9	303ND94090	3ND37040	ROLLER BRIDGE LOW		1							
	10	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		3		101	5MBP2012WXSP	E0020120	SPRING PIN/ M2 X 12 S-BLK		
⊙	11	303NJ31130	3NJ31130	GEAR Z28R		1		102	7BB700412H	BB106830	+BIND T.T S SCREW 4X12 SR		
⊙	12	303NF31050	3NF31050	GEAR Z35L		1		103	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		
⊙	13	303J138010	3J138010	CARTRIDGE EH280		1		104	7BB782410H	BB111310	+TP-FLAT T.T S SCREW 4X10		
	14	3CY02240	3CY02240	REAR PIN,HOOK		1					SR(BLACK)		
	15	303ND02310	3ND02310	LOCK MAIN TRAY		2		105	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	16	303ND02090	3ND02090	RAIL REAR		1							
	17	303ND02080	3ND02080	RAIL FRONT		1							
	18	303ND02230	3ND02230	RETAINER PLATE		1							
	19	303ND02330	3ND02330	SPRING UNIT SET		1							
	20	302FB09810	2FB09810	GROUND PLATE DU REAR		1							
	21	7YZM410001++H01	YZ037950	ACCESS.BAND		3							
	22	303ND34110	3ND34110	LABEL OPERATION		1							
	23	303ND34020	3ND34020	LABEL D7		1							
A1	303ND94100	3ND94100	PARTS ARM PAPER EJECT HOLDER ASSY SP			1							
	24	*303ND28101	3ND28101	ARM PAPER EJECT HOLDER		1							
	25	*303J128290	3J128290	COVER EJECT PAPER HOLDER		1							
	26	*303J128260	3J128260	AUXILIARY PLATE EJECT ARM		1							
	27	*303J128280	3J128280	PAD EJECT PAPER HOLDER		1							
	28	*303J128251	3J128251	SHAFT EXIT PAPER HOLDER		1							
	29	*303ND28320	3ND28320	STOPPER ARM HOLDER		1							
	30	303ND37100	3ND37100	HOLDER FEED PI		1							
	31	302H729120	2H729120	SPRING ACT DU		1							
	32	303ND37010	3ND37010	GUIDE BRIDGE LEFT		1							
	33	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		4							
	34	302H728100	2H728100	SPRING EXIT PULLEY		4							
	35	302H722760	2H722760	PULLEY MIDDLE A		4							
	36	302K324460	2K324460	SHAFT FEED		2							
	37	302GR04380	2GR04380	SEAL MAGNET		2							
	38	302GR04370	2GR04370	MAGNET CLIP DISH		2							
	39	303NB24210	3NB24210	HOLDER MAGNET		2							
	40	303ND37020	3ND37020	GUIDE BRIDGE RIGHT		1							
	41	28107310	49028101	BUSH 8		4							
	42	302K921420	2K921420	CUT-WASHER 6		2							
	43	303ND37060	3ND37060	PLATE GUIDE FULCRUM		1							
	44	303ND37050	3ND37050	PLATE BRIDGE DRIVE		1							
	45	3AP02040	3AP02040	PULLEY 30,DUPLX		2							
	46	303JY38240	3JY38240	SPACER 25		2							
	47	303ND37080	3ND37080	BELT 40S2M486		1							

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

INDEX

3ND-3

	Part.No.	Alternative.	Description	Fig.No.
	28107310	49028101	BUSH 8	1,2,3,5
	2BC06910	2BC06910	STOPPER 6	1,2,3,4,5
	2BL16200	2BL16200	SPRING CONVEYING	3
	2BL16290	2BL16290	CUT WASHER 3	2
	2C907360	2C907360	SPRING CURSOR R	3
	2FB20860	2FB20860	PIN FUSER COVER	2
⊙	2FB27160	2FB27160	INTER LOCK SWITCH	2
	2FG20350	2FG20350	SPRING CLAW	3
	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4	3,5
	302F929260	2F929260	PULLEY DU LOW	3
	302FB09810	2FB09810	GROUND PLATE DU REAR	5
	302FB09830	2FB09830	CUT WASHER 4	2
	302FG07020	2FG07020	PULLEY,CASSETTE RAIL	2
	302GR04370	2GR04370	MAGNET CLIP DISH	5
	302GR04380	2GR04380	SEAL MAGNET	5
	302H017260	2H017260	BELT SCANNER	1
	302H722760	2H722760	PULLEY MIDDLE A	5
	302H725A00	2H725A00	SPRING FUSER ACTUATOR	3
	302H728100	2H728100	SPRING EXIT PULLEY	5
	302H729120	2H729120	SPRING ACT DU	5
⊙	302HN44100	2HN44100	MOTOR REVERSE	1,2
⊙	302K031740	2K031740	GEAR BELT CLEANING DRIVE Z20L	2
	302K324450	2K324450	BUSH 6	1,2,3,4
	302K324460	2K324460	SHAFT FEED	3,5
	302K921120	2K921120	STOPPER 8	2
	302K921420	2K921420	CUT-WASHER 6	1,5
	302K926050	2K926050	NUT FUSER	2
	302K928190	2K928190	SPRING-TORSION SWITCHBACK	1
	302K931080	2K931080	WIRE STOPPER	3
⊙	302K931490	2K931490	GEAR Z28L	2
	302K931960	2K931960	HOLDER BEARING 688ZZ	3
⊙	302K994370	2K944120	SOLENOID FEED SHIFT	3
	302KV06330	2KV06330	PULLEY MIDDLE	3
⊙	302LC94281	2LC94281	PARTS MOTOR-BL W40 SP	1
	302LF39050	2LF39050	GUIDE WIRE FRONT PWB	2
	303J102210	3J102210	SPRING RELEASE	2
	303J124020	3J124020	CURSOR FRONT	1
	303J124030	3J124030	CURSOR REAR	1
	303J124041	3J124041	GUIDE REGIST	1
	303J124050	3J124050	SHAFT LOWER CURSOR	1
	303J124070	3J124070	SHAFT CONVEYING DRIVE R	1
	303J124080	3J124080	SHAFT CONVEYING IDLE R	1
	303J124110	3J124110	BELT CONVEYING REGIST	1
	303J124142	3J124142	BLADE MID PRESSING	1
	303J124151	3J124151	PLATE BLADE SUPPORT	1
	303J124160	3J124160	HOLDER BLADE	1
⊙	303J124170	3J124170	GEAR 55 BLADE PRESSURE	1
	303J124210	3J124210	BUSHING BLADE	1
	303J124221	3J124221	STAY SADDLE	1
	303J124231	3J124231	GUIDE CONVEYING LOWER F	1

	Part.No.	Alternative.	Description	Fig.No.
	303J124241	3J124241	GUIDE CONVEYING LOWER R	1
	303J124341	3J124341	CURSOR FW FRONT	1
	303J124351	3J124351	CURSOR FW REAR	1
	303J124370	3J124370	RACK CURSOR	1
	303J124440	3J124440	SHAFT CONVEYING IDLE	1
	303J124450	3J124450	SHAFT BLADE	1
	303J124460	3J124460	HOLDER CONVEYING LIFT	1
	303J124481	3J124481	MOUNT BELT R	1
	303J124490	3J124490	MOUNT BELT L	1
	303J124550	3J124550	SHEET STAY SADDLE LOW	1
	303J124562	3J124562	SHEET GUIDE REGIST	1
	303J124610	3J124610	PULLEY FEED IN	3
	303J124620	3J124620	MOUNT PULLEY FEED IN	3
	303J124630	3J124630	HOLDER PULLEY FEED IN	3
	303J124640	3J124640	SHAFT PULLEY FEED IN	3
	303J124660	3J124660	SHEET CURSOR FW	1
	303J124670	3J124670	SPACER BLADE	1
	303J124700	3J124700	COLLAR FEED IN	3
	303J124710	3J124710	SPACER FEED IN	3
	303J124720	3J124720	BUSHING FEED IN	3
	303J128150	3J128150	PLATE EXIT FRONT	3
	303J128160	3J128160	PLATE EXIT REAR	3
	303J128170	3J128170	SPRING EXIT HOOK	3
	303J128251	3J128251	SHAFT EXIT PAPER HOLDER	5
	303J128260	3J128260	AUXILIARY PLATE EJECT ARM	5
	303J128280	3J128280	PAD EJECT PAPER HOLDER	5
	303J128290	3J128290	COVER EJECT PAPER HOLDER	5
	303J131040	3J131040	SHAFT BLADE DRIVE L	1
	303J131340	3J131340	MOUNT BLADE PI	1
⊙	303J138010	3J138010	CARTRIDGE EH280	5
⊙	303J144010	3J144010	STAPLER EH280	3
	303J902330	3J902330	PIN TABLE FULCRUM B	3
	303JX24190	3JX24190	SPRING CONVEYING	3
	303JY37220	3JY37220	STATIC ELIMINATOR CURSOR	1
	303JY37260	3JY37260	SPRING SOL A	3
	303JY37400	3JY37400	DISCHARGER GUIDE UP	3
	303JY38240	3JY38240	SPACER 25	1,5
	303LL02330	3LL02330	HOLDER WIRE D	3
	303LV24010	3LV24010	COVER WIRE	1
	303LV28051	3LV28051	SPRING PRESSURE	2
⊙	303M894260	NX120700	SENSOR OPT.	1,3,5
	303NB24210	3NB24210	HOLDER MAGNET	5
⊙	303NB31010	3NB31010	GEAR Z35R	2
⊙	303NB94051	3NB94051	PARTS MOTOR-BL BRAKE SP	1
	303ND02030	3ND02030	BASE LEFT	2
	303ND02050	3ND02050	STAY LEFT	2
	303ND02060	3ND02060	MOUNT SHAFT RAIL	2
	303ND02070	3ND02070	SHAFT RAIL	2
	303ND02080	3ND02080	RAIL FRONT	5
	303ND02090	3ND02090	RAIL REAR	5

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.
	303ND02100	3ND02100	LEVER RELEASE	3
	303ND02110	3ND02110	WORK PLATE RELEASE FRONT	3
	303ND02120	3ND02120	WORK PLATE RELEASE REAR	3
	303ND02130	3ND02130	MOUNT STAPLER FRONT	3
	303ND02140	3ND02140	MOUNT STAPLER REAR	3
	303ND02150	3ND02150	SHAFT RELEASE	3
	303ND02160	3ND02160	STAY RIGHT LOW	2
	303ND02170	3ND02170	STAY BLADE LOWER	2
	303ND02180	3ND02180	MOUNT INTERLOCK TRAY	2
	303ND02190	3ND02190	HOOK RELEASE FRONT	3
	303ND02200	3ND02200	MOUNT PULLEY RAIL	2
	303ND02230	3ND02230	RETAINER PLATE	5
	303ND02281	3ND02281	FULCRUM PLATE RELEASE	2
	303ND02291	3ND02291	GUIDE WIRE	2
	303ND02310	3ND02310	LOCK MAIN TRAY	5
	303ND02320	3ND02320	STAY RIGHT	1
	303ND02330	3ND02330	SPRING UNIT SET	5
	303ND02350	3ND02350	PLATE COVER PWB	2
⊙	303ND04010	3ND04010	TRAY EJECT BASE	5
⊙	303ND04020	3ND04020	TRAY EJECT STOCK	5
⊙	303ND04030	3ND04030	COVER SADDLE F	5
⊙	303ND04041	3ND04041	COVER SADDLE R	5
⊙	303ND04051	3ND04051	COVER LEFT	3
	303ND24010	3ND24010	STAY SIDE REGIST UP	1
	303ND24020	3ND24020	STAY SIDE REGIST LOW	1
	303ND24030	3ND24030	MOUNT MOTOR	1
	303ND24040	3ND24040	PLATE ADJUST	1
⊙	303ND24060	3ND24060	GEAR Z56R-Z26S	1
⊙	303ND24070	3ND24070	GEAR Z54-P30	1
	303ND24080	3ND24080	SPACER CURSOR	1
	303ND24110	3ND24110	GUIDE FEED LOW	3
	303ND24120	3ND24120	GUIDE FEED UP	3
	303ND24130	3ND24130	MOUNT HOLDER SENSOR	1
	303ND24140	3ND24140	ACTUATOR HOLDER SENSOR	1
	303ND24150	3ND24150	MOUNT PAPER SENSOR	1
	303ND24160	3ND24160	ACTUATOR PAPER	1
	303ND24171	3ND24171	GUIDE FEED IN	3
	303ND24210	3ND24210	PAD SENSOR	3
	303ND24220	3ND24220	GUIDE WIRE FEED	3
	303ND24230	3ND24230	SHAFT CONVEYING DRIVE L	1
	303ND24240	3ND24240	RUBBER FEED IN	3
	303ND24260	3ND24260	FILM FEED IN	3
	303ND24270	3ND24270	FILM BLADE F	1
	303ND24280	3ND24280	FILM BLADE R	1
	303ND24290	3ND24290	SHEET STAY SADDLE UP	1
	303ND24300	3ND24300	SHEET STAY SADDLE UP M	1
	303ND24310	3ND24310	SPRING ACT	1
	303ND24320	3ND24320	BELT CONVEYING POSITIONING	1
	303ND24330	3ND24330	JOINT CONVEYING BELT	1
	303ND28010	3ND28010	GUIDE STOP UP	2

	Part.No.	Alternative.	Description	Fig.No.
	303ND28021	3ND28021	GUIDE STOP LOW	2
	303ND28030	3ND28030	GUIDE STOP	2
	303ND28040	3ND28040	GUIDE EXIT SHIFT	2
	303ND28050	3ND28050	GUIDE EXIT	2
	303ND28061	3ND28061	GUIDE CONVEYING EXIT	2
	303ND28071	3ND28071	GUIDE EXIT OPEN	3
	303ND28080	3ND28080	COVER EXIT OPEN	3
	303ND28090	3ND28090	GUIDE CONVEYING 3 FOLD	3
	303ND28101	3ND28101	ARM PAPER EJECT HOLDER	5
	303ND28110	3ND28110	HANDLE EXIT	3
	303ND28130	3ND28130	FRAME LEFT FRONT	2
	303ND28140	3ND28140	FRAME LEFT REAR	2
	303ND28150	3ND28150	LEVER LEFT	2
	303ND28170	3ND28170	ACTUATOR EXIT	3
	303ND28180	3ND28180	MOUNT INTERLOCK LEFT	2
	303ND28190	3ND28190	SHAFT LEFT UP OPEN	3
	303ND28200	3ND28200	HINGE LEFT	2
	303ND28211	3ND28211	MOUNT SOLENOID	3
	303ND28220	3ND28220	LEVER SOL GUIDE EXIT	2
	303ND28252	3ND28252	ACTUATOR STACK LIMIT	3
	303ND28280	3ND28280	LID COVER EXIT	3
	303ND28290	3ND28290	SPRING LEFT	2
	303ND28300	3ND28300	BRUSH PAPER EJ REGIST	3
	303ND28310	3ND28310	CUSHION GUIDE	2
	303ND28320	3ND28320	STOPPER ARM HOLDER	5
	303ND28330	3ND28330	SHEET EXIT OPEN	3
	303ND28340	3ND28340	FILM EXIT GUIDE	2
	303ND28351	3ND28351	FILM STACK PAPER	3
	303ND28360	3ND28360	FILM STOP LOW A	2
	303ND28370	3ND28370	FILM STOP LOW B	2
	303ND28380	3ND28380	FILM STOP LOW C	2
	303ND28410	3ND28410	SPRING EJECT	3
	303ND31040	3ND31040	ARM BLADE PRESS	1
	303ND31060	3ND31060	LEVER PRESSURE B FRONT	2
	303ND31070	3ND31070	LEVER PRESSURE B REAR	2
	303ND31080	3ND31080	LEVER PRESSURE C FRONT	3
	303ND31090	3ND31090	LEVER PRESSURE C REAR	3
	303ND31100	3ND31100	SPACER ROLLER	2
	303ND31110	3ND31110	MOUNT BLADE DRIVE	3
⊙	303ND31120	3ND31120	GEAR Z28 Z62	3,4
⊙	303ND31130	3ND31130	GEAR Z126R PRESS	4
⊙	303ND31150	3ND31150	GEAR Z53Z120R	3
	303ND31160	3ND31160	SHAFT BLADE DRIVE	3
⊙	303ND31170	3ND31170	GEAR Z38 PRESS	4
⊙	303ND31180	3ND31180	GEAR Z36 PRESS	4
⊙	303ND31190	3ND31190	GEAR Z56 PRESS	4
⊙	303ND31200	3ND31200	GEAR Z30 PRESS	2
⊙	303ND31210	3ND31210	GEAR Z16 PRESS	2
⊙	303ND31220	3ND31220	GEAR Z12 PRESS	3
⊙	303ND31230	3ND31230	GEAR Z24 Z32	4

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.
⊙	303ND31250	3ND31250	PLATE PRESS DRIVE	4
⊙	303ND31260	3ND31260	GEAR Z30 EXIT	3
	303ND31270	3ND31270	SHAFT PRESS DRIVE	4
	303ND31280	3ND31280	CAM BLADE	1
	303ND31290	3ND31290	COVER PRESS DRIVE	4
⊙	303ND31300	3ND31300	GEAR Z28S Z40R	4
⊙	303ND31310	3ND31310	GEAR Z12S	4
	303ND31320	3ND31320	PLATE HANDLE DRIVE	4
⊙	303ND31330	3ND31330	HANDLE PRESS DRIVE	4
	303ND31340	3ND31340	PIN BLADE DRIVE	1
	303ND31500	3ND31500	PLATE JOINT DRIVE	2
⊙	303ND31510	3ND31510	GEAR Z30R Z30R	2
⊙	303ND31520	3ND31520	GEAR Z52L	2
	303ND31530	3ND31530	MOUNT MOTOR LOW	2
	303ND31540	3ND31540	PLATE JOINT FULCRUM	2
	303ND34020	3ND34020	LABEL D7	5
	303ND34030	3ND34030	LABEL D8	5
	303ND34040	3ND34040	LABEL D9	4
	303ND34050	3ND34050	LABEL UP	2
	303ND34110	3ND34110	LABEL OPERATION	5
	303ND37010	3ND37010	GUIDE BRIDGE LEFT	5
	303ND37020	3ND37020	GUIDE BRIDGE RIGHT	5
	303ND37050	3ND37050	PLATE BRIDGE DRIVE	5
	303ND37060	3ND37060	PLATE GUIDE FULCRUM	5
	303ND37080	3ND37080	BELT 40S2M486	5
	303ND37090	3ND37090	ACTUATOR PI	5
	303ND37100	3ND37100	HOLDER FEED PI	5
	303ND46010	3ND46010	WIRE INTERFACE	2
	303ND46020	3ND46020	WIRE INTERLOCK SWITCH	2
	303ND46030	3ND46030	WIRE GIDE L SWITCH	2
	303ND46040	3ND46040	WIRE UNITSET SWITCH	2
	303ND46050	3ND46050	WIRE TRY SWITCH	2
	303ND46060	3ND46060	WIRE MOTOR ST ALL	2
	303ND46090	3ND46090	WIRE WIDTH MOTOR	1
	303ND46100	3ND46100	WIRE SOLENOID1	2
	303ND46110	3ND46110	WIRE STP MOTOR	2
	303ND46120	3ND46120	WIRE MOTOR	2
	303ND46130	3ND46130	WIRE SOLENOID2	3
	303ND46160	3ND46160	WIRE SENSOR ALL	2
	303ND46170	3ND46170	WIRE BUNDUP SENSOR	1
	303ND46180	3ND46180	WIRE UNDER WIDTH SENSOR	1
	303ND46190	3ND46190	WIRE MID SENSOR	3
	303ND46200	3ND46200	WIRE TRANSPORT SENSOR	5
	303ND46210	3ND46210	WIRE PAPER SENSOR	1
	303ND46220	3ND46220	WIRE UPPER WIDTH SENSOR	1
	303ND46240	3ND46240	WIRE CARRY SENSOR	3
	303ND46250	3ND46250	WIRE EARTH	2
⊙	303ND94011	3ND94011	PARTS PWB MAIN ASSY SP	2
⊙	303ND94020	3ND24180	ROLLER FEED IN	2
⊙	303ND94030	3ND28120	ROLLER EJECT	3

	Part.No.	Alternative.	Description	Fig.No.
⊙	303ND94040	3ND28260	ROLLER EJECT 3 FOLD	2
⊙	303ND94050	3ND31012	ROLLER PRESS A	2
⊙	303ND94060	3ND31022	ROLLER PRESS B	2
⊙	303ND94070	3ND31032	ROLLER PRESS C	3
⊙	303ND94080	3ND37030	ROLLER BRIDGE UP	5
⊙	303ND94090	3ND37040	ROLLER BRIDGE LOW	5
	303ND94100	3ND94100	PARTS ARM PAPER EJECT HOLDER ASSY SP	5
⊙	303NF31050	3NF31050	GEAR Z35L	5
⊙	303NJ31130	3NJ31130	GEAR Z28R	5
⊙	303NW94060	NX124090	SENSOR OPT.	1,3
⊙	33414050	33414050	GEAR 22,SLEEVE	3
	34907150	34907150	PULLEY,CASSETTE	2
	3AK07230	3AK07230	PULLEY 20S3M	1
	3AP02040	3AP02040	PULLEY 30,DUPLEX	1,5
	3B805070	3B805070	LABEL B	3
	3B805080	3B805080	LABEL C	3
	3B807640	3B807640	PAD,CURSOR	1
	3CA16220	3CA16220	HOLDER,PAPER EJECT REGISTRATION BRUSH	3
	3CY02240	3CY02240	REAR PIN,HOOK	5
⊙	3H316050	3H316050	GEAR 46 DRUM DRIVE	3
	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	1,2,3,4,5
	66321290	66321290	PULLEY,EJECT	3
	7BE008165431H01	BE119730	BEARING 688ZZ	3
	7BE010197431H01	BE119740	BEARING 6800ZZ(7MM)	2
	7YZM110001++H01	YZ009420	ACCESS.BUSHING	1,2
	7YZM110003++H01	YZ034780	ACCESS.BUSHING	1
	7YZM210002++H01	YZ004730	ACCESS.EDGING	2
	7YZM210005++H01	YZ037990	ACCESS.EDGING	2
	7YZM210006++H01	YZ038000	ACCESS.EDGING	1,2,5
	7YZM410001++H01	YZ037950	ACCESS.BAND	1,2,3,5
	7YZM510007++H01	YZ042780	ACCESS.SPACER	2
	7YZM610001++H01	YZ010230	ACCESS.SADDLE	1
	7YZM610004++H01	YZ012210	ACCESS.SADDLE	2
	7YZM610007++H01	YZ023340	ACCESS.SADDLE	1,2,3,5
	M2104390	M2104390	EDGING,EDS-0607L(KITAGAWA)	1

• Parts with "⊙" indicate regular maintenance parts.

MT-730/MT-730(B)

—— CONTENTS ——

FIG. 1	Covers	2
FIG. 2	Paper Conveying Section 1	4
FIG. 3	Paper Conveying Section 2	6
FIG. 4	Accessories	8
FIG. 5	Options (AK-736) (MT-730(B))	10
	• INDEX	12

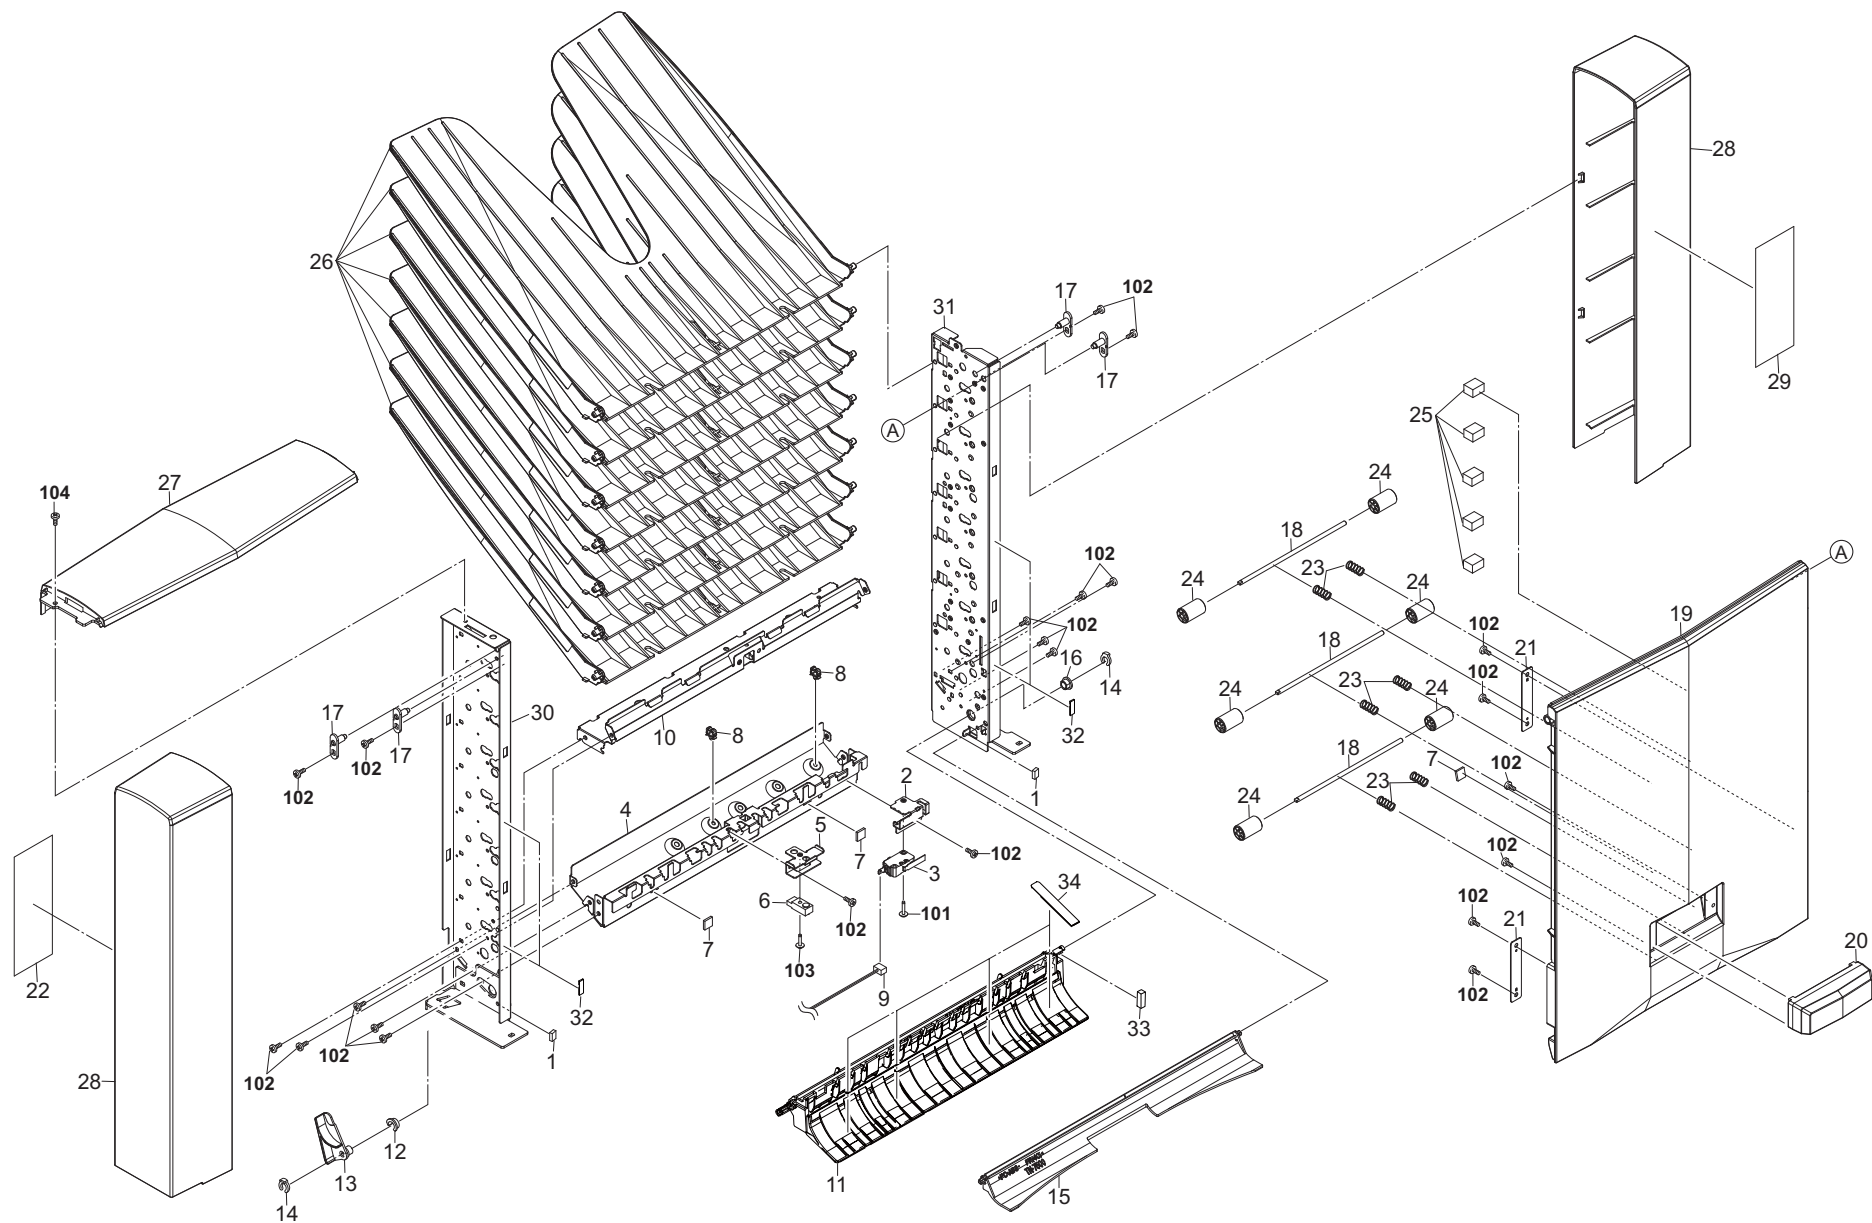


FIG. 1 Covers

3N0-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303JY28280	3JY28280	CUSHION EJECT GUIDE B		2
	2	303LW24110	3LW24110	MOUNT INTER ROCK		1
	3	2FB27160	2FB27160	INTER LOCK SWITCH		1
	4	303LW24031	3LW24031	STAY EJECT DF		1
	5	303LW24100	3LW24100	MOUNT SENSOR EJECT		1
	6	303H327460	3H327460	SENSOR A,SEPARATION		1
	7	303H321120	3H321120	CUSHION HOLDER		3
	8	7YZM610007++H01	YZ023340	ACCESS.SADDLE		2
	9	303LW46040	3LW46040	WIRE MIDDLE		1
	10	303LW24040	3LW24040	STAY EJECT		1
	11	303N024020	3N024020	GUIDE FEED IN		1
	12	303LW02130	3LW02130	BUSH LEVER		1
	13	303LW24550	3LW24550	LEVER SEPARATE CLAW B		1
	14	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		2
	15	303LW24141	3LW24141	UPPER GUIDE ADMISSION		1
	16	302H702590	2H702590	BUSH SCREW		1
	17	303J902291	3J902291	PIN TABLE FULCRUM		4
	18	303LW24190	3LW24190	SHAFT FEED PULLEY		3
	19	303LW04030	3LW04030	COVER VERTICAL		1
	20	303LW04070	3LW04070	LEVER VERTICAL COVER		1
	21	5MMS626SD003	2BM04100	PLATE MAGCHATCH		2
	22	303LW34030	3LW34030	LABEL PAPER CAUTION		1
	23	2FG06070	2FG06070	SPRING FEED JOINT		6
	24	302H008220	2H008220	PULLEY 15 MPF FEED		6
	25	303J128320	3J128320	SPONGE EJECT		5
	26	303J204070	3J204070	BIN EJECT S		7
	27	303LW04020	3LW04020	COVER TOP		1
	28	303LW04010	3LW04010	COVER SIDE		2
	29	303LW34020	3LW34020	LABEL JAM		1
	30	303LW02011	3LW02011	FRAME FRONT		1
	31	303LW02021	3LW02021	FRAME REAR		1
	32	302J002100	2J002100	SHEET GUIDE		4
	33	303JY24AA0	3JY24AA0	CUSHION FEED		1
	34	303N024060	3N024060	FILM FEED IN		4
•	101	7BB600320H	BB105740	+BIND M SCREW 3X20 R		
	102	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	103	7BB607312H	BB107140	+TP-CUP M SCREW 3X12 R		
	104	7BB702308H	BB107060	+TP-FLAT T.T S SCREW 3X8 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

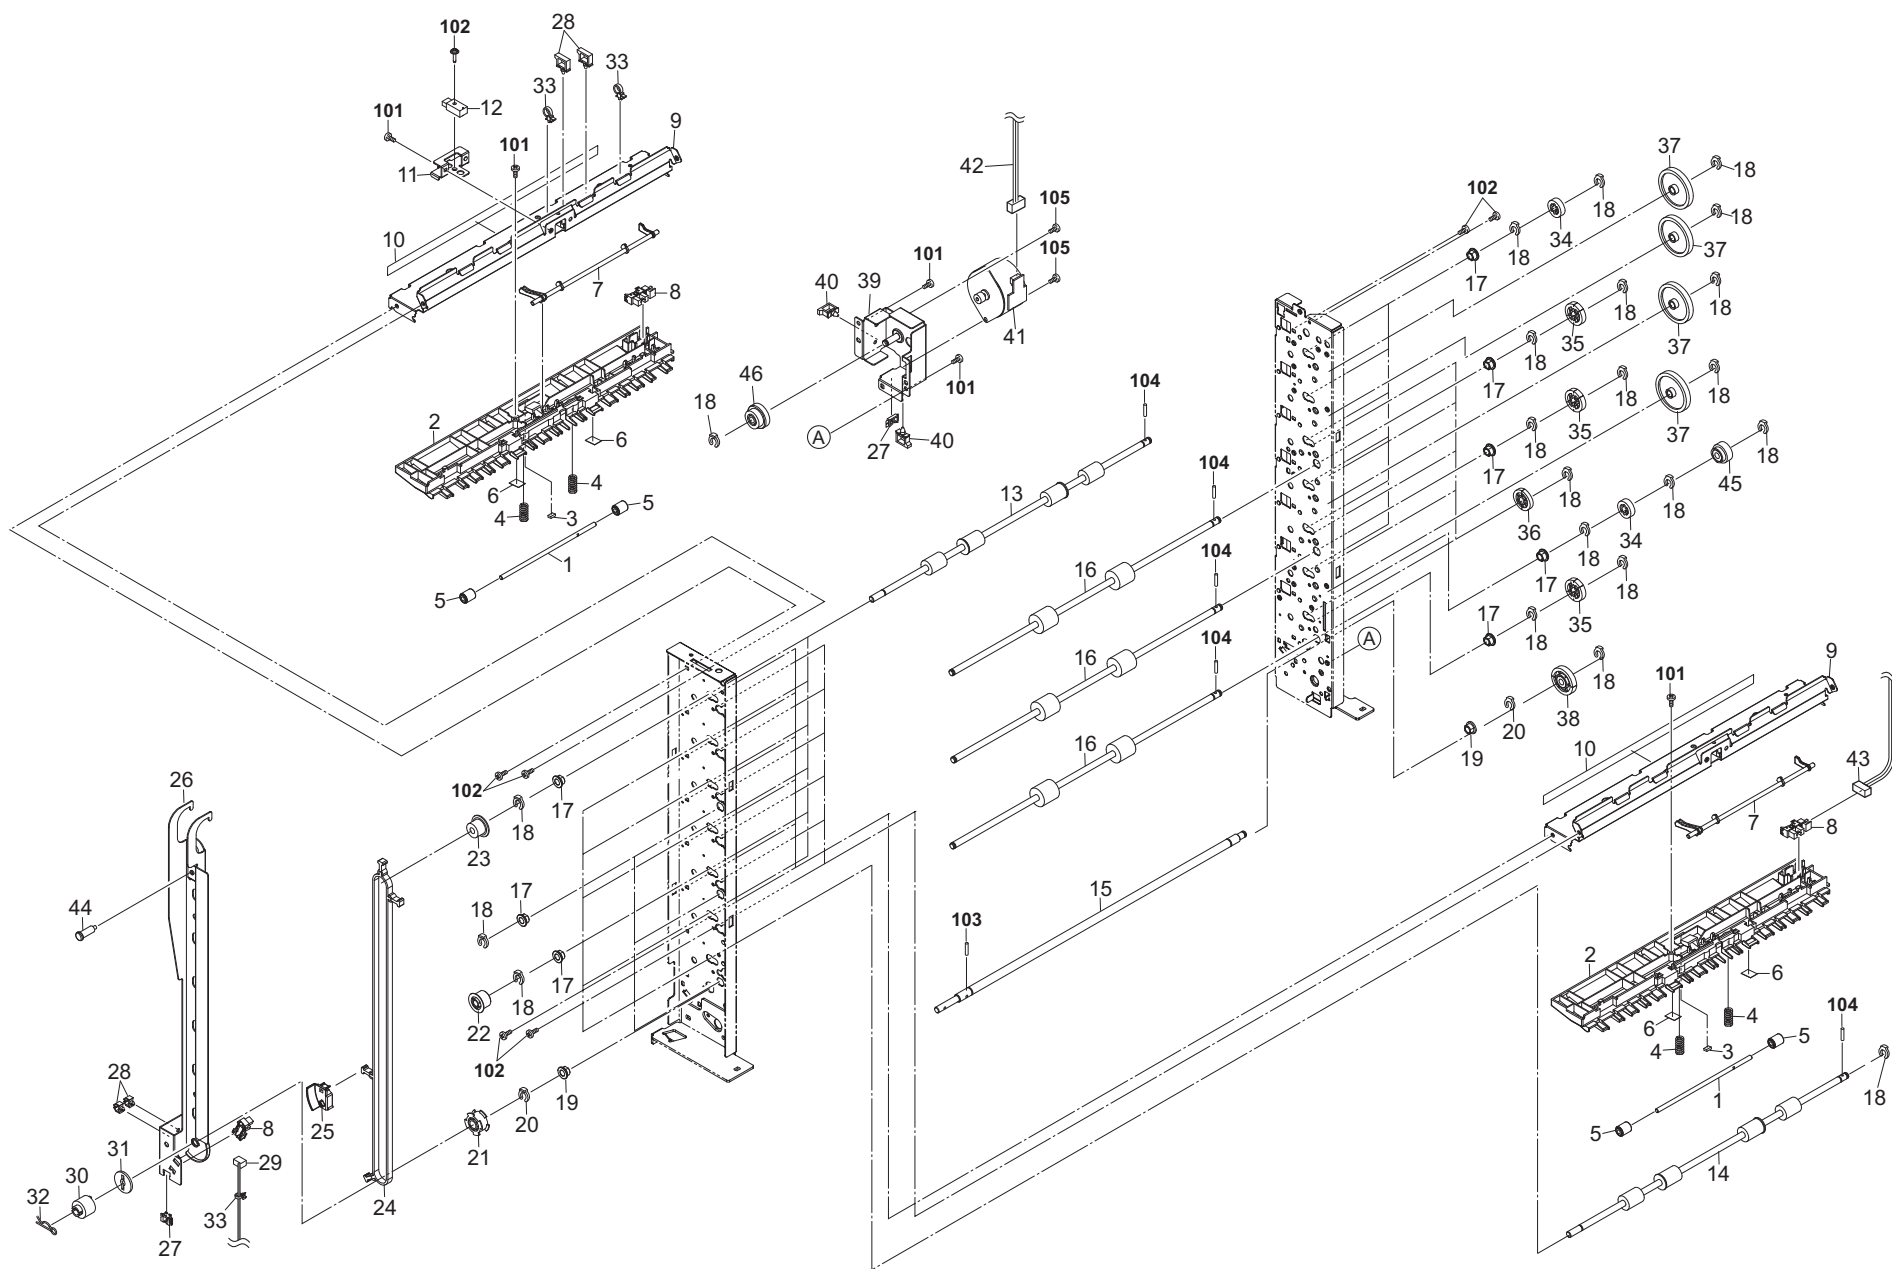


FIG. 2 Paper Feed Section 1

3N0-1

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	1	303JY38180	3JY38180	SHAFT PULLEY SC		7
	2	303LW24050	3LW24050	UPPER GUIDE EJECT		7
	3	303JY28280	3JY28280	CUSHION EJECT GUIDE B		7
	4	303LW24160	3LW24160	SPRING EXIT		14
⊙	5	303LW24060	3LW24060	PULLEY EJECT		14
	6	303LW24170	3LW24170	FILM EJECT		14
	7	303LW24070	3LW24070	ACTUATOR OVERFLOW		7
⊙	8	2C927210	2C927210	SENSOR 248NL1		8
	9	303LW24040	3LW24040	STAY EJECT		7
⊙	10	63212210	63212210	STATIC ELIMINATOR,EJECT		7
	11	303LW24100	3LW24100	MOUNT SENSOR EJECT		1
⊙	12	303H327470	3H327470	SENSOR B SEPARATION		1
⊙	13	303LW94020	3LW94020	PARTS ROLLER EJECT A		6
⊙	14	303N094020	3N094020	PARTS ROLLER EJECT C SP		1
	15	303LW24520	3LW24520	SHAFT SEPARATE DRIVE		1
⊙	16	303LW94010	3LW94010	PARTS ROLLER CONVEYING		3
	17	3CY07080	3CY07080	BUSHING 6		20
	18	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		43
	19	28107310	49028101	BUSH 8		2
	20	2BC06910	2BC06910	STOPPER 6		2
⊙	21	3AK07230	3AK07230	PULLEY 20S3M		1
⊙	22	3BC08101	3BC08101	PULLEY,REGISTRATION		6
⊙	23	75722252	75722252	IDLE PULLEY 15		1
⊙	24	3B807380	3B807380	LOWER BELT,MIDDLE TRAY		1
	25	303LW24530	3LW24530	SUPPORTPLATE BELT		1
	26	303LW24540	3LW24540	MOUNT SEPARATE PI		1
	27	7YZM210006++H01	YZ038000	ACCESS.EDGING		2
	28	7YZM610007++H01	YZ023340	ACCESS.SADDLE		4
	29	303LW46050	3LW46050	WIRE HP SENSOR		1
⊙	30	36706900	36706900	TORQUE LIMITER,PAPER FEED		1
	31	3CG22030	3CG22030	JOINT,TORQUE LIMITER		1
	32	E9000080	E9000080	PIN SNAP P8		1
⊙	33	M21AH010	M21AH010	BAND,RSG-130-V0(KITAGAWA)		3
	34	3H622320	3H622320	GEAR 20 LIFT		7
⊙	35	66018180	66018180	GEAR 26,SPIRAL ROLLER		3
⊙	36	2BL06190	2BL06190	GEAR Z25 FEED		5
⊙	37	302F909540	2F909540	GEAR Z49		4
⊙	38	3HK22040	3HK22040	GR 33 CONV		1
	39	303N031010	3N031010	MOUNT MOTOR		1
	40	7YZM610008++H01	YZ037940	ACCESS.SADDLE		2
⊙	41	2FB27110	2FB27110	MOTOR FEED		1
	42	303LW46030	3LW46030	WIRE MOTOR		1
	43	303LW46070	3LW46070	WIRE SENSOR		1
	44	3036006141	36006141	PIN,JAM REMOVAL DIAL		1
⊙	45	303N031020	3N031020	GEAR Z22		1
⊙	46	303N031030	3N031030	GEAR Z28 Z21		1
	101	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	102	7BB607312H	BB107140	+TP-CUP M SCREW 3X12 R		
	103	5MBP2012WPLD	E5120120	PARALLEL PIN / M2 X 12 SUS-DP		
	104	5MBP2010WXSP	E0020100	SPRING PIN / M2 X 10 S-BLK		
	105	7BB702306H	BB105630	+TP-FLAT T.T S SCREW 3X6 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

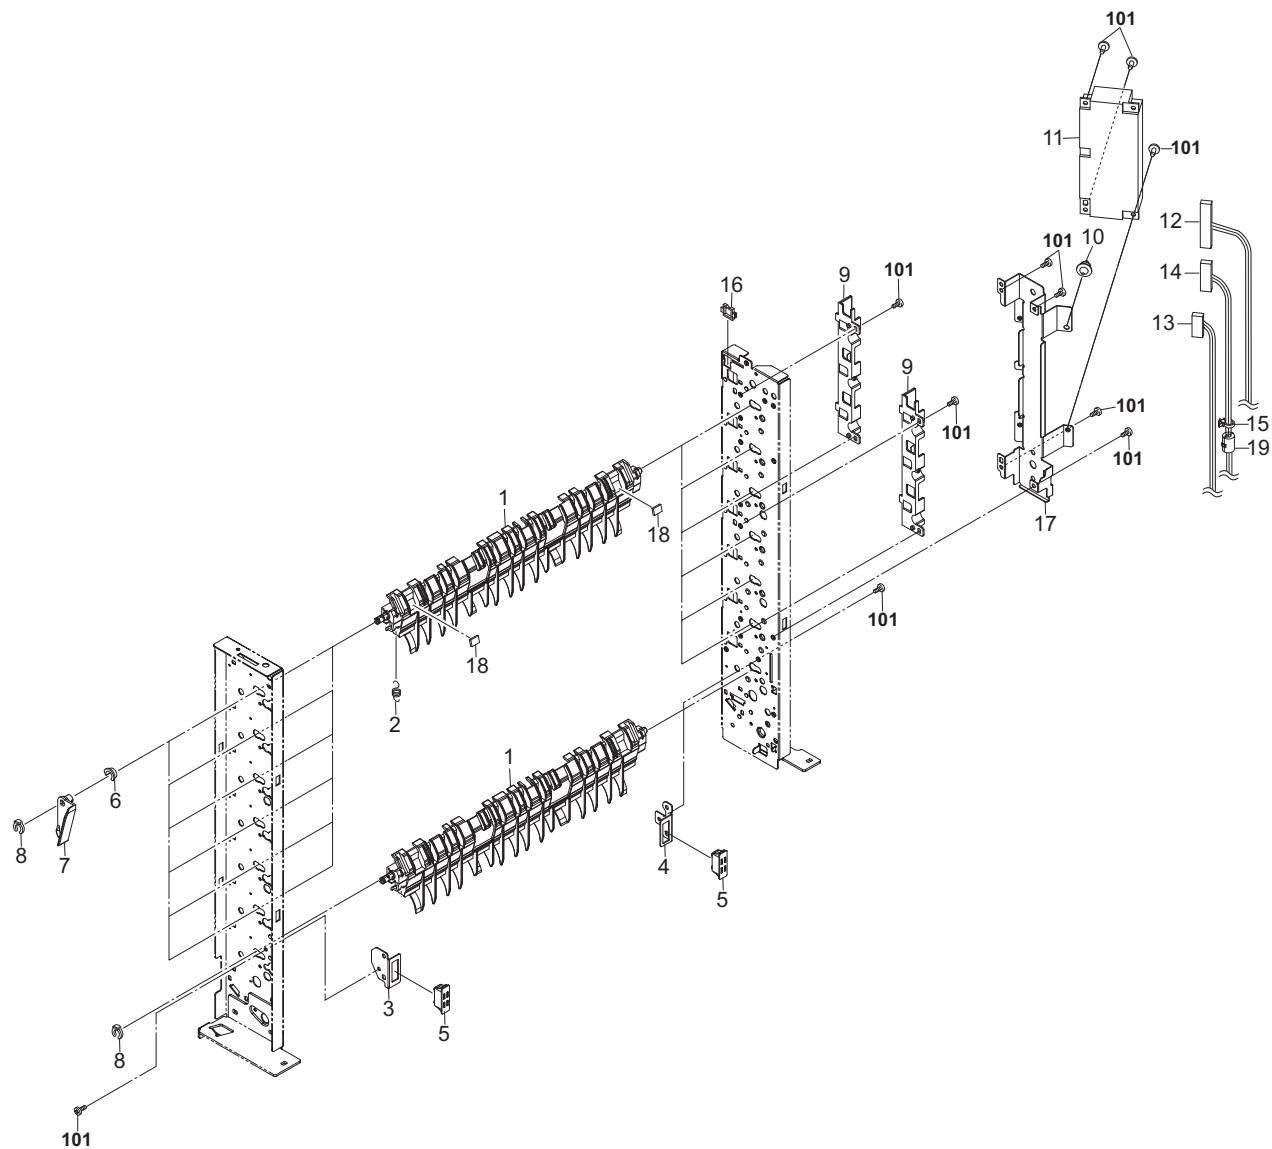


FIG. 3 Paper Feed Section 2

3N0-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303LW24011	3LW24011	GUIDE CONVEYING		7
	2	303LW24180	3LW24180	SPRING PULL GUIDE		6
	3	303LW02070	3LW02070	MOUNT MAGNET FRONT		1
	4	303LW02080	3LW02080	MOUNT MAGNET REAR		1
	5	2FB17200	2FB17200	MAGNET UPPER REG GUIDE		2
	6	303LW02130	3LW02130	BUSH LEVER		6
	7	303LW24510	3LW24510	LEVER SEPARATE CLAW		6
	8	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		7
	9	303LW02110	3LW02110	GUIDE WIRE		2
	10	M2108000	49628603	SPACER,KGLS-3S		1
	11	303N094040	3N094040	PARTS PWB MAIN ASSY B SP		1
	12	303LW46010	3LW46010	WIRE MAIN		1
	13	303LW46060	3LW46060	WIRE INTERROCK SW		1
	14	303LW46020	3LW46020	WIRE INTERFACE		1
	15	M21AH010	M21AH010	BAND,RSG-130-V0(KITAGAWA)		1
	16	7YZM210006++H01	YZ038000	ACCESS.EDGING		1
	17	303LW02030	3LW02030	PLATE PWB		1
	18	303JY24AB0	3JY24AB0	CUSHION C ON		12
	19	7YBEJ0J0D001H01	YB045400	FERRITE CORE		1
	101	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

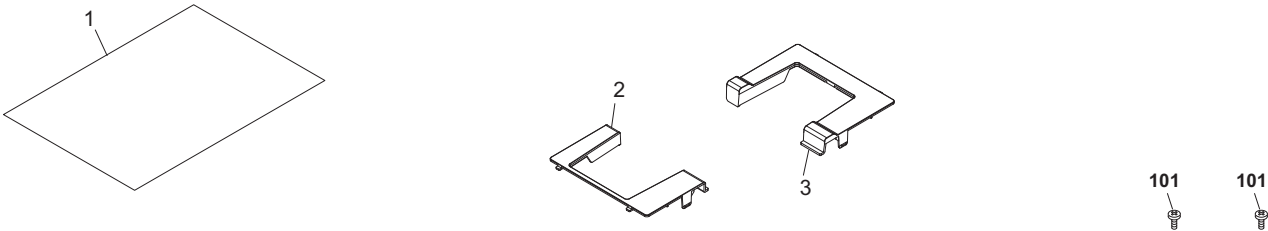


FIG. 4 Accessories

3N0-1

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303J234010	3J234010	LABEL BIN		1
⊙	2	303N004010	3N004010	COVER LID FRONT		1
⊙	3	303N004020	3N004020	COVER LID REAR		1
	101	7BB700412H	BB106830	+BIND T.T S SCREW 4X12 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

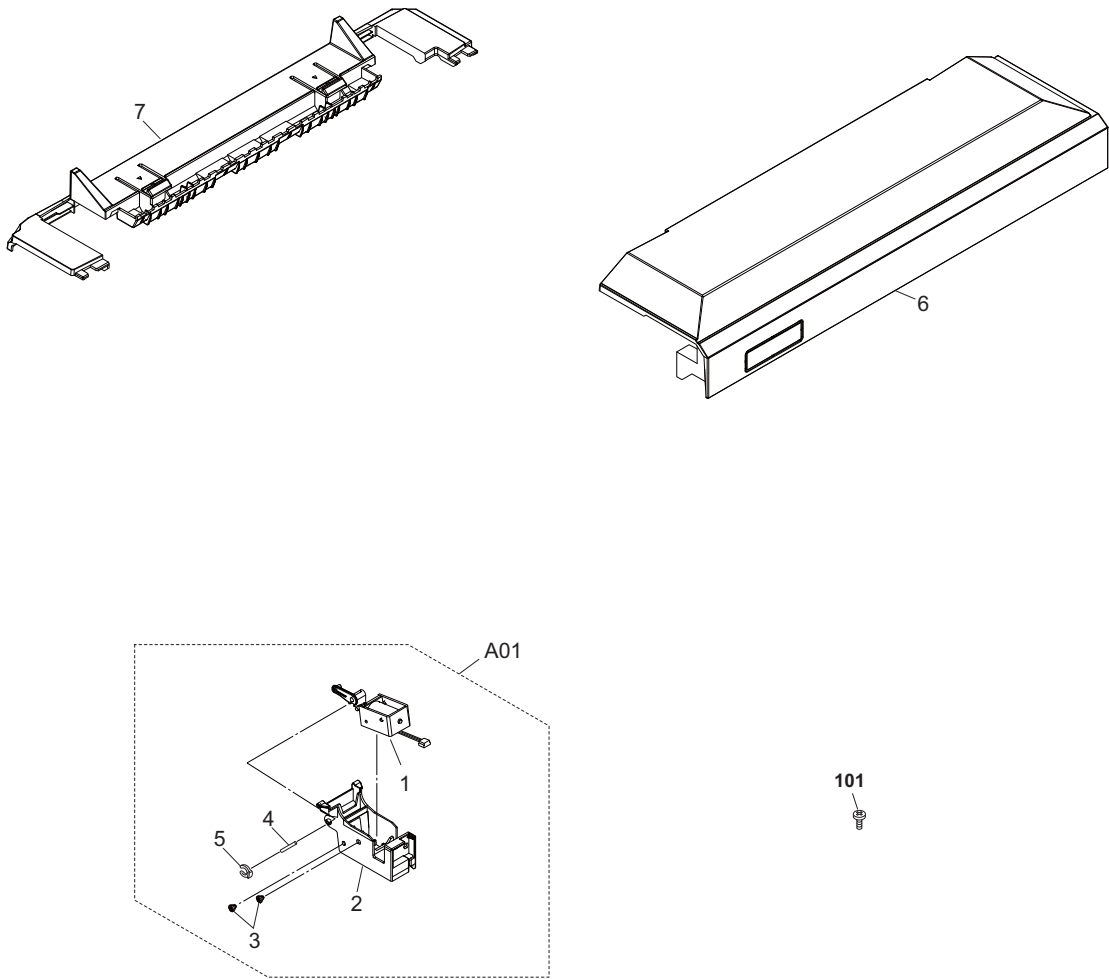


FIG. 5 Options(AK-736)((MT-730(B))

3N0-1

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	A01	303N094030	3N094030	PARTS AK-736 SOLENOID ASSY SP		1
⊙	1	•303N094050	3N094050	PARTS LEVER SOLENOID ASSY SP		1
	2	•303N024030	3N024030	HOLDER SOLENOID		1
	3	•302F325090	2F325090	STUD SCREW M3		2
	4	•303N024050	3N024050	SHAFT LEVER		1
	5	•5MVX111DN007	2BT11070	STOPPER 3 /2BT1107 A4		1
⊙	6	303N004030	3N004030	COVER RIGHT		1
⊙	7	303N004040	3N004040	COVER LEFT		1
	101	7BB700412H	BB106830	+BIND T.T S SCREW 4X12 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

INDEX

3N0-3

	Part.No.	Alternative.	Description	Fig.No.
	28107310	49028101	BUSH 8	2
	2BC06910	2BC06910	STOPPER 6	2
⊙	2BL06190	2BL06190	GEAR Z25 FEED	2
⊙	2C927210	2C927210	SENSOR 248NL1	2
	2FB17200	2FB17200	MAGNET UPPER REG GUIDE	3
⊙	2FB27110	2FB27110	MOTOR FEED	2
⊙	2FB27160	2FB27160	INTER LOCK SWITCH	1
	2FG06070	2FG06070	SPRING FEED JOINT	1
	302F325090	2F325090	STUD SCREW M3	5
⊙	302F909540	2F909540	GEAR Z49	2
⊙	302H008220	2H008220	PULLEY 15 MPF FEED	1
	302H702590	2H702590	BUSH SCREW	1
	302J002100	2J002100	SHEET GUIDE	1
	3036006141	36006141	PIN,JAM REMOVED DIAL	2
	303H321120	3H321120	CUSHION HOLDER	1
⊙	303H327460	3H327460	SENSOR A,SEPARATION	1
⊙	303H327470	3H327470	SENSOR B SEPARATION	2
	303J128320	3J128320	SPONGE EJECT	1
⊙	303J204070	3J204070	BIN EJECT S	1
⊙	303J234010	3J234010	LABEL BIN	4
	303J902291	3J902291	PIN TABLE FULCRUM	1
	303JY24AA0	3JY24AA0	CUSHION FEED	1
	303JY24AB0	3JY24AB0	CUSHION C ON	3
	303JY28280	3JY28280	CUSHION EJECT GUIDE B	1,2
	303JY38180	3JY38180	SHAFT PULLEY SC	2
	303LW02011	3LW02011	FRAME FRONT	1
	303LW02021	3LW02021	FRAME REAR	1
	303LW02030	3LW02030	PLATE PWB	3
	303LW02070	3LW02070	MOUNT MAGNET FRONT	3
	303LW02080	3LW02080	MOUNT MAGNET REAR	3
	303LW02110	3LW02110	GUIDE WIRE	3
	303LW02130	3LW02130	BUSH LEVER	1,3
⊙	303LW04010	3LW04010	COVER SIDE	1
⊙	303LW04020	3LW04020	COVER TOP	1
⊙	303LW04030	3LW04030	COVER VERTICAL	1
⊙	303LW04070	3LW04070	LEVER VERTICAL COVER	1
	303LW24011	3LW24011	GUIDE CONVEYING	3
	303LW24031	3LW24031	STAY EJECT DF	1
	303LW24040	3LW24040	STAY EJECT	1,2
	303LW24050	3LW24050	UPPER GUIDE EJECT	2
⊙	303LW24060	3LW24060	PULLEY EJECT	2
	303LW24070	3LW24070	ACTUATOR OVERFLOW	2
	303LW24100	3LW24100	MOUNT SENSOR EJECT	1,2
	303LW24110	3LW24110	MOUNT INTER ROCK	1
	303LW24141	3LW24141	UPPER GUIDE ADMISSION	1
	303LW24160	3LW24160	SPRING EXIT	2
	303LW24170	3LW24170	FILM EJECT	2
	303LW24180	3LW24180	SPRING PULL GUIDE	3
	303LW24190	3LW24190	SHAFT FEED PULLEY	1
	303LW24510	3LW24510	LEVER SEPARATE CLAW	3

	Part.No.	Alternative.	Description	Fig.No.
	303LW24520	3LW24520	SHAFT SEPARATE DRIVE	2
	303LW24530	3LW24530	SUPPORTPLATE BELT	2
	303LW24540	3LW24540	MOUNT SEPARATE PI	2
	303LW24550	3LW24550	LEVER SEPARATE CLAW B	1
⊙	303LW34020	3LW34020	LABEL JAM	1
⊙	303LW34030	3LW34030	LABEL PAPER CAUTION	1
	303LW46010	3LW46010	WIRE MAIN	3
	303LW46020	3LW46020	WIRE INTERFACE	3
	303LW46030	3LW46030	WIRE MOTOR	2
	303LW46040	3LW46040	WIRE MIDDLE	1
	303LW46050	3LW46050	WIRE HP SENSOR	2
	303LW46060	3LW46060	WIRE INTERLOCK SW	3
	303LW46070	3LW46070	WIRE SENSOR	2
⊙	303LW94010	3LW94010	PARTS ROLLER CONVEYING	2
⊙	303LW94020	3LW94020	PARTS ROLLER EJECT A	2
⊙	303N004010	3N004010	COVER LID FRONT	4
⊙	303N004020	3N004020	COVER LID REAR	4
⊙	303N004030	3N004030	COVER RIGHT	5
⊙	303N004040	3N004040	COVER LEFT	5
	303N024020	3N024020	GUIDE FEED IN	1
	303N024030	3N024030	HOLDER SOLENOID	5
	303N024050	3N024050	SHAFT LEVER	5
	303N024060	3N024060	FILM FEED IN	1
	303N031010	3N031010	MOUNT MOTOR	2
⊙	303N031020	3N031020	GEAR Z22	2
⊙	303N031030	3N031030	GEAR Z28 Z21	2
⊙	303N094020	3N094020	PARTS ROLLER EJECT C SP	2
⊙	303N094030	3N094030	PARTS AK-736 SOLENOID ASSY SP	5
⊙	303N094040	3N094040	PARTS PWB MAIN ASSY B SP	3
⊙	303N094050	3N094050	PARTS LEVER SOLENOID ASSY SP	5
⊙	36706900	36706900	TORQUE LIMITER,PAPER FEED	2
⊙	3AK07230	3AK07230	PULLEY 20S3M	2
⊙	3B807380	3B807380	LOWER BELT,MIDDLE TRAY	2
⊙	3BC08101	3BC08101	PULLEY,REGISTRATION	2
	3CG22030	3CG22030	JOINT,TORQUE LIMITER	2
	3CY07080	3CY07080	BUSHING 6	2
⊙	3H622320	3H622320	GEAR 20 LIFT	2
⊙	3HK22040	3HK22040	GR 33 CONV	2
	5MMS626SD003	2BM04100	PLATE MAGCHATCH	1
	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	1,2,3
	5MVX111DN007	2BT11070	STOPPER 3 /2BT1107 A4	5
⊙	63212210	63212210	STATIC ELIMINATOR,EJECT	2
⊙	66018180	66018180	GEAR 26,SPIRAL ROLLER	2
⊙	75722252	75722252	IDLE PULLEY 15	2
	7YBEJ0J0D001H01	YB045400	FERRITE CORE	3
	7YZM210006++H01	YZ038000	ACCESS.EDGING	2,3
	7YZM610007++H01	YZ023340	ACCESS.SADDLE	1,2
	7YZM610008++H01	YZ037940	ACCESS.SADDLE	2
	E9000080	E9000080	PIN SNAP P8	2
	M2108000	49628603	SPACER,KGLS-3S	3

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.
	M21AH010	M21AH010	BAND,RSG-130-V0(KITAGAWA)	2,3

	Part.No.	Alternative.	Description	Fig.No.

• Parts with "☉" indicate regular maintenance parts.

AK-731

—— CONTENTS ——

FIG. 1	Covers & Paper Feed Section 1	2
FIG. 2	Paper Feed Section 2	4
FIG. 3	Drive Section	6
FIG. 4	Exit Section	8
FIG. 5	Accessories	10
• INDEX		12

FIG. 1 Covers &Paper Feed Section 1

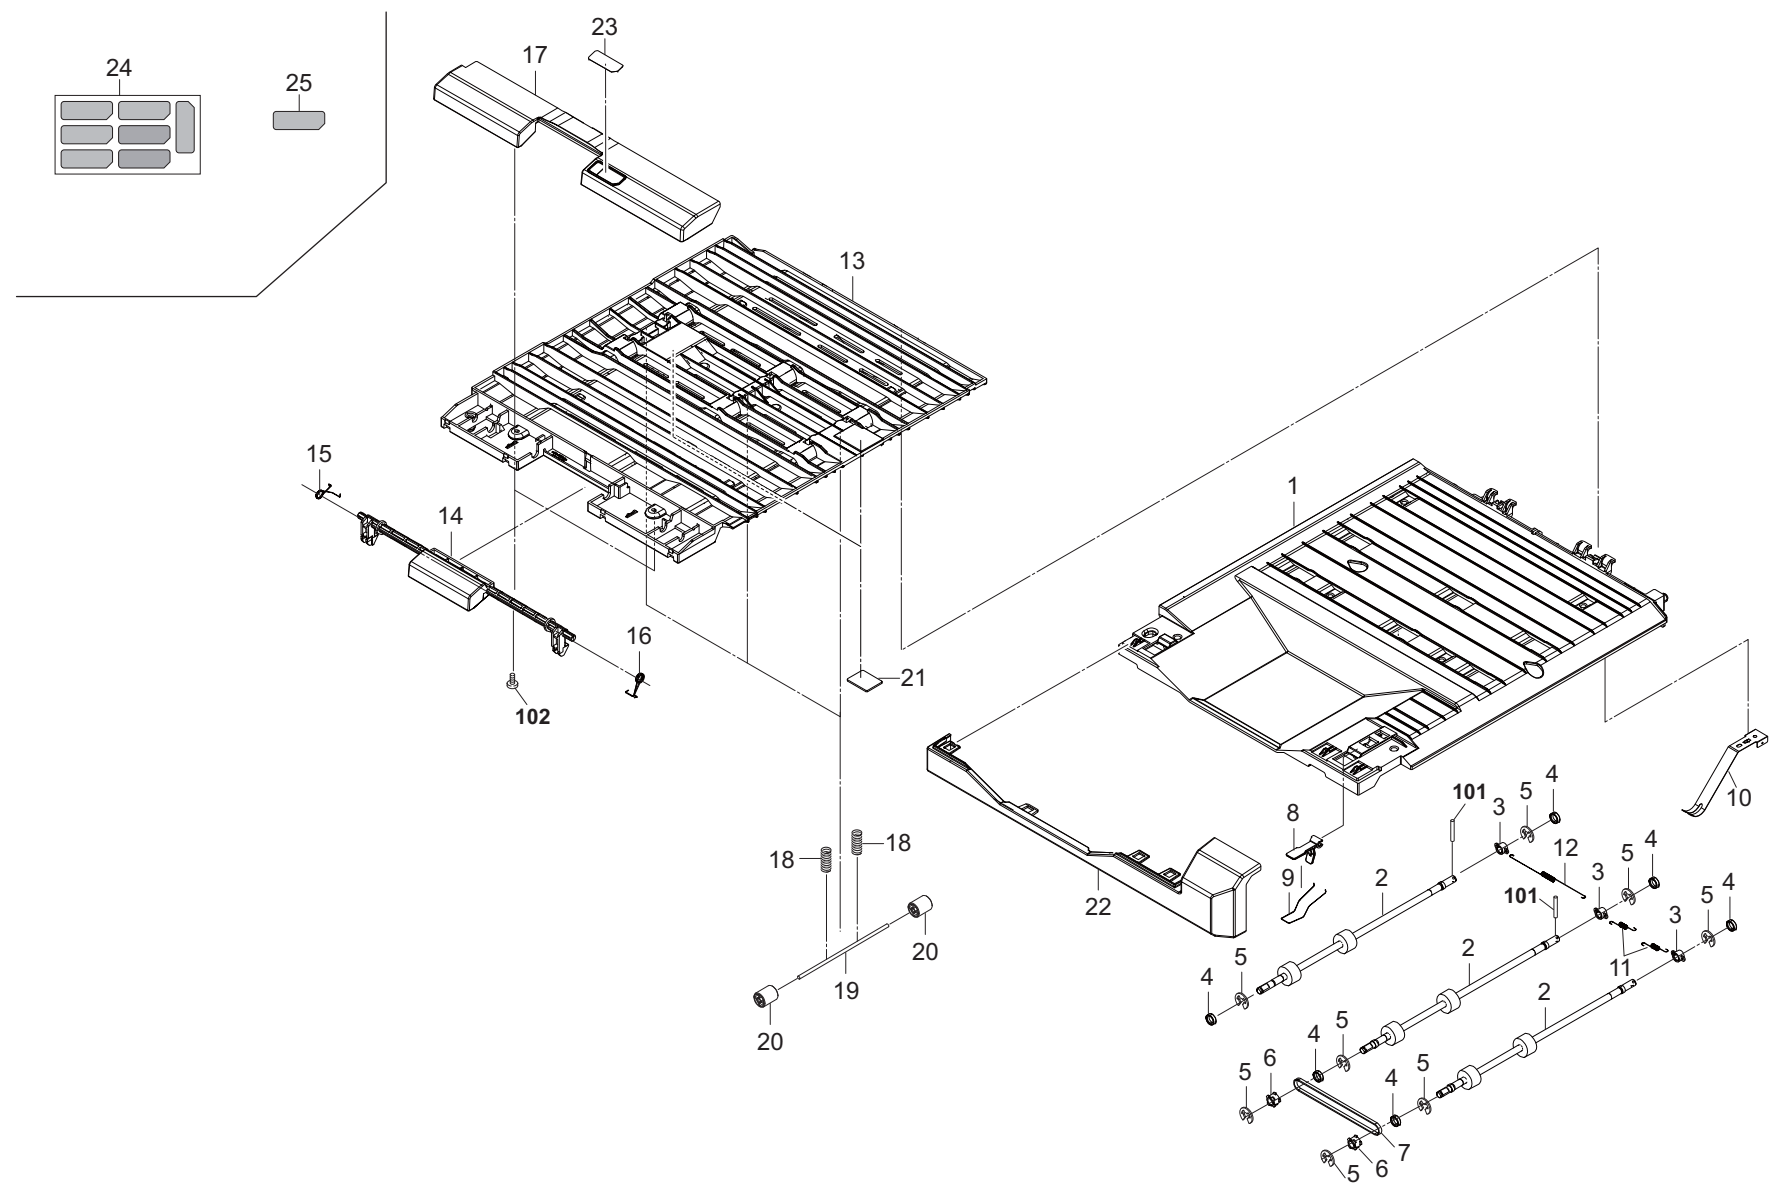


FIG. 1 Covers & Paper Feed Section 1

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303P024010	3P024010	GUIDE CONVEYING LOWER		1
	2	303P094010	3P094010	PARTS ROLLER CONVEYING SP		3
	3	302FZ07310	2FZ07310	BUSH CONTACT MPT B		3
	4	7BE006103431H01	BE122720	BEARING MR106ZZ		6
	5	302FB09830	2FB09830	CUT WASHER 4		8
	6	303P024060	3P024060	PULLEY P16		2
	7	302LF28450	2LF28450	BELT S2M-Z112		1
	8	303P024040	3P024040	LEVER GUIDE OPEN		1
	9	303P024050	3P024050	SPRING GUIDE OPEN		1
	10	303P024080	3P024080	PLATE EARTH CONVEYING		1
	11	303P024120	3P024120	SPRING EXTENSION EARTH A		2
	12	302LF28500	2LF28500	SPRING-EXTENSION EARTH		1
	13	303P024020	3P024020	GUIDE CONVEYING UPPER		1
	14	303P024030	3P024030	HANDLE GUIDE UP		1
	15	303P024130	3P024130	SPRING CONV HOOK LEFT		1
	16	303P024090	3P024090	SPRING CONVEYING HOOK		1
	17	303P004050	3P004050	COVER GUIDE UPPER		1
	18	303P028140	3P028140	SPRING-COMPRESSION EXIT B		6
	19	303P024100	3P024100	SHAFT FEED		3
	20	302F929260	2F929260	PULLEY DU LOW		6
	21	303JX04150	3JX04150	FELT PF COVER		2
	22	303P004060	3P004060	COVER GUIDE LOWER		1
	23	302LC34110	2LC34110	LABEL MPF PUSH		1
	23	302LC34570	2LC34570	LABEL MPF CN	Chinese model	1
	24	302LC34180	2LC34180	LABEL MPF SET A		1
	25	302LC34560	2LC34560	LABEL MPF TW		1
101 102		5MBP2014WXSP	E0020140	SPRING PIN / M2 X 14 S-BLK		
		7BB200308H	BB105660	+BIND T.T P SCREW 3X8		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

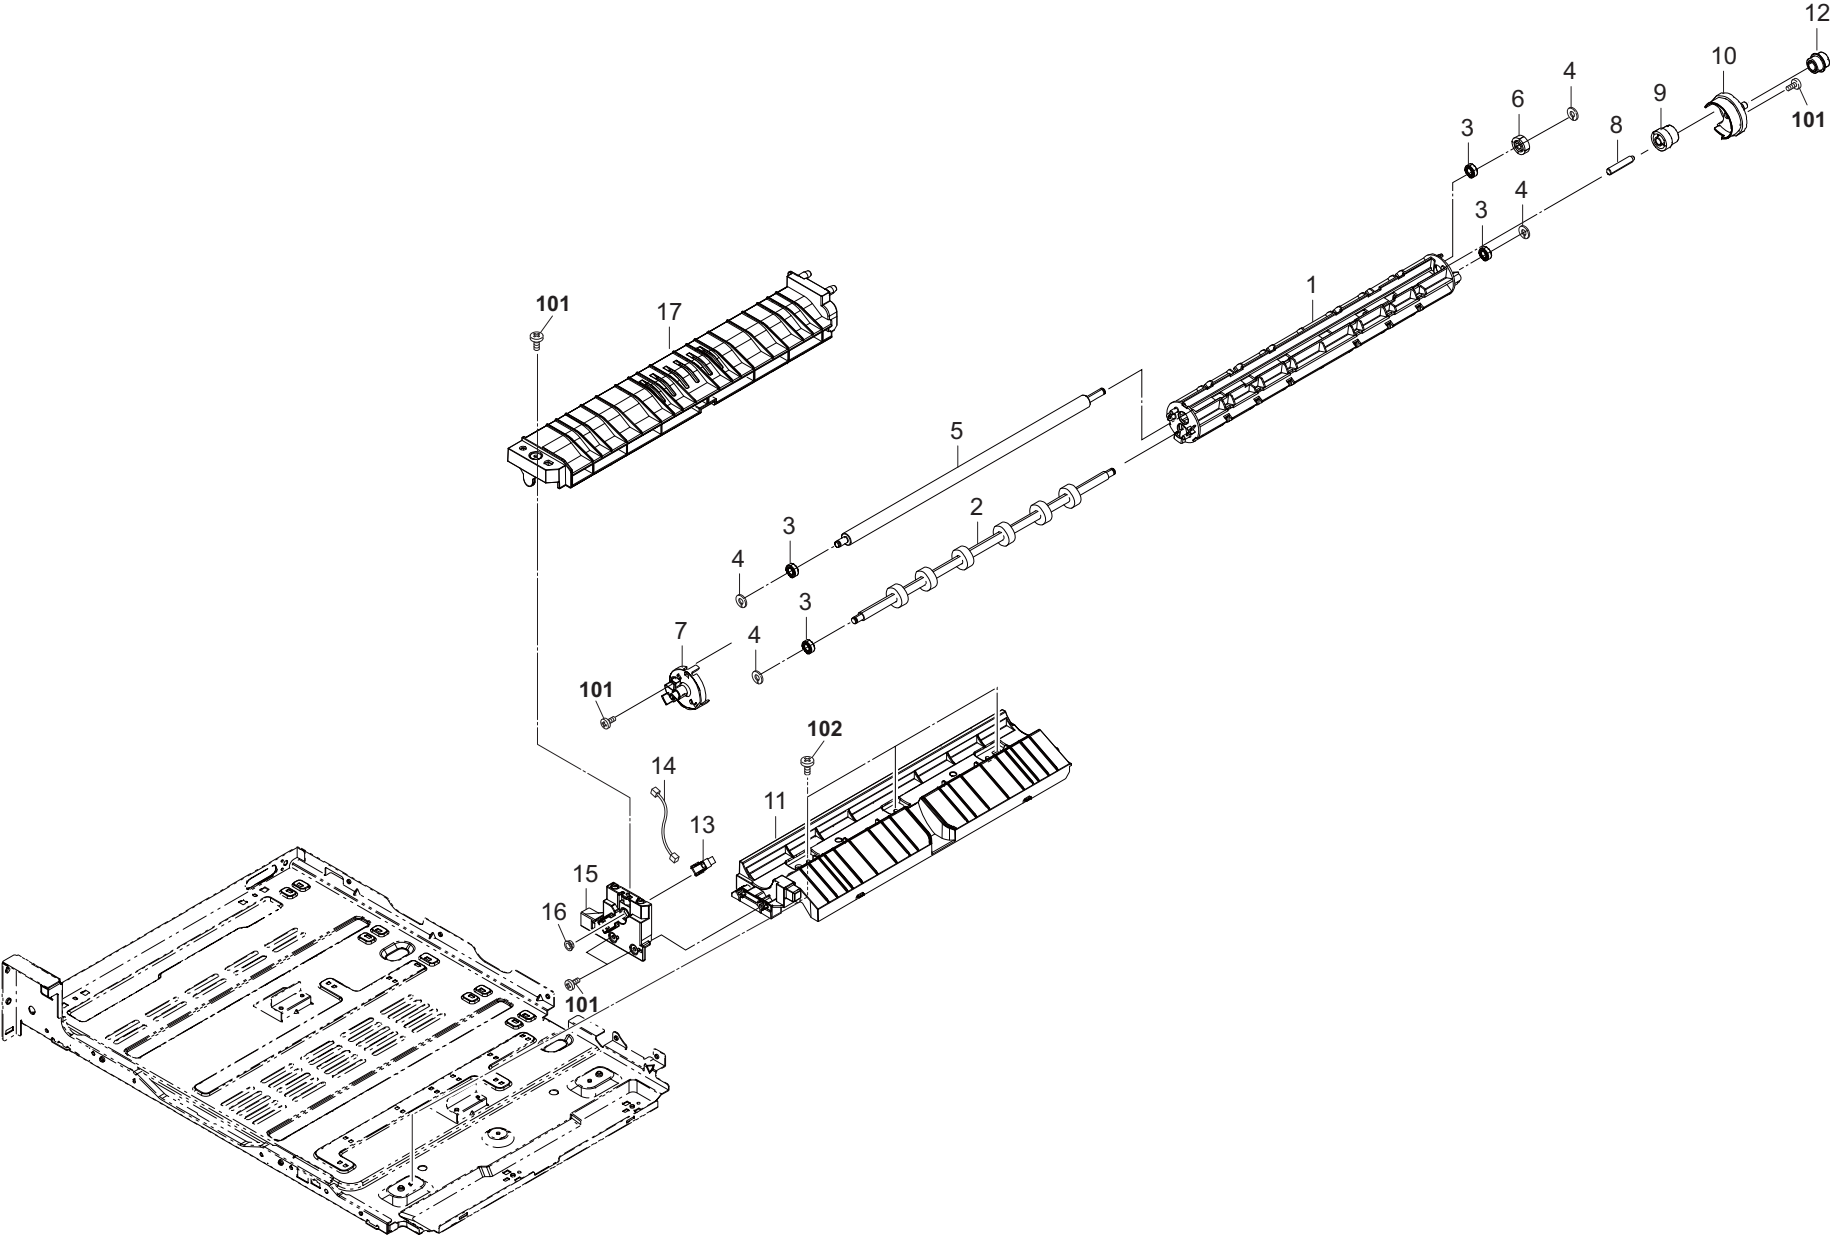


FIG. 2 Paper Feed Section 2

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303P028180	3P028180	GUIDE PRESS ROTARY		1
	2	302LF94280	2LF94280	PARTS ROLLER PRESS SP		1
	3	7BE006124431H01	BE119720	BEARING MR126ZZ		4
	4	302K924820	2K924820	CUT-WASHER 4		4
	5	302LF94270	2LF94270	PARTS ROLLER PRESS DRIVE SP		1
	6	302LF28650	2LF28650	GEAR Z30L DECURLER		1
	7	303P028340	3P028340	CAP PRESS UNIT		1
	8	303P031150	3P031150	PIN DEC DRIVE		1
	9	303P031050	3P031050	GEAR Z19S-Z35R		1
	10	303P028330	3P028330	GEAR PRESS DRIVE		1
	11	303P028320	3P028320	GUIDE RIGHT LOWER		1
	12	303P031060	3P031060	GEAR Z16S		1
	13	2C927210	2C927210	SENSOR 248NL1		1
	14	303P046050	3P046050	WIRE GUIDE SENSOR		1
	15	303P028350	3P028350	MOUNT PRESS FRONT		1
	16	302H702590	2H702590	BUSH SCREW		1
	17	303P028310	3P028310	GUIDE RIGHT UPPER		1
	101	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	102	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 3 Drive Section

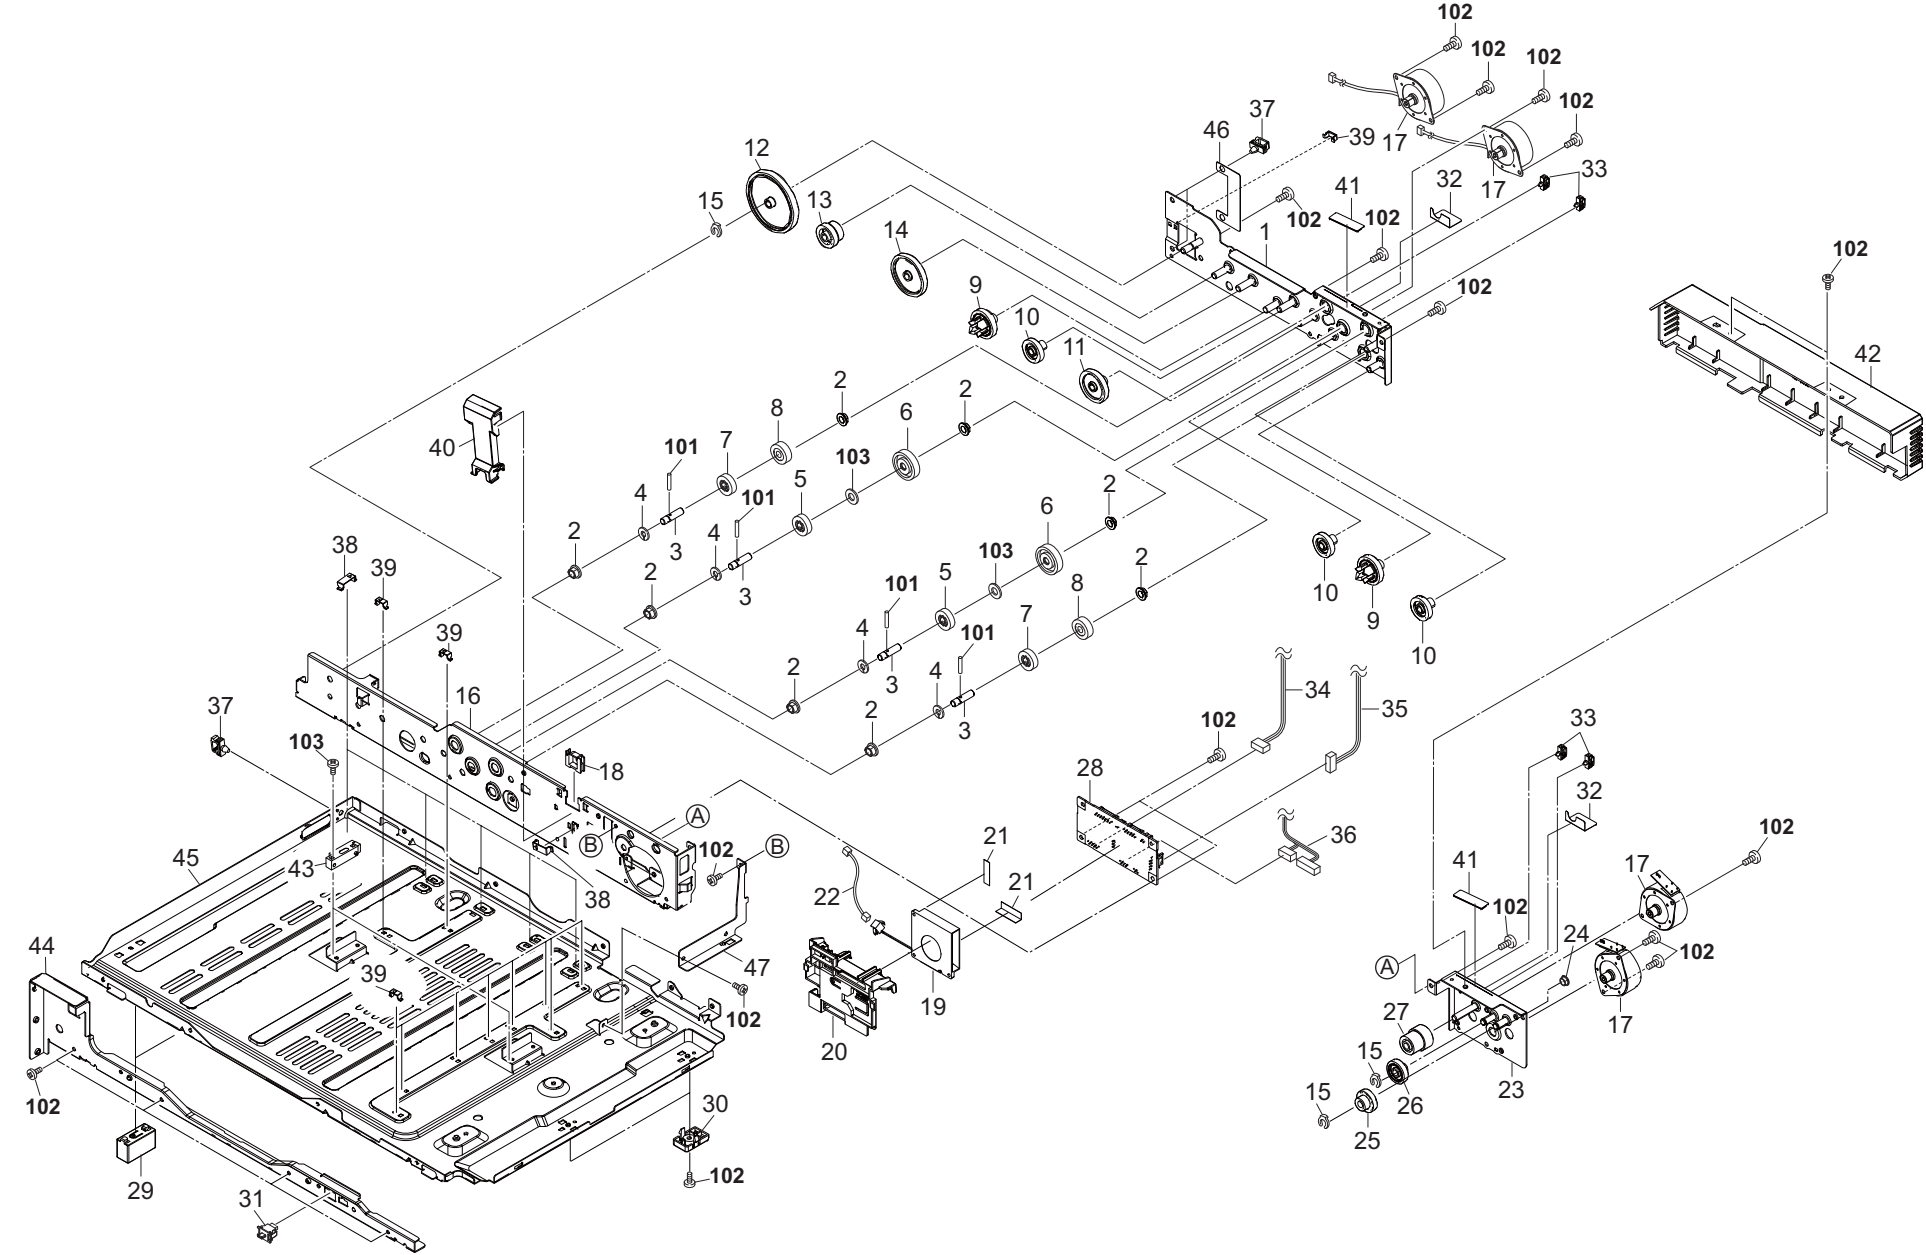


FIG. 3 Drive Section

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	1	303P031010	3P031010	PLATE RELAY DRIVE		1
	2	303P031160	3P031160	BUSH 6		8
	3	303P031100	3P031100	SHAFT RELAY DRIVE		4
	4	5MVS665KB001	2BM40060	CUT WASHER		4
⊙	5	302LK28130	2LK28130	GEAR Z16R		2
⊙	6	303P031170	3P031170	GEAR Z50 ONEWAYCLUTCH		2
⊙	7	302LK28140	2LK28140	GEAR Z16L		2
⊙	8	302LK28050	2LK28050	GEAR Z35 ONEWAYCLUTCH		2
⊙	9	303P031070	3P031070	GEAR Z25R JOINT		2
⊙	10	303P031090	3P031090	GEAR Z20L		3
⊙	11	303P031080	3P031080	GEAR Z29R		1
⊙	12	303P031130	3P031130	GEAR Z56L		1
⊙	13	303P031140	3P031140	GEAR Z20R-Z16R		1
⊙	14	303P031120	3P031120	GEAR Z38L		1
	15	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		3
	16	303P002020	3P002020	FRAME REAR		1
⊙	17	302K994300	2K994300	PARTS MOTOR PM FEED SP		4
	18	7YZM210005++H01	YZ037990	ACCESS.EDGING		1
⊙	19	302K994A50	2K994A50	PARTS FAN COOLING LSU 50 SP		1
	20	303P002130	3P002130	HOLDER FAN		1
	21	303P002190	3P002190	FILM HOLDER FAN		2
	22	303P046060	3P046060	WIRE COOLING FAN		1
	23	303P031020	3P031020	PLATE DEC DRIVE		1
	24	302H702590	2H702590	BUSH SCREW		1
⊙	25	303P031030	3P031030	GEAR Z14S-Z39R		1
⊙	26	303P031040	3P031040	GEAR Z26S		1
⊙	27	303P031110	3P031110	GEAR Z21S-Z40R		1
⊙	28	303P094050	3P094050	PARTS PWB BRIDGE ASSY SP		1
	29	303P002150	3P002150	STOPPER FRAME		2
	30	302LF22380	2LF22380	SPACER PRESS TRANSFER		2
⊙	31	7SP01000006+H01	SP121020	SW.PUSH		1
	32	302MH45030	2MH45030	SHEET HIGH VOLTAGE		2
	33	7YZM610007++H01	YZ023340	ACCESS.SADDLE		4
	34	303P046020	3P046020	WIRE BRIDGE MOTOR		1
	35	303P046030	3P046030	WIRE GUIDE MOTOR		1
	36	303P046010	3P046010	WIRE INTERFACE		1
	37	7YZM610001++H01	YZ010230	ACCESS SADDLE		3
	38	302LC25780	2LC25780	WIRE STOPPER		6
	39	302K931080	2K931080	WIRE STOPPER		11
	40	303P002110	3P002110	COVER WIRE		1
	41	302LC06180	2LC06180	SHEET PRIMARY FEED		2
	42	303P004100	3P004100	COVER REAR		1
⊙	43	303H327500	3H327500	SENSOR FEED B		2
	44	303P002010	3P002010	FRAME FRONT		1
	45	303P002030	3P002030	STAY FRAME		1
	46	303P031180	3P031180	SHEET REAR DRIVE		1
	47	303P002050	3P002050	STAY RIGHT		1
	101	5MBP2010WXSP	E0020100	SPRING PIN / M2 X 10 S-BLK		
	102	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	103	7BB600314H	BB112160	+BIND M SCREW 3X14 R		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 4 Exit Section

3P0

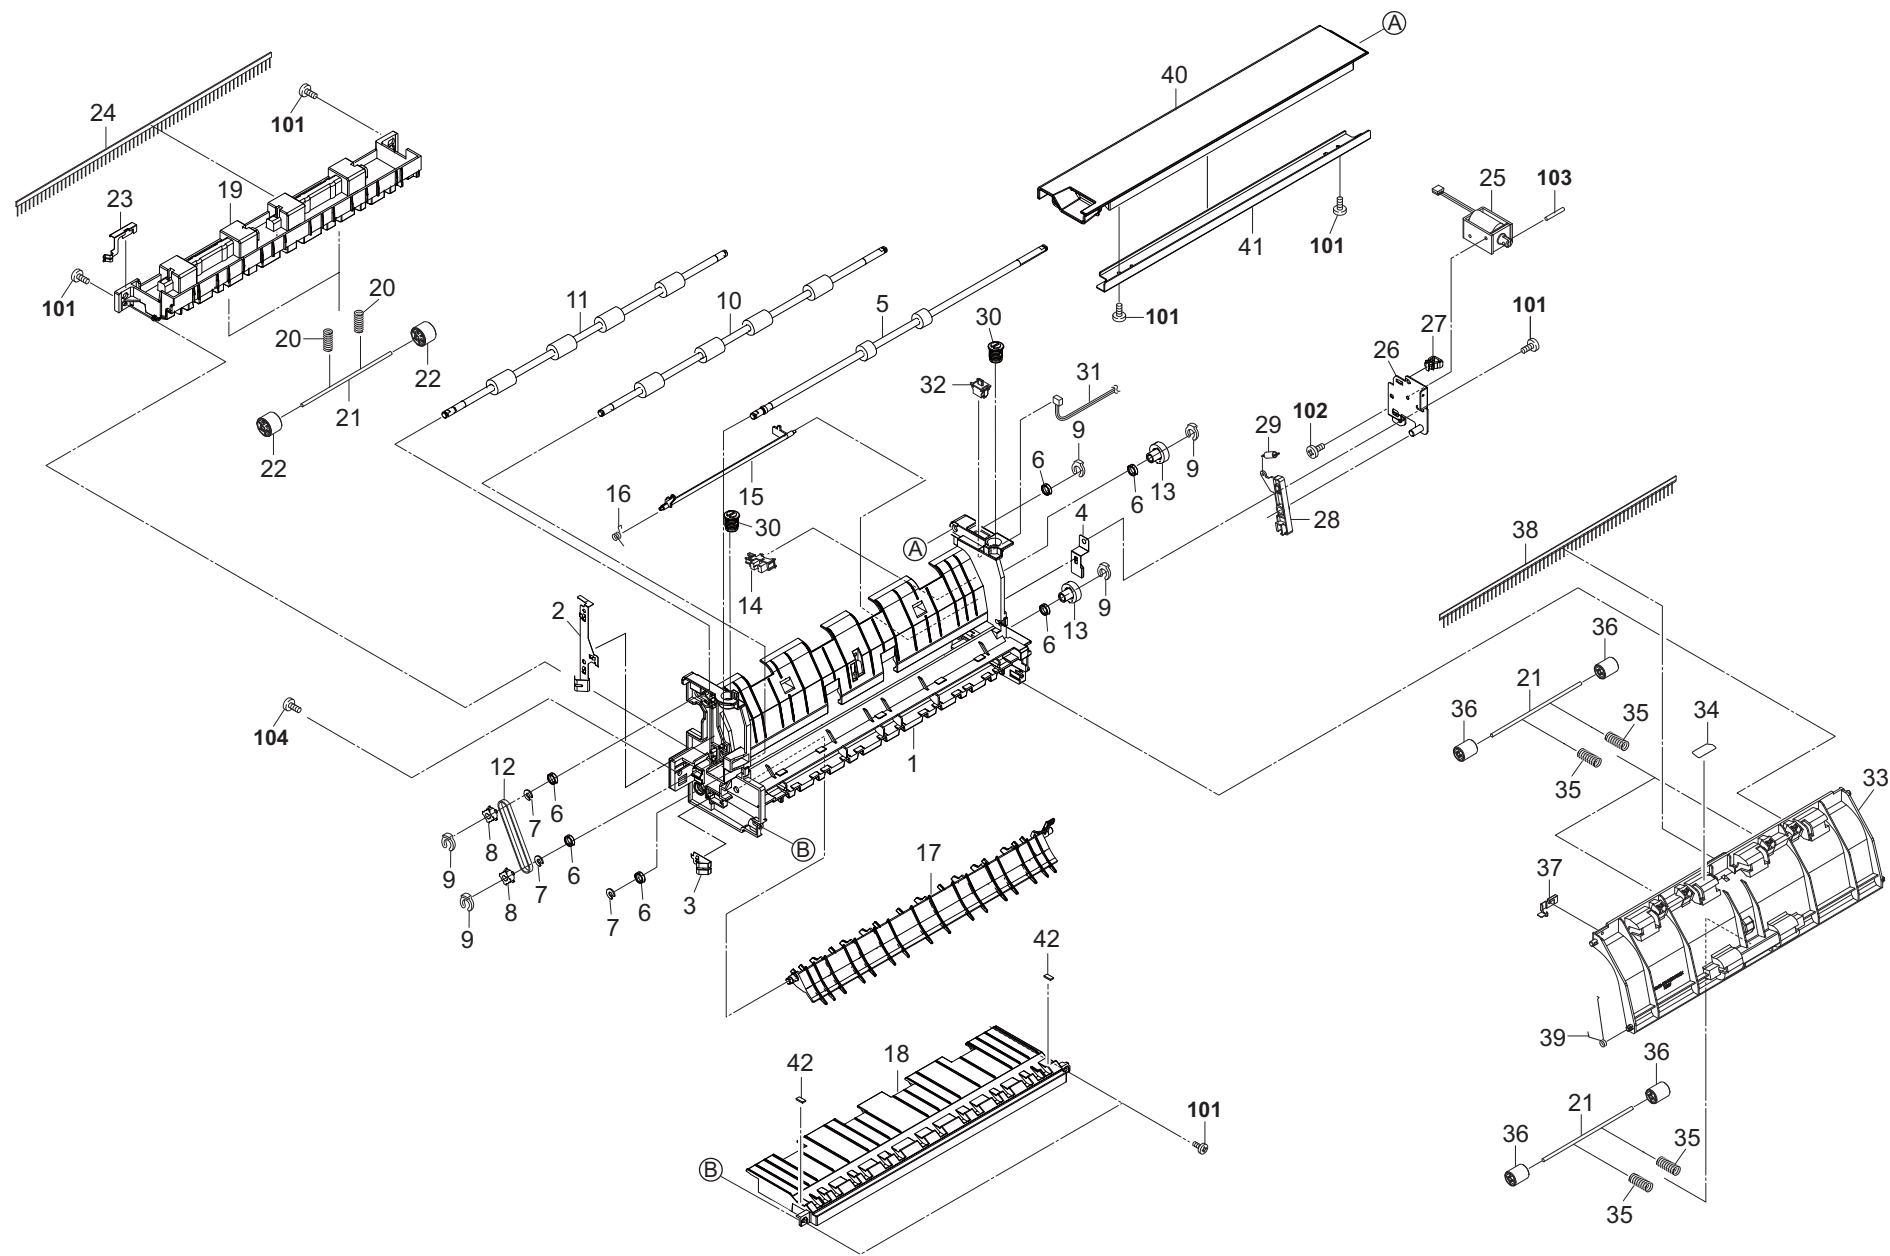


FIG. 4 Exit Section

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	303P028010	3P028010	HOUSING RELAY EXIT		1
	2	303P028090	3P028090	PLATE EARTH ROLLER A		1
	3	303P028120	3P028120	PLATE EARTH EXIT A		1
	4	303P028150	3P028150	PLATE EARTH EXIT B		1
	5	303P094040	3P094040	PARTS ROLLER RELAY EXIT MIDDLE SP		1
	6	7BE006103431H01	BE122720	BEARING MR106ZZ		6
	7	302FB09830	2FB09830	CUT WASHER 4		3
	8	302LF28342	2LF28342	PULLEY P18-S2M		2
	9	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		5
	10	303P094020	3P094020	PARTS ROLLER RELAY EXIT LOWER SP		1
	11	303P094030	3P094030	PARTS ROLLER RELAY EXIT UPPER SP		1
	12	3HL07190	3HL07190	BELT 150S2M,PAPER FEED		1
	13	303P028110	3P028110	GEAR Z16R		2
	14	2C927210	2C927210	SENSOR 248NL1		1
	15	303P028160	3P028160	ACTUATOR RELAY EXIT SW		1
	16	302K928190	2K928190	SPRING-TORSION SWITCHBACK		1
	17	303P028050	3P028050	GUIDE EXIT FEED SHIFT		1
	18	303P028080	3P028080	GUIDE EXIT FEED		1
	19	303P028060	3P028060	GUIDE RELAY EXIT LOWER		1
	20	303P028140	3P028140	SPRING-COMPRESSION EXIT B		4
	21	303P024100	3P024100	SHAFT FEED		5
	22	302JF22010	2JF22010	PULLEY MIDDLE		4
	23	303P028170	3P028170	PLATE EARTH EXIT C		1
	24	63212210	63212210	STATIC ELIMINATOR,EJECT		1
	25	302K994370	2K994370	PARTS SOLENOID FEED SHIFT SP		1
	26	303P028100	3P028100	PLATE RELAY SOLENOID		1
	27	7YZM610009++H01	YZ042980	ACCESS.SADDLE		1
	28	302LF28410	2LF28410	LEVER RELAY SOLENOID		1
	29	3HL10090	3HL10090	SPRING,LF SHIFT GUIDE		1
	30	303P028190	3P028190	MAGNET CATCH 10N		2
	31	303P046040	3P046040	WIRE EXIT SENSOR		1
	32	7SP01000006+H01	SP121020	SW.PUSH		1
	33	302LF28240	2LF28240	GUIDE RELAY EXIT RIGHT		1
	34	302K934160	2K934160	LABEL EXIT A2		1
	35	303P028130	3P028130	SPRING-COMPRESSION EXIT A		6
	36	302F929260	2F929260	PULLEY DU LOW		6
	37	302LF28630	2LF28630	PLATE EARTH EXIT		1
	38	302LF28640	2LF28640	STATIC-ELIMINATOR EJECT		1
	39	302LF28810	2LF28810	SPRING-TORSION RELAY EXIT		1
	40	303P004080	3P004080	COVER LEFT EXIT UPPER		1
	41	303P028070	3P028070	PLATE REINFORCEMENT EXIT		1
	42	303LJ02260	3LJ02260	CUSHION GUIDE		2
⊙	101	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	102	7BB000303H	BB107000	+BIND M SCREW 3X3		
	103	E0130240	E0130240	SPRING PIN 3X24(SUS)		
	104	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

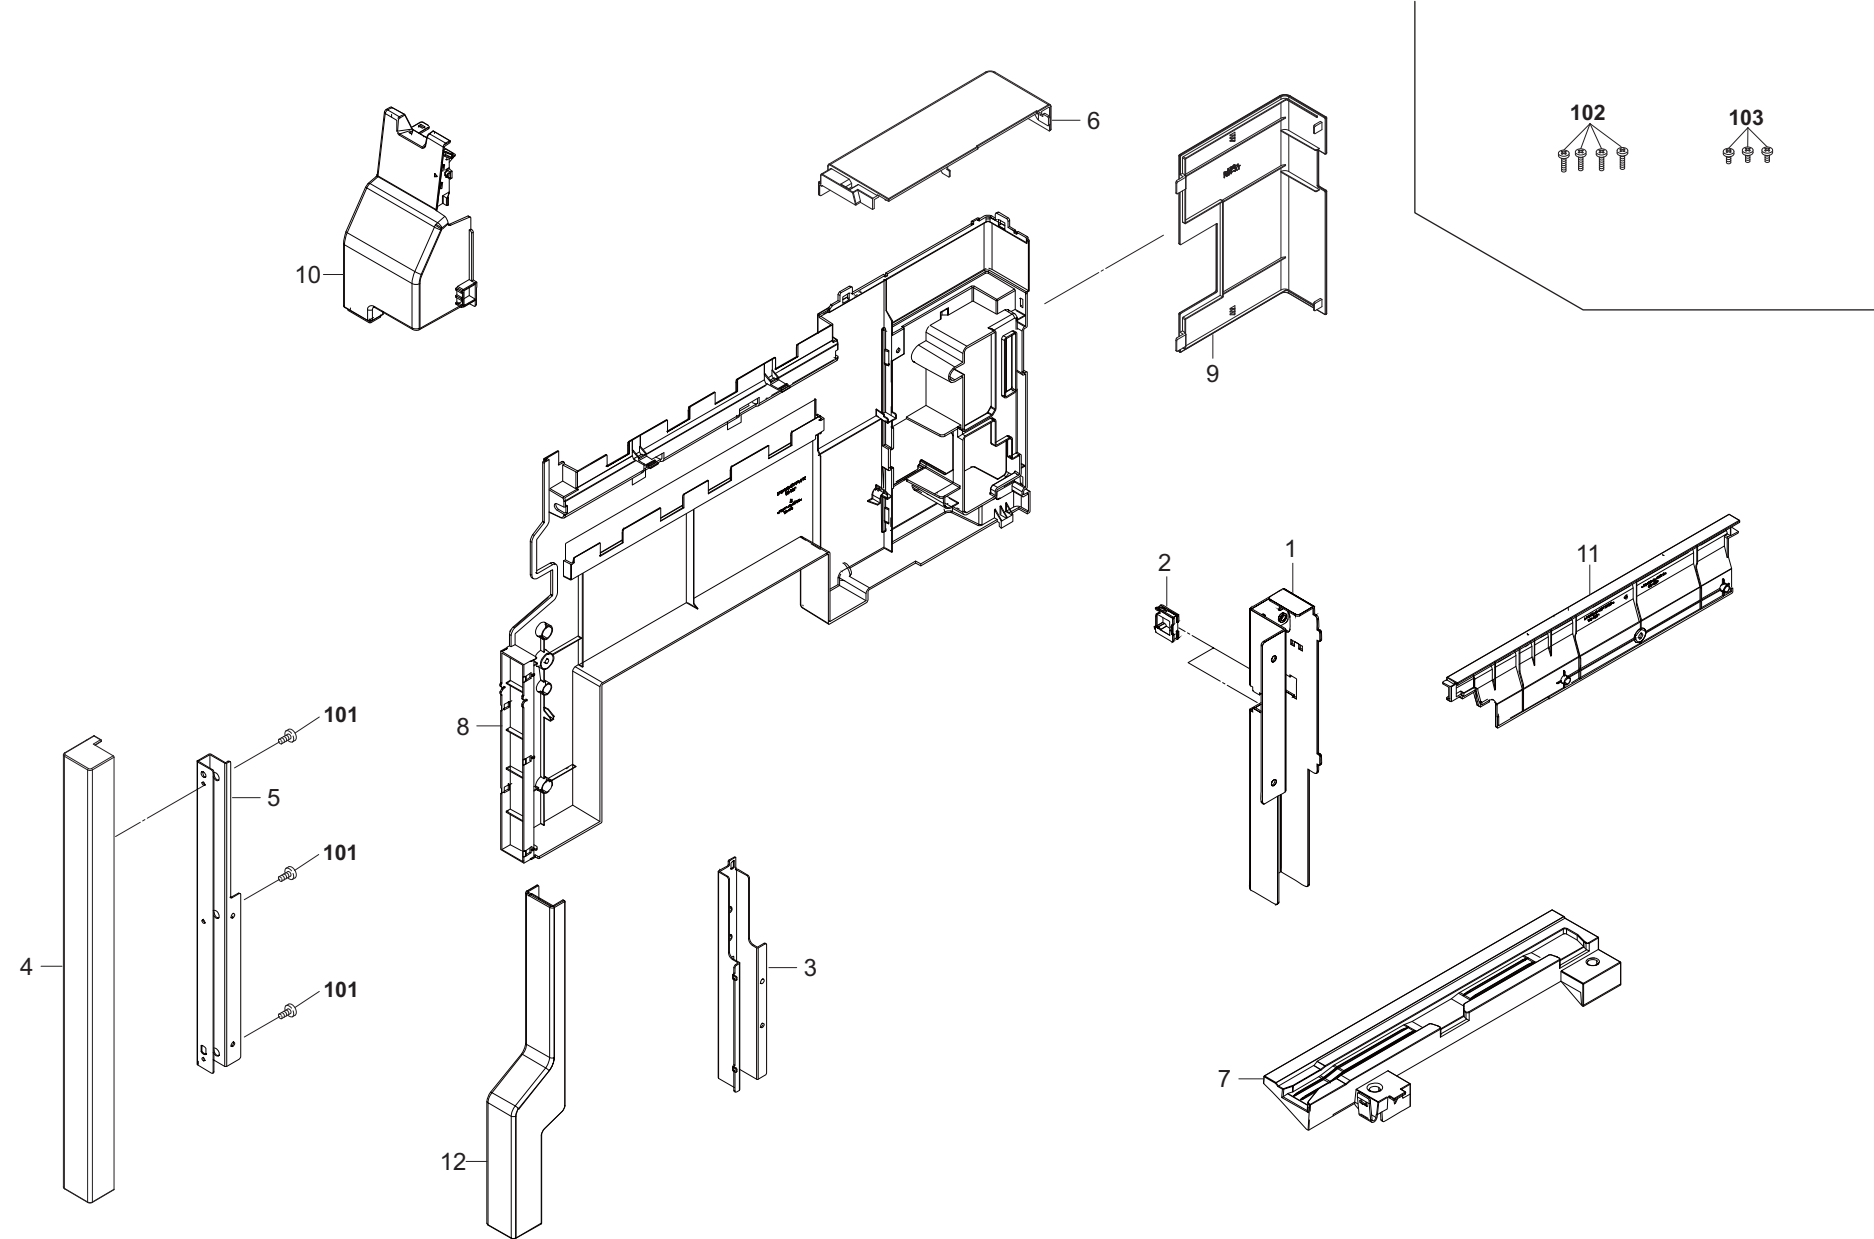


FIG. 5 Accessories

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	302LK28082	2LK28082	STAY REAR LEFT		1
	2	7YZM210009++H01	YZ126740	ACCESS.EDGING		2
	3	303P004030	3P004030	STAY FRONT LEFT		1
	4	302LK28181	2LK28181	COVER JUNCTION LOWER		1
	5	303P004120	3P004120	PLATE COVER JUNCTION		1
	6	302LK28202	2LK28202	COVER LEFT UPPER		1
	7	303P002180	3P002180	RAIL AK		1
	8	303P004010	3P004010	COVER LEFT AK		1
	9	302K904140	2K904140	COVER CONTROLLER		1
	10	303P004020	3P004020	COVER FRONT LEFT AK		1
	11	303P004070	3P004070	COVER ISU LEFT		1
	12	303P004110	3P004110	COVER FRONT AK		1
101 102 103	101	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	102	7BB702414H	BB107120	+TP-FLAT T.T S SCREW 4X14 SR		
	103	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

INDEX

3P0

	Part.No.	Alternative	Description	Fig.No.
⊙	2C927210	2C927210	SENSOR 248NL1	2,4
	302F929260	2F929260	PULLEY DU LOW	1,4
	302FB09830	2FB09830	CUT WASHER 4	1,4
	302FZ07310	2FZ07310	BUSH CONTACT MPT B	1
	302H702590	2H702590	BUSH SCREW	2,3
	302JF22010	2JF22010	PULLEY MIDDLE	4
⊙	302K904140	2K904140	COVER CONTROLLER	5
	302K924820	2K924820	CUT-WASHER 4	2
	302K928190	2K928190	SPRING-TORSION SWITCHBACK	4
	302K931080	2K931080	WIRE STOPPER	3
	302K934160	2K934160	LABEL EXIT A2	4
⊙	302K994300	2K994300	PARTS MOTOR PM FEED SP	3
⊙	302K994370	2K994370	PARTS SOLENOID FEED SHIFT SP	4
⊙	302K994A50	2K994A50	PARTS FAN COOLING LSU 50 SP	3
	302LC06180	2LC06180	SHEET PRIMARY FEED	3
	302LC25780	2LC25780	WIRE STOPPER	3
	302LC34110	2LC34110	LABEL MPF PUSH	1
	302LC34180	2LC34180	LABEL MPF SET A	1
	302LC34560	2LC34560	LABEL MPF TW	1
	302LC34570	2LC34570	LABEL MPF CN	1
	302LF22380	2LF22380	SPACER PRESS TRANSFER	3
	302LF28240	2LF28240	GUIDE RELAY EXIT RIGHT	4
	302LF28342	2LF28342	PULLEY P18-S2M	4
	302LF28410	2LF28410	LEVER RELAY SOLENOID	4
⊙	302LF28450	2LF28450	BELT S2M-Z112	1
	302LF28500	2LF28500	SPRING-EXTENSION EARTH	1
	302LF28630	2LF28630	PLATE EARTH EXIT	4
	302LF28640	2LF28640	STATIC-ELIMINATOR EJECT	4
⊙	302LF28650	2LF28650	GEAR Z30L DECURLER	2
	302LF28810	2LF28810	SPRING-TORSION RELAY EXIT	4
⊙	302LF94270	2LF94270	PARTS ROLLER PRESS DRIVE SP	2
⊙	302LF94280	2LF94280	PARTS ROLLER PRESS SP	2
⊙	302LK28050	2LK28050	GEAR Z35 ONEWAYCLUTCH	3
	302LK28082	2LK28082	STAY REAR LEFT	5
⊙	302LK28130	2LK28130	GEAR Z16R	3
⊙	302LK28140	2LK28140	GEAR Z16L	3
⊙	302LK28181	2LK28181	COVER JUNCTION LOWER	5
⊙	302LK28202	2LK28202	COVER LEFT UPPER	5
	302MH45030	2MH45030	SHEET HIGH VOLTAGE	3
⊙	303H327500	3H327500	SENSOR FEED B	3

	Part.No.	Alternative	Description	Fig.No.
	303JX04150	3JX04150	FELT PF COVER	1
	303LJ02260	3LJ02260	CUSHION GUIDE	4
	303P002010	3P002010	FRAME FRONT	3
	303P002020	3P002020	FRAME REAR	3
	303P002030	3P002030	STAY FRAME	3
	303P002050	3P002050	STAY RIGHT	3
	303P002110	3P002110	COVER WIRE	3
	303P002130	3P002130	HOLDER FAN	3
	303P002150	3P002150	STOPPER FRAME	3
	303P002180	3P002180	RAIL AK	5
	303P002190	3P002190	FILM HOLDER FAN	3
⊙	303P004010	3P004010	COVER LEFT AK	5
⊙	303P004020	3P004020	COVER FRONT LEFT AK	5
	303P004030	3P004030	STAY FRONT LEFT	5
⊙	303P004050	3P004050	COVER GUIDE UPPER	1
⊙	303P004060	3P004060	COVER GUIDE LOWER	1
⊙	303P004070	3P004070	COVER ISU LEFT	5
⊙	303P004080	3P004080	COVER LEFT EXIT UPPER	4
	303P004100	3P004100	COVER REAR	3
⊙	303P004110	3P004110	COVER FRONT AK	5
	303P004120	3P004120	PLATE COVER JUNCTION	5
	303P024010	3P024010	GUIDE CONVEYING LOWER	1
	303P024020	3P024020	GUIDE CONVEYING UPPER	1
	303P024030	3P024030	HANDLE GUIDE UP	1
	303P024040	3P024040	LEVER GUIDE OPEN	1
	303P024050	3P024050	SPRING GUIDE OPEN	1
	303P024060	3P024060	PULLEY P16	1
	303P024080	3P024080	PLATE EARTH CONVEYING	1
	303P024090	3P024090	SPRING CONVEYING HOOK	1
	303P024100	3P024100	SHAFT FEED	1
	303P024120	3P024120	SPRING EXTENSION EARTH A	1
	303P024130	3P024130	SPRING CONV HOOK LEFT	1
	303P028010	3P028010	HOUSING RELAY EXIT	4
	303P028050	3P028050	GUIDE EXIT FEED SHIFT	4
	303P028060	3P028060	GUIDE RELAY EXIT LOWER	4
	303P028070	3P028070	PLATE REINFORCEMENT EXIT	4
	303P028080	3P028080	GUIDE EXIT FEED	4
	303P028090	3P028090	PLATE EARTH ROLLER A	4
	303P028100	3P028100	PLATE RELAY SOLENOID	4
⊙	303P028110	3P028110	GEAR Z16R	4

	Part.No.	Alternative	Description	Fig.No.
	303P028120	3P028120	PLATE EARTH EXIT A	4
	303P028130	3P028130	SPRING-COMPRESSION EXIT A	4
	303P028140	3P028140	SPRING-COMPRESSION EXIT B	1,4
	303P028150	3P028150	PLATE EARTH EXIT B	4
	303P028160	3P028160	ACTUATOR RELAY EXIT SW	4
	303P028170	3P028170	PLATE EARTH EXIT C	4
	303P028180	3P028180	GUIDE PRESS ROTARY	2
	303P028190	3P028190	MAGNET CATCH 10N	4
	303P028310	3P028310	GUIDE RIGHT UPPER	2
	303P028320	3P028320	GUIDE RIGHT LOWER	2
⊙	303P028330	3P028330	GEAR PRESS DRIVE	2
	303P028340	3P028340	CAP PRESS UNIT	2
	303P028350	3P028350	MOUNT PRESS FRONT	2
	303P031010	3P031010	PLATE RELAY DRIVE	3
	303P031020	3P031020	PLATE DEC DRIVE	3
⊙	303P031030	3P031030	GEAR Z14S-Z39R	3
⊙	303P031040	3P031040	GEAR Z26S	3
⊙	303P031050	3P031050	GEAR Z19S-Z35R	2
⊙	303P031060	3P031060	GEAR Z16S	2
⊙	303P031070	3P031070	GEAR Z25R JOINT	3
⊙	303P031080	3P031080	GEAR Z29R	3
⊙	303P031090	3P031090	GEAR Z20L	3
	303P031100	3P031100	SHAFT RELAY DRIVE	3
⊙	303P031110	3P031110	GEAR Z21S-Z40R	3
⊙	303P031120	3P031120	GEAR Z38L	3
⊙	303P031130	3P031130	GEAR Z56L	3
⊙	303P031140	3P031140	GEAR Z20R-Z16R	3
	303P031150	3P031150	PIN DEC DRIVE	2
	303P031160	3P031160	BUSH 6	3
⊙	303P031170	3P031170	GEAR Z50 ONEWAYCLUTCH	3
	303P031180	3P031180	SHEET REAR DRIVE	3
	303P046010	3P046010	WIRE INTERFACE	3
	303P046020	3P046020	WIRE BRIDGE MOTOR	3
	303P046030	3P046030	WIRE GUIDE MOTOR	3
	303P046040	3P046040	WIRE EXIT SENSOR	4
	303P046050	3P046050	WIRE GUIDE SENSOR	2
	303P046060	3P046060	WIRE COOLING FAN	3
⊙	303P094010	3P094010	PARTS ROLLER CONVEYING SP	1
⊙	303P094020	3P094020	PARTS ROLLER RELAY EXIT LOWER SP	4
⊙	303P094030	3P094030	PARTS ROLLER RELAY EXIT UPPER SP	4

	Part.No.	Alternative	Description	Fig.No.
⦿	303P094040	3P094040	PARTS ROLLER RELAY EXIT MIDDLE SP	4
⦿	303P094050	3P094050	PARTS PWB BRIDGE ASSY SP	3
⦿	3HL07190	3HL07190	BELT 150S2M,PAPER FEED	4
	3HL10090	3HL10090	SPRING,LF SHIFT GUIDE	4
	5MVS665KB001	2BM40060	CUT WASHER	3
	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	3,4
	63212210	63212210	STATIC ELIMINATOR,EJECT	4
	7BE006103431H01	BE122720	BEARING MR106ZZ	1,4
	7BE006124431H01	BE119720	BEARING MR126ZZ	2
⦿	7SP01000006+H01	SP121020	SW.PUSH	3,4
	7YZM210005++H01	YZ037990	ACCESS.EDGING	3
	7YZM210009++H01	YZ126740	ACCESS.EDGING	5
	7YZM610001++H01	YZ010230	ACCESS SADDLE	3
	7YZM610007++H01	YZ023340	ACCESS.SADDLE	3
	7YZM610009++H01	YZ042980	ACCESS.SADDLE	4

AK-730

Rev.3

—— CONTENTS ——

FIG. 1	Covers & Accessories	2
FIG. 2	Paper Feed Section	4
FIG. 3	Drive Section	6
FIG. 4	Exit Section	8
• INDEX		10

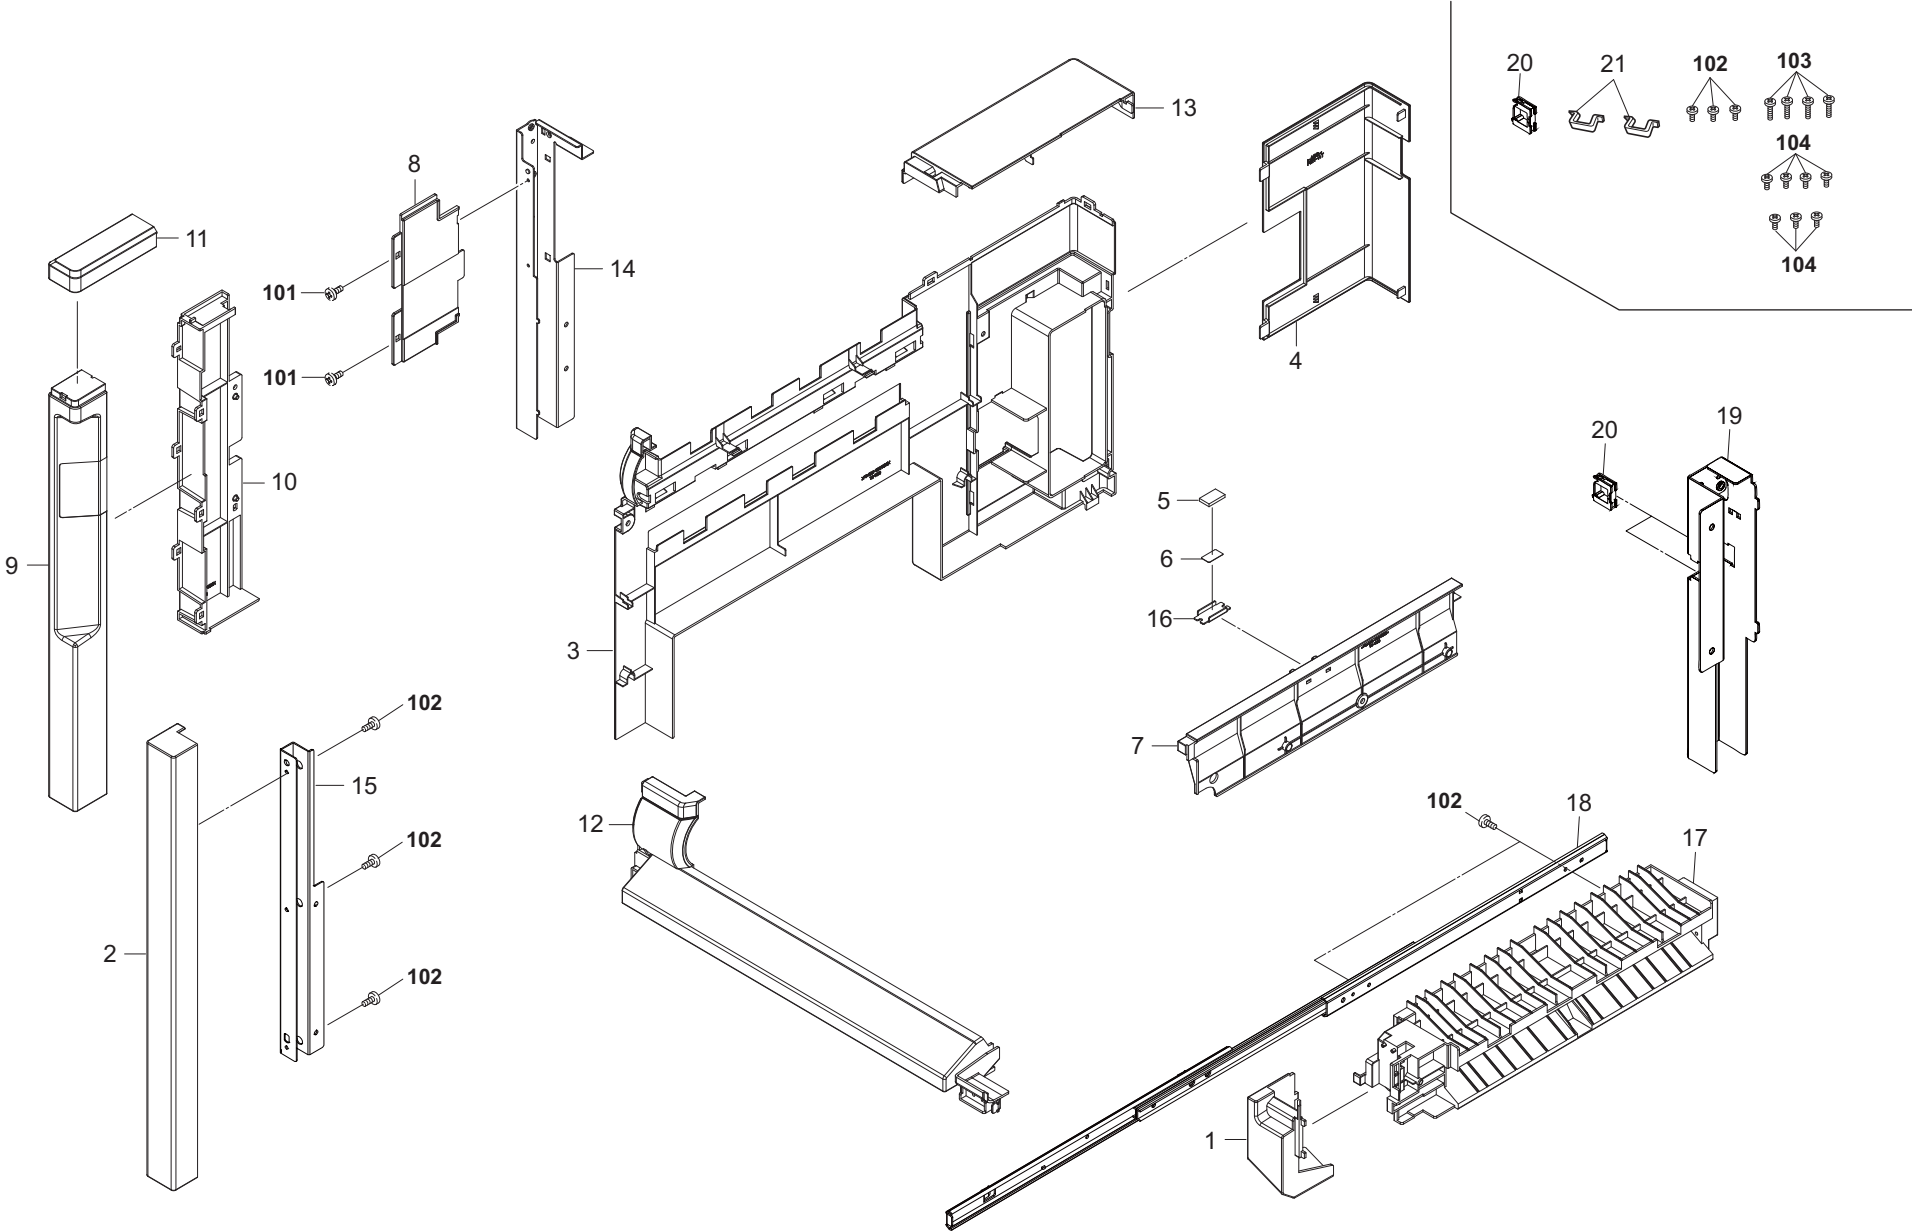


FIG. 1 Covers & Accessories

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	302LK28120	2LK28120	COVER FRONT RIGHT		1
⊙	2	302LK28181	2LK28181	COVER JUNCTION LOWER		1
⊙	3	302LK28161	2LK28161	COVER RELAY LEFT		1
⊙	4	302K904140	2K904140	COVER CONTROLLER		1
	5	302GR04370	2GR04370	MAGNET CLIP DISH		1
	6	302GR04380	2GR04380	SEAL MAGNET		1
⊙	7	302LK28190	2LK28190	COVER ISU LEFT		1
⊙	8	302LK28221	2LK28221	COVER JUNCTION RIGHT		1
⊙	9	302LK28171	2LK28171	COVER JUNCTION UPPER		1
⊙	10	302LK28210	2LK28210	COVER JUNCTION LEFT		1
⊙	11	302LK28230	2LK28230	COVER JUNCTION TOP		1
⊙	12	302LK28150	2LK28150	COVER FRONT LEFT UPPER		1
⊙	13	302LK28202	2LK28202	COVER LEFT UPPER		1
	14	302LK28070	2LK28070	STAY FRONT LEFT		1
	15	303P004120	3P004120	PLATE COVER JUNCTION		1
	16	303NB24210	3NB24210	HOLDER MAGNET		1
	17	302LK28012	2LK28012	GUIDE RELAY UPPER		1
	18	302LF28040	2LF28040	SLIDER RELEASE		1
	19	302LK28082	2LK28082	STAY REAR LEFT		1
	20	7YZM210009++H01	YZ126740	ACCESS.EDGING		3
	21	302K931080	2K931080	WIRE STOPPER		2
	101	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	102	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	103	7BB780420H	BB116060	+BIND T.T S SCREW 4X20 SR(BLACK)		
	104	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 2 Paper Feed Section

3NB-3

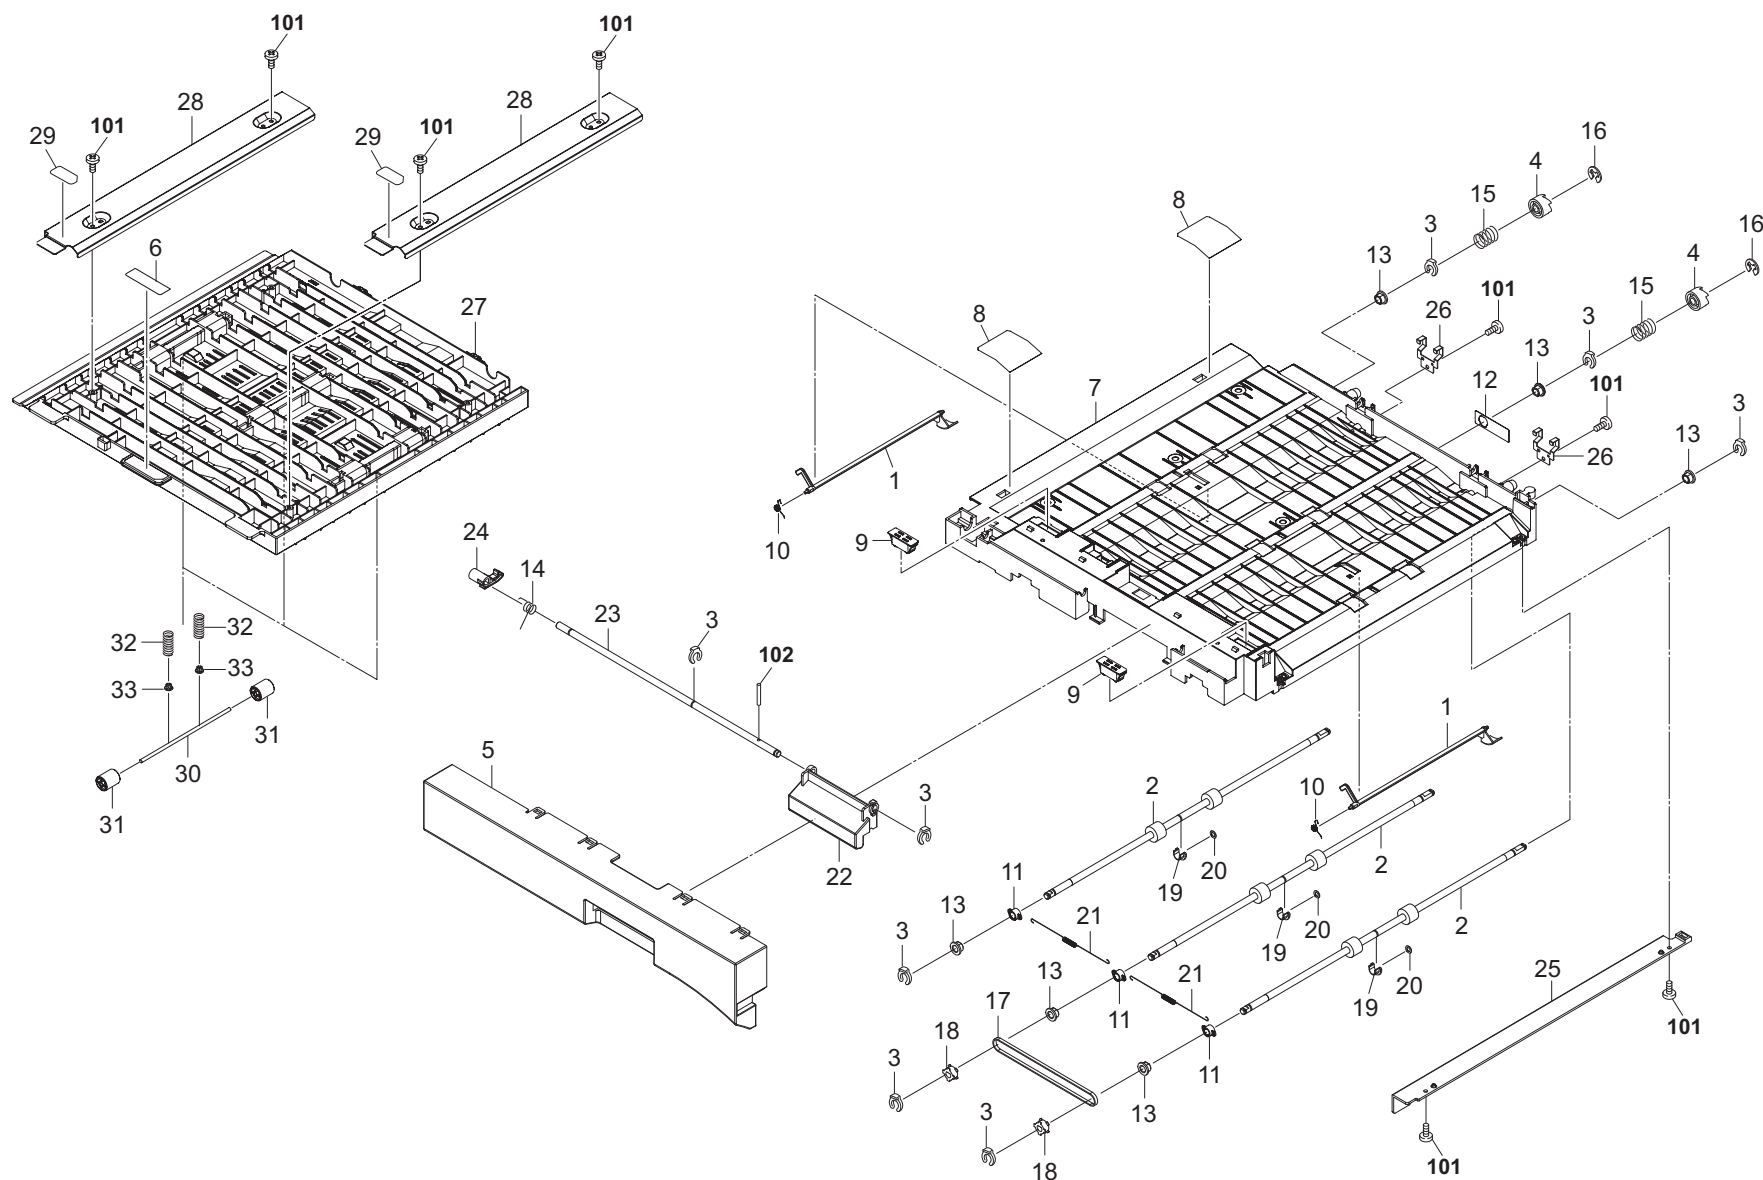


FIG. 2 Paper Feed Section

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	302LF28060	2LF28060	ACTUATOR RELAY		2
	2	302LF94010	2LF94010	PARTS ROLLER RELAY MIDDLE SP		3
	3	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		8
	4	302LF28121	2LF28121	JOINT DRIVE		2
	5	302LK28110	2LK28110	COVER FRONT LEFT		1
	6	302K934180	2K934180	LABEL RELAY A4		1
	7	302LF28023	2LF28023	GUIDE RELAY LOWER		1
	8	302LF28820	2LF28820	SHEET RELAY LOWER		2
	9	2FB17200	2FB17200	MAGNET UPPER REG GUIDE		2
	10	302K928190	2K928190	SPRING-TORSION SWITCHBACK		2
	11	302FZ07310	2FZ07310	BUSH CONTACT MPT B		3
	12	302LF28161	2LF28161	PLATE EARTH ROLLER		1
	13	7BE006103R31H01	BE134710	BEARING MF106ZZ		6
	14	302LF28580	2LF28580	SPRING-TORSION HOOK		1
	15	302LF28441	2LF28441	SPRING-COMPRESSION JOINT		2
	16	302FB09830	2FB09830	CUT WASHER 4		2
	17	302LF28130	2LF28130	BELT S2M-Z133		1
	18	302LF28342	2LF28342	PULLEY P18-S2M		2
	19	302FZ07540	2FZ07540	HOLDER SHAFT OUT		3
	20	7BC46042A050H01	BC046940	CUT WASHER 4.2X10.0X0.5T		3
	21	302LF28500	2LF28500	SPRING-EXTENSION EARTH		2
	22	302LK28270	2LK28270	HANDLE FRONT B		1
	23	302LF28180	2LF28180	SHAFT HANDLE		1
	24	303MA16580	3MA16580	HOOK LEVER JAM JS R		1
	25	302LK28101	2LK28101	GUIDE SLIDE RAIL		1
	26	302LF28780	2LF28780	PLATE HINGE STOPPER		2
	27	302LF28011	2LF28011	GUIDE RELAY UPPER		1
	28	302LF28050	2LF28050	PLATE REINFORCEMENT		2
	29	302K934150	2K934150	LABEL HIGH TEMP		2
	30	302K324460	2K324460	SHAFT FEED		3
	31	302F929260	2F929260	PULLEY DU LOW		6
	32	302F928170	2F928170	SPRING PULLEY		6
	33	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		6
101 102	7BB200308H	BB105660	+BIND T.T P SCREW 3X8			
	5MBP2010WXSP	E0020100	SPRING PIN / M2 X 10 S-BLK			

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

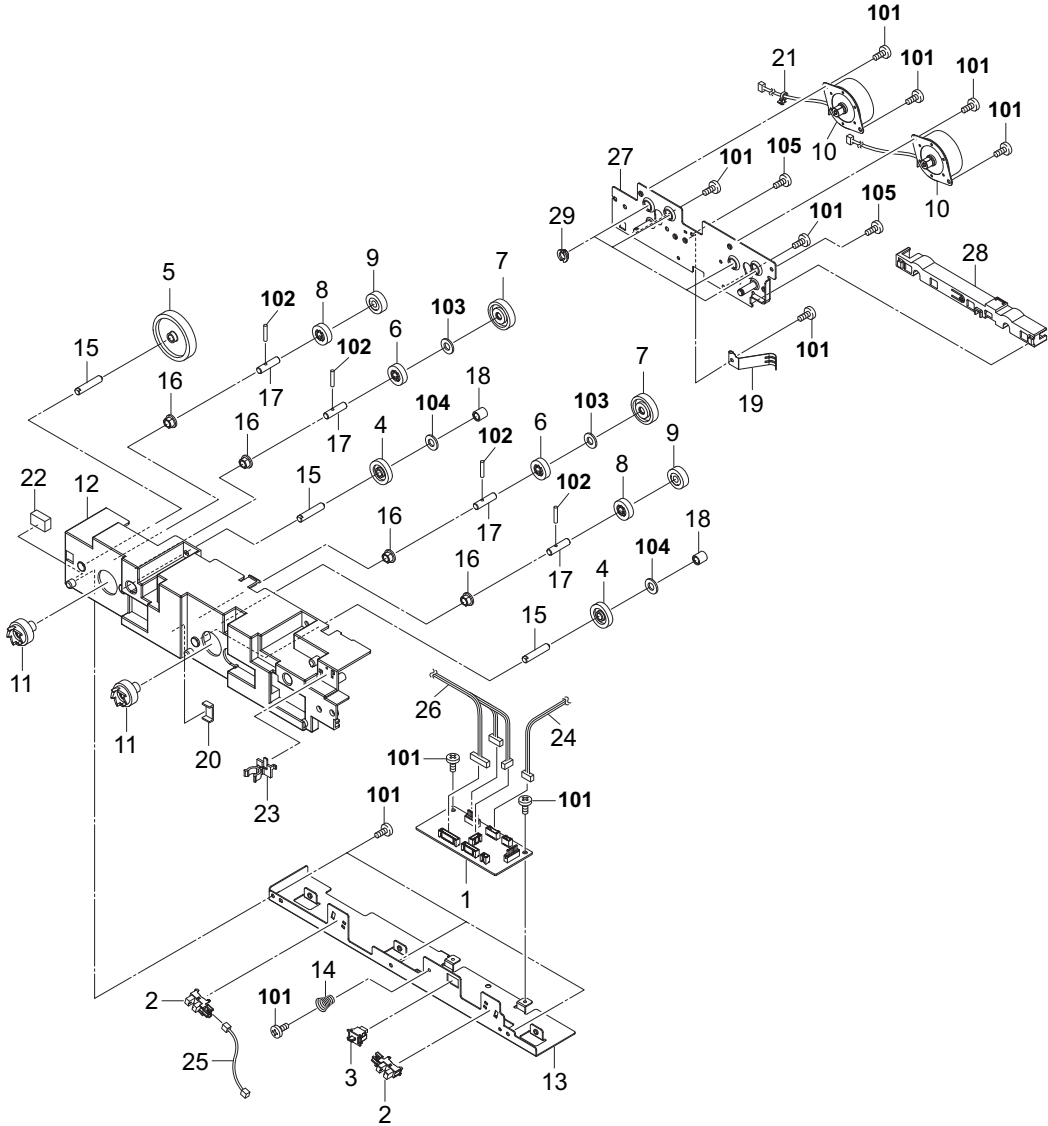


FIG. 3 Drive Section

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	302LK94080	2LK94080	PARTS PWB BRIDGE ASSY SP		1
⊙	2	7NXGP1A173LCH01	NX115300	SENSOR OPT.		2
⊙	3	7SP01000006+H01	SP121020	SW.PUSH		1
⊙	4	302LK28020	2LK28020	GEAR Z20L		2
⊙	5	302LF28150	2LF28150	GEAR Z42L		1
⊙	6	302LK28130	2LK28130	GEAR Z16R		2
⊙	7	302LK28060	2LK28060	GEAR Z50 ONEWAYCLUTCH		2
⊙	8	302LK28140	2LK28140	GEAR Z16L		2
⊙	9	302LK28050	2LK28050	GEAR Z35 ONEWAYCLUTCH		2
⊙	10	302K994300	2K994300	PARTS MOTOR PM FEED SP		2
⊙	11	302LK28041	2LK28041	GEAR Z20 JOINT		2
	12	302LF28093	2LF28093	FRAME DRIVE		1
	13	302LF28101	2LF28101	PLATE DRIVE A		1
	14	302LF28610	2LF28610	SPRING COMPRESSION RELAY		1
	15	303NJ31120	3NJ31120	PIN FEED DRIVE		3
	16	302H702590	2H702590	BUSH SCREW		4
	17	302LK28090	2LK28090	PIN ONEWAYCLUTCH		4
	18	302FZ07150	2FZ07150	PULLEY TENSION BELT		2
	19	302FB09320	2FB09320	GROUND PLATE DECK UNIT		1
	20	303LL02330	3LL02330	HOLDER WIRE D		1
	21	7YZM420003++H01	YZ052580	ACCESS.BAND		1
	22	302H012330	2H012330	SEAL WIRE A		1
	23	302LF28590	2LF28590	STOPPER RELAY		1
	24	302LF46B40	2LF46B40	WIRE OPEN SWITCH		1
	25	302LF46B50	2LF46B50	WIRE FEED SENSOR		1
	26	302LK46B11	2LK46B11	WIRE INTERFACE		1
	27	302LK28033	2LK28033	PLATE RELAY DRIVE		1
	28	302LF28560	2LF28560	GUIDE HARNESS		1
	29	302HN31590	2HN31590	BUSH DRIVE		4
	101	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	102	5MBP2010WXSP	E0020100	SPRING PIN / M2 X 10 S-BLK		
	103	C2893140	C2893140	SHIM 6.2X14X0.25T		
	104	5MBWK62955NN	C2892950	POLY SLIDER/M6.2X9.5X0.5T PLASTC		
	105	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 4 Exit Section

3NB-3

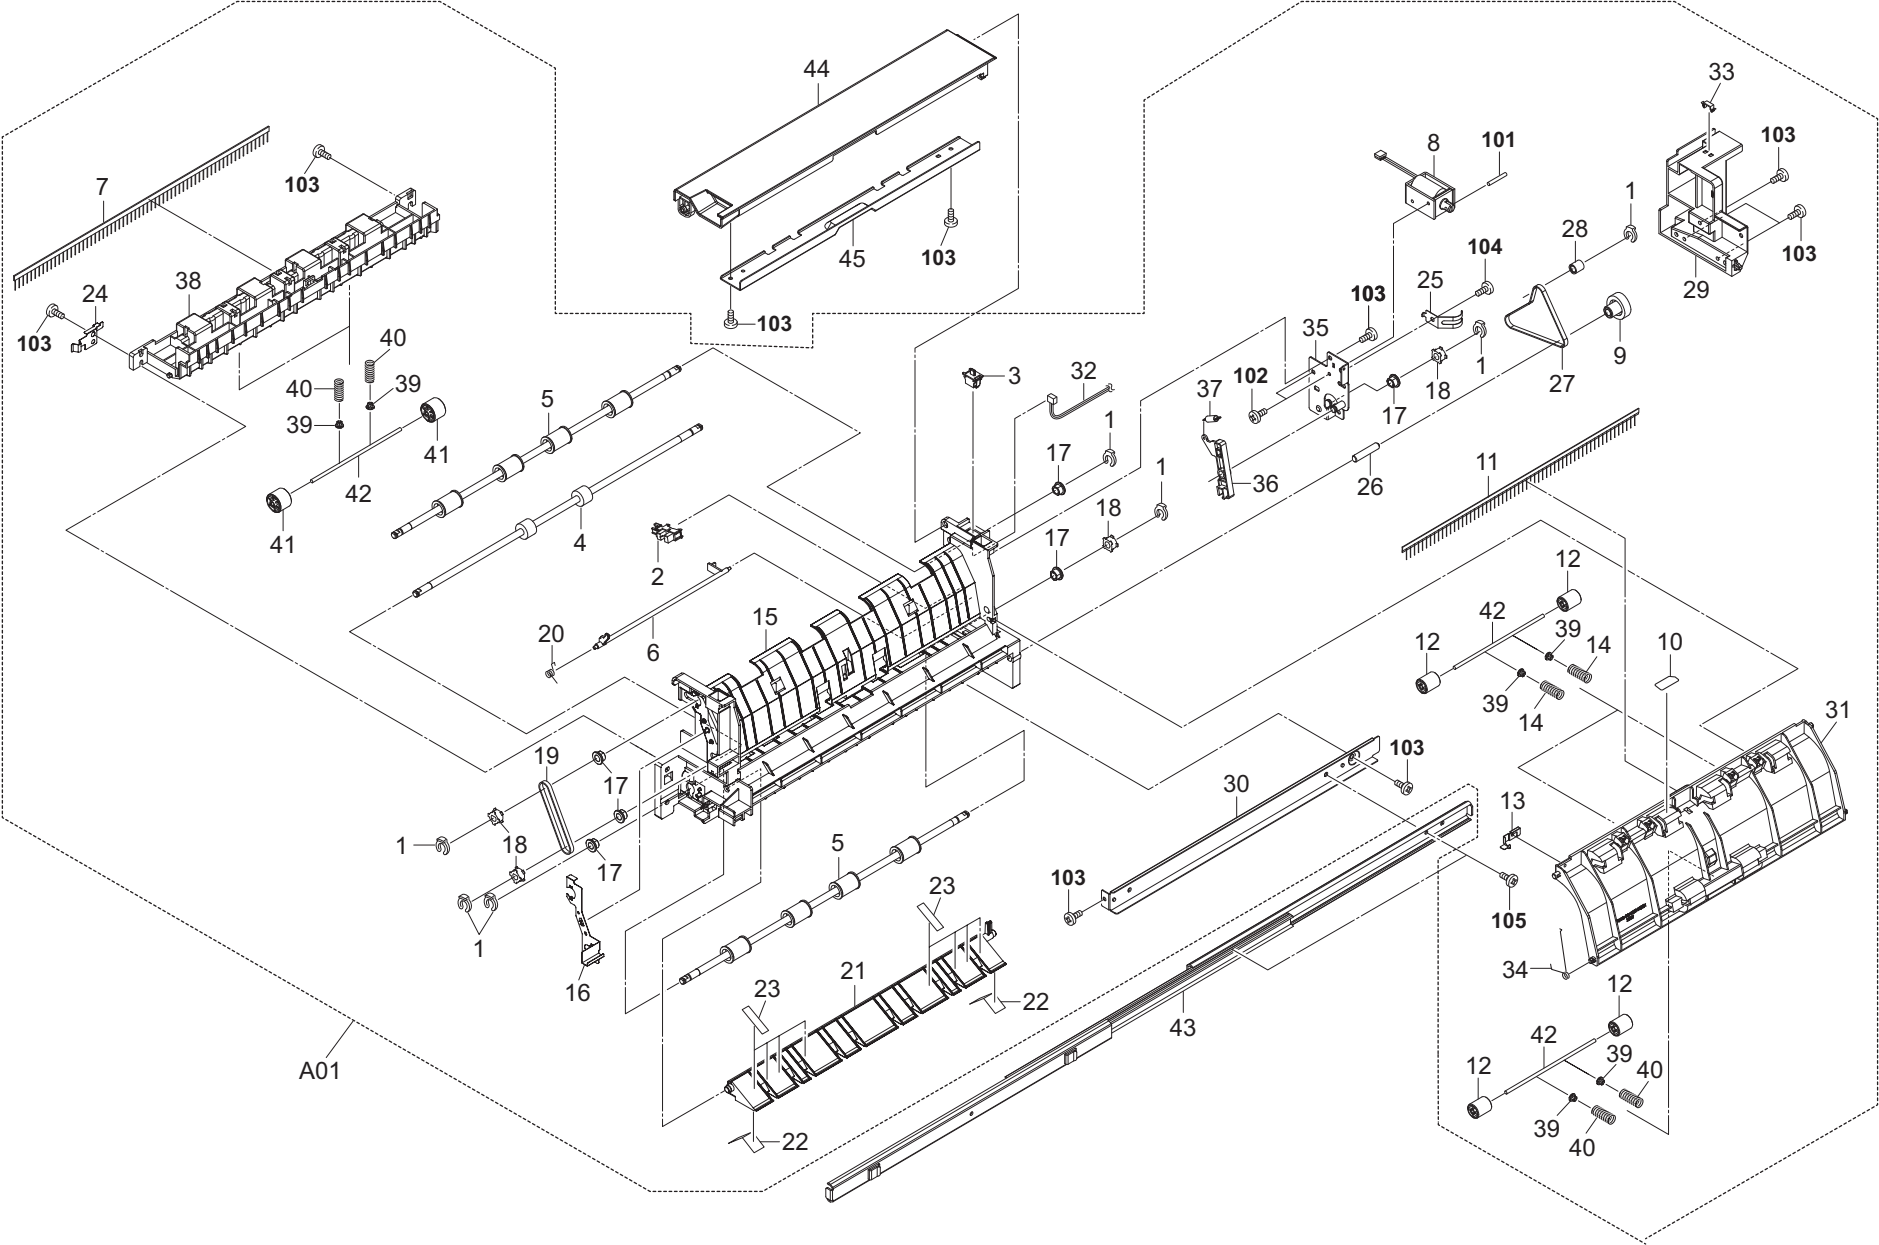


FIG. 4 Exit Section

3NB-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	A01	303NB94175	3NB94175	PARTS RELAY EXIT SP		1
	1	•5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		7
⊙	2	•7NXGP1A173LCH01	NX115300	SENSOR OPT.		1
⊙	3	•7SP01000006+H01	SP121020	SW.PUSH		1
⊙	4	•302LF94030	2LF94030	PARTS ROLLER RELAY EXIT MIDDLE SP		1
⊙	5	•302LF94021	2LF94021	PARTS ROLLER RELAY EXIT LOWER SP		2
	6	•302LF28350	2LF28350	ACTUATOR RELAY EXIT SW		1
	7	•63212210	63212210	STATIC ELIMINATOR,EJECT		1
⊙	8	•302K994370	2K994370	PARTS SOLENOID FEED SHIFT SP		1
⊙	9	•302LF28420	2LF28420	GEAR Z20R-P18		1
	10	•302K934160	2K934160	LABEL EXIT A2		1
	11	•302LF28640	2LF28640	STATIC-ELIMINATOR EJECT		1
	12	•302F929260	2F929260	PULLEY DU LOW		6
	13	•302LF28630	2LF28630	PLATE EARTH EXIT		1
	14	•302LF28840	2LF28840	SPRING-COMPRESSION RELAY EXIT		4
	15	•302LF28222	2LF28222	HOUSING RELAY EXIT		1
	16	•302LF28541	2LF28541	PLATE EARTH ROLLER A		1
	17	•7BE006103R31H01	BE134710	BEARING MF106ZZ		6
	18	•302LF28342	2LF28342	PULLEY P18-S2M		4
⊙	19	•3HL07190	3HL07190	BELT 150S2M,PAPER FEED		1
	20	•302K928190	2K928190	SPRING-TORSION SWITCHBACK		1
	21	•302LF28260	2LF28260	GUIDE RELAY SHIFT		1
	22	•302LF28750	2LF28750	SHEET RELAY FEED SHIFT		2
	23	•302LF28790	2LF28790	SHEET RELAY GUIDE CHANGE		8
	24	•302LF28531	2LF28531	PLATE EARTH EXIT		1
	25	•2C912690	2C912690	GROUND PLATE SCANNER B		1
	26	•303NJ31120	3NJ31120	PIN FEED DRIVE		1
⊙	27	•302LF28450	2LF28450	BELT S2M-Z112		1
	28	•302FZ07150	2FZ07150	PULLEY TENSION BELT		1
	29	•302LF28250	2LF28250	MOUNT RELAY EXIT		1
	30	•302LF28800	2LF28800	PLATE REINFORCEMENT		1
	31	•302LF28240	2LF28240	GUIDE RELAY EXIT RIGHT		1
	32	•302LF46B60	2LF46B60	WIRE EXIT SENSOR		1
	33	•302K931080	2K931080	WIRE STOPPER		1
	34	•302LF28810	2LF28810	SPRING-TORSION RELAY EXIT		1
	35	•302LF28401	2LF28401	PLATE RELAY SOLENOID		1
	36	•302LF28410	2LF28410	LEVER RELAY SOLENOID		1
	37	•3HL10090	3HL10090	SPRING,LF SHIFT GUIDE		1
	38	•302LF28230	2LF28230	GUIDE RELAY EXIT UPPER		1
	39	•2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		10
	40	•302F928170	2F928170	SPRING PULLEY		6
	41	•302JF22010	2JF22010	PULLEY MIDDLE		4
	42	•302K324460	2K324460	SHAFT FEED		5
	43	302LF28040	2LF28040	SLIDER RELEASE		1
⊙	44	302LF28272	2LF28272	COVER RELAY EXIT		1
	45	302LF28621	2LF28621	PLATE REINFORCEMENT EXIT		1
	101	E0130240	E0130240	SPRING PIN 3X24(SUS)		
	102	7BB000303H	BB107000	+BIND M SCREW 3X3		
	103	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	104	7BB100304H	BB105580	+BIND T.T S SCREW 3X4		
	105	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		

•Parts with "⊙" indicate regular maintenance parts.

•Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

•Parts with "." are component parts or sub-assemblies of the assembly appearing immediately above them.

•Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

INDEX

3NB-3

	Part.No.	Alternative	Description	Fig.No.
	2C912690	2C912690	GROUND PLATE SCANNER B	4
	2FB17200	2FB17200	MAGNET UPPER REG GUIDE	2
	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4	2,4
	302F928170	2F928170	SPRING PULLEY	2,4
	302F929260	2F929260	PULLEY DU LOW	2,4
	302FB09320	2FB09320	GROUND PLATE DECK UNIT	3
	302FB09830	2FB09830	CUT WASHER 4	2
	302FZ07150	2FZ07150	PULLEY TENSION BELT	3,4
	302FZ07310	2FZ07310	BUSH CONTACT MPT B	2
	302FZ07540	2FZ07540	HOLDER SHAFT OUT	2
	302GR04370	2GR04370	MAGNET CLIP DISH	1
	302GR04380	2GR04380	SEAL MAGNET	1
	302H012330	2H012330	SEAL WIRE A	3
	302H702590	2H702590	BUSH SCREW	3
	302HN31590	2HN31590	BUSH DRIVE	3
	302JF22010	2JF22010	PULLEY MIDDLE	4
	302K324460	2K324460	SHAFT FEED	2,4
⊙	302K904140	2K904140	COVER CONTROLLER	1
	302K928190	2K928190	SPRING-TORSION SWITCHBACK	2,4
	302K931080	2K931080	WIRE STOPPER	1,4
	302K934150	2K934150	LABEL HIGH TEMP	2
	302K934160	2K934160	LABEL EXIT A2	4
	302K934180	2K934180	LABEL RELAY A4	2
⊙	302K994300	2K994300	PARTS MOTOR PM FEED SP	3
⊙	302K994370	2K994370	PARTS SOLENOID FEED SHIFT SP	4
	302LF28011	2LF28011	GUIDE RELAY UPPER	2
	302LF28023	2LF28023	GUIDE RELAY LOWER	2
	302LF28040	2LF28040	SLIDER RELEASE	1,4
	302LF28050	2LF28050	PLATE REINFORCEMENT	2
	302LF28060	2LF28060	ACTUATOR RELAY	2
	302LF28093	2LF28093	FRAME DRIVE	3
	302LF28101	2LF28101	PLATE DRIVE A	3
	302LF28121	2LF28121	JOINT DRIVE	2
	302LF28130	2LF28130	BELT S2M-Z133	2
⊙	302LF28150	2LF28150	GEAR Z42L	3
	302LF28161	2LF28161	PLATE EARTH ROLLER	2
	302LF28180	2LF28180	SHAFT HANDLE	2
	302LF28222	2LF28222	HOUSING RELAY EXIT	4
	302LF28230	2LF28230	GUIDE RELAY EXIT UPPER	4
	302LF28240	2LF28240	GUIDE RELAY EXIT RIGHT	4

	Part.No.	Alternative	Description	Fig.No.
⊙	302LF28250	2LF28250	MOUNT RELAY EXIT	4
	302LF28260	2LF28260	GUIDE RELAY SHIFT	4
	302LF28272	2LF28272	COVER RELAY EXIT	4
	302LF28342	2LF28342	PULLEY P18-S2M	2,4
	302LF28350	2LF28350	ACTUATOR RELAY EXIT SW	4
	302LF28401	2LF28401	PLATE RELAY SOLENOID	4
	302LF28410	2LF28410	LEVER RELAY SOLENOID	4
	302LF28420	2LF28420	GEAR Z20R-P18	4
	302LF28441	2LF28441	SPRING-COMPRESSION JOINT	2
	302LF28450	2LF28450	BELT S2M-Z112	4
	302LF28500	2LF28500	SPRING-EXTENSION EARTH	2
	302LF28531	2LF28531	PLATE EARTH EXIT	4
	302LF28541	2LF28541	PLATE EARTH ROLLER A	4
	302LF28560	2LF28560	GUIDE HARNESS	3
	302LF28580	2LF28580	SPRING-TORSION HOOK	2
	302LF28590	2LF28590	STOPPER RELAY	3
	302LF28610	2LF28610	SPRING COMPRESSION RELAY	3
	302LF28621	2LF28621	PLATE REINFORCEMENT EXIT	4
	302LF28630	2LF28630	PLATE EARTH EXIT	4
	302LF28640	2LF28640	STATIC-ELIMINATOR EJECT	4
	302LF28750	2LF28750	SHEET RELAY FEED SHIFT	4
	302LF28780	2LF28780	PLATE HINGE STOPPER	2
	302LF28790	2LF28790	SHEET RELAY GUIDE CHANGE	4
	302LF28800	2LF28800	PLATE REINFORCEMENT	4
	302LF28810	2LF28810	SPRING-TORSION RELAY EXIT	4
	302LF28820	2LF28820	SHEET RELAY LOWER	2
	302LF28840	2LF28840	SPRING-COMPRESSION RELAY EXIT	4
	302LF46B40	2LF46B40	WIRE OPEN SWITCH	3
	302LF46B50	2LF46B50	WIRE FEED SENSOR	3
	302LF46B60	2LF46B60	WIRE EXIT SENSOR	4
	302LF94010	2LF94010	PARTS ROLLER RELAY MIDDLE SP	2
	302LF94021	2LF94021	PARTS ROLLER RELAY EXIT LOWER SP	4
	302LF94030	2LF94030	PARTS ROLLER RELAY EXIT MIDDLE SP	4
	302LK28012	2LK28012	GUIDE RELAY UPPER	1
	302LK28020	2LK28020	GEAR Z20L	3
	302LK28033	2LK28033	PLATE RELAY DRIVE	3
	302LK28041	2LK28041	GEAR Z20 JOINT	3
	302LK28050	2LK28050	GEAR Z35 ONEWAYCLUTCH	3
	302LK28060	2LK28060	GEAR Z50 ONEWAYCLUTCH	3
	302LK28070	2LK28070	STAY FRONT LEFT	1

	Part.No.	Alternative	Description	Fig.No.
	302LK28082	2LK28082	STAY REAR LEFT	1
	302LK28090	2LK28090	PIN ONEWAYCLUTCH	3
	302LK28101	2LK28101	GUIDE SLIDE RAIL	2
⊙	302LK28110	2LK28110	COVER FRONT LEFT	2
⊙	302LK28120	2LK28120	COVER FRONT RIGHT	1
⊙	302LK28130	2LK28130	GEAR Z16R	3
⊙	302LK28140	2LK28140	GEAR Z16L	3
⊙	302LK28150	2LK28150	COVER FRONT LEFT UPPER	1
⊙	302LK28161	2LK28161	COVER RELAY LEFT	1
⊙	302LK28171	2LK28171	COVER JUNCTION UPPER	1
⊙	302LK28181	2LK28181	COVER JUNCTION LOWER	1
⊙	302LK28190	2LK28190	COVER ISU LEFT	1
⊙	302LK28202	2LK28202	COVER LEFT UPPER	1
⊙	302LK28210	2LK28210	COVER JUNCTION LEFT	1
⊙	302LK28221	2LK28221	COVER JUNCTION RIGHT	1
⊙	302LK28230	2LK28230	COVER JUNCTION TOP	1
	302LK28270	2LK28270	HANDLE FRONT B	2
	302LK46B11	2LK46B11	WIRE INTERFACE	3
⊙	302LK94080	2LK94080	PARTS PWB BRIDGE ASSY SP	3
	303LL02330	3LL02330	HOLDER WIRE D	3
	303MA16580	3MA16580	HOOK LEVER JAM JS R	2
	303NB24210	3NB24210	HOLDER MAGNET	1
⊙	303NB94175	3NB94175	PARTS RELAY EXIT SP	4
	303NJ31120	3NJ31120	PIN FEED DRIVE	3,4
	303P004120	3P004120	PLATE COVER JUNCTION	1
⊙	3HL07190	3HL07190	BELT 150S2M,PAPER FEED	4
	3HL10090	3HL10090	SPRING,LF SHIFT GUIDE	4
	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	2,4
	63212210	63212210	STATIC ELIMINATOR,EJECT	4
	7BC46042A050H01	BC046940	CUT WASHER 4.2X10.0X0.5T	2
	7BE006103R31H01	BE134710	BEARING MF106ZZ	2,4
⊙	7NXGP1A173LCH01	NX115300	SENSOR OPT.	3,4
⊙	7SP01000006+H01	SP121020	SW.PUSH	3,4
	7YZM210009++H01	YZ126740	ACCESS.EDGING	1
	7YZM420003++H01	YZ052580	ACCESS.BAND	3

AK-735

—— CONTENTS ——

FIG. 1	AK-735 -1	2
FIG. 2	AK-735 -2	4

• INDEX	6
---------------	---

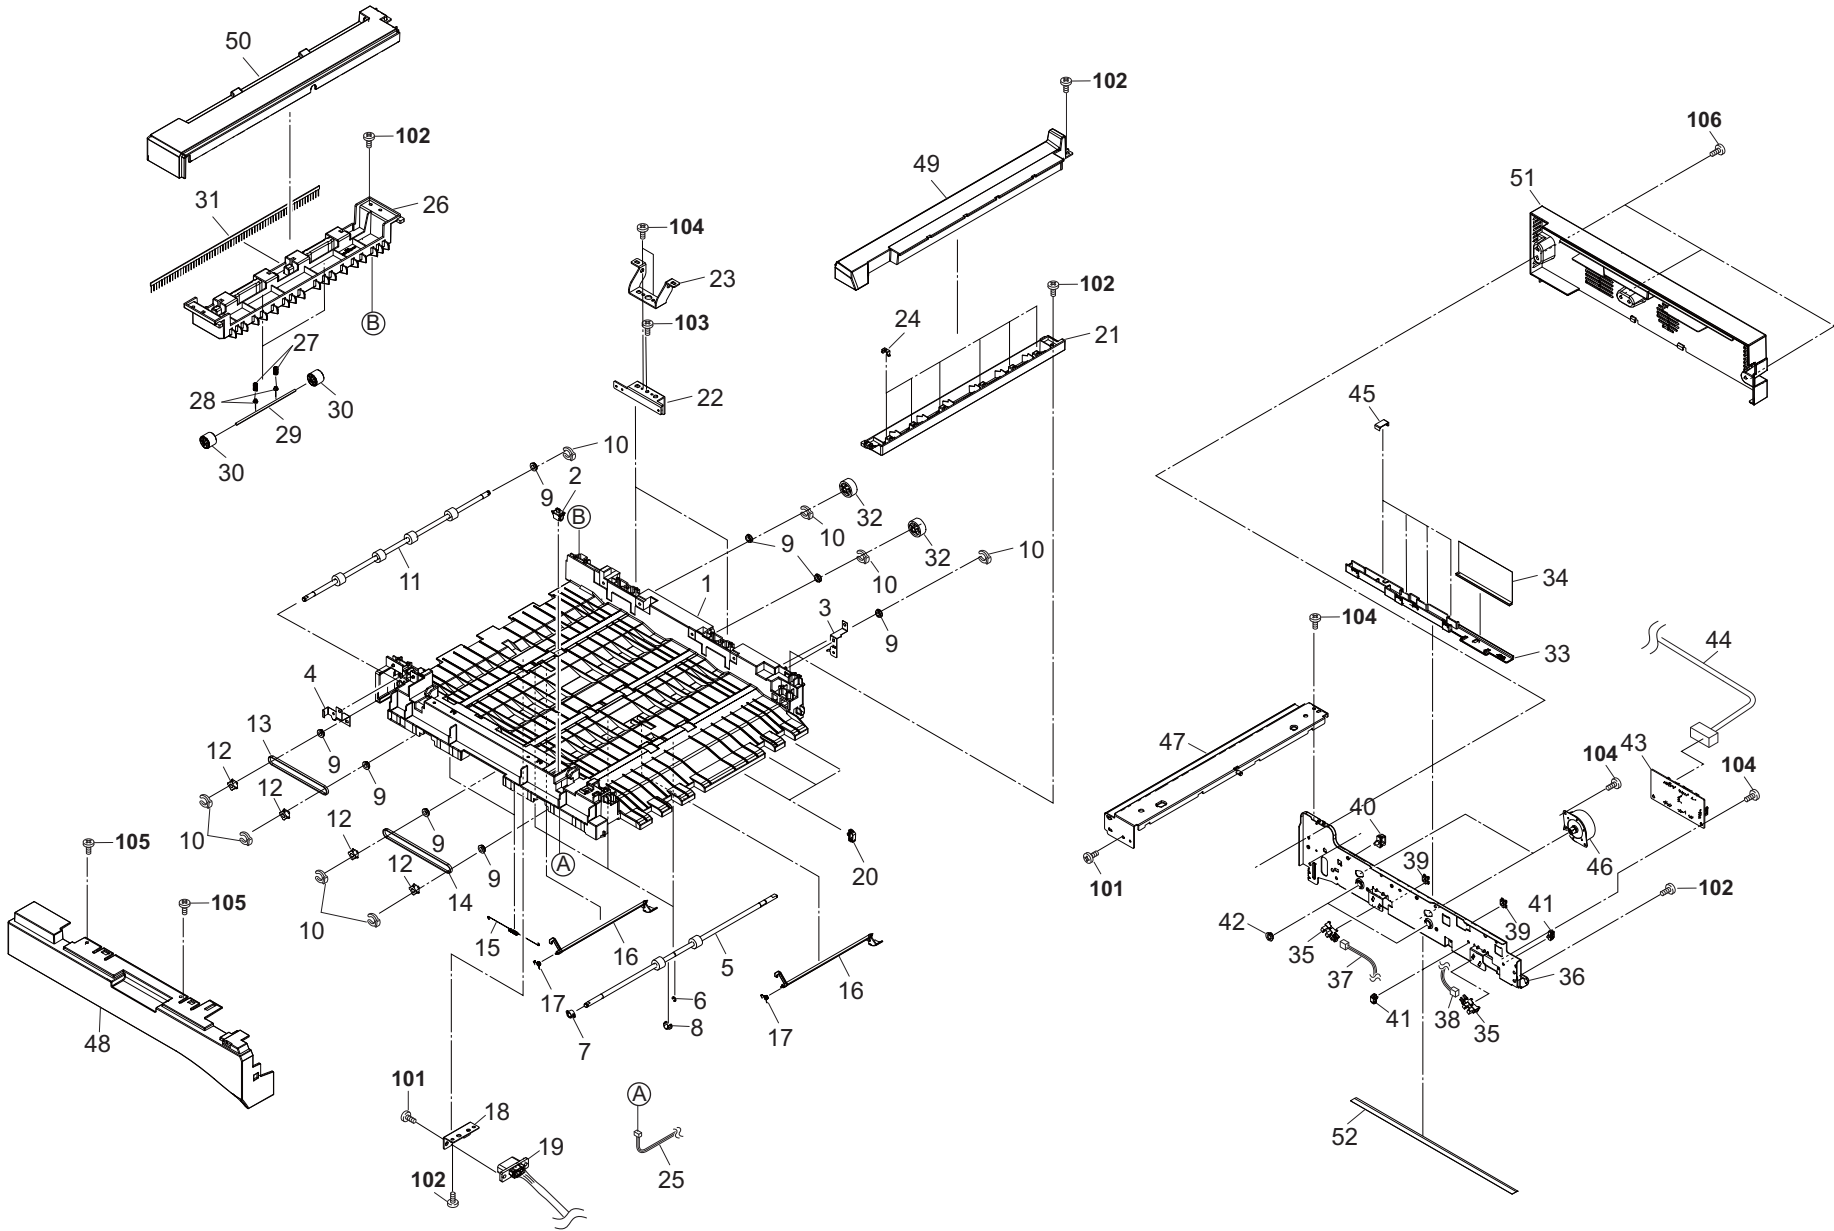


FIG. 1 AK-735 -1

2MN

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	1	302MN28520	2MN28520	GUIDE RELAY LOWER		1
	2	7SP0100006++H01	SP121020	SW.PUSH		1
	3	302MN28620	2MN28620	PLATE EARTH ROLLER		1
	4	302MN28630	2MN28630	PLATE EARTH EXIT		1
⊙	5	302MN94010	2MN94010	PARTS ROLLER RELAY MIDDLE SP		3
	6	2BG22990	2BG22990	CUT WASHER 4		3
	7	302FZ07310	2FZ07310	BUSH CONTACT MPT B		3
	8	302FZ07540	2FZ07540	HOLDER SHAFT OUT		3
	9	7BE006103R31H01	BE134710	BEARING MF106ZZ		8
	10	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		8
⊙	11	302MN94020	2MN94020	PARTS ROLLER RELAY EXIT LOWER SP		1
	12	302LF28342	2LF28342	PULLEY P18-S2M		4
	13	302MN28660	2MN28660	BELT S2M-Z116		1
	14	302LF28130	2LF28130	BELT S2M-Z133		1
	15	302LF28500	2LF28500	SPRING-EXTENSION EARTH		2
	16	302LF28060	2LF28060	ACTUATOR RELAY		2
	17	302K928190	2K928190	SPRING-TORSION SWITCHBACK		2
	18	302MN28800	2MN28800	PLATE DRAWER		1
	19	302MN46140	2MN46140	WIRE BRIDGE JOINT 3		1
	20	7YZM610008++H01	YZ037940	ACCESS.SADDLE		3
	21	302MN28700	2MN28700	GUIDE RELAY UPPER RIGHT		1
	22	302MN28940	2MN28940	MOUNT HINGE		2
	23	302MN28960	2MN28960	BASE HINGE		2
	24	302K931080	2K931080	WIRE STOPPER		6
	25	302MN46060	2MN46060	WIRE OPEN SWITCH		1
	26	302MN28540	2MN28540	GUIDE RELAY EXIT UPPER		1
	27	302F928170	2F928170	SPRING PULLEY		4
	28	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		4
	29	302K324460	2K324460	SHAFT FEED		2
	30	302JF22010	2JF22010	PULLEY MIDDLE		4
⊙	31	63212210	63212210	STATIC ELIMINATOR,EJECT		1
	32	302MN28560	2MN28560	GEAR Z43 JOINT		2
	33	302MN28640	2MN28640	GUIDE HARNESS		1
	34	302MN28950	2MN28950	FILM WIRE		1
⊙	35	7NXGP1A173LCH01	NX115300	SENSOR OPT.		2
	36	302MN28550	2MN28550	PLATE BRIDGE DRIVE		1
	37	302MN46070	2MN46070	WIRE FEED SENSOR 1		1
	38	302MN46200	2MN46200	WIRE FEED SENSOR 2		1
	39	7YZM210006++H01	YZ038000	ACCESS.EDGING		2
	40	7YZM610001++H01	YZ010230	ACCESS SADDLE		1
	41	7YZM610007++H01	YZ023340	ACCESS.SADDLE		2
	42	302HN31590	2HN31590	BUSH DRIVE		2
⊙	43	302LK94080	2LK94080	PARTS PWB BRIDGE ASSY SP		1
	44	302MN46050	2MN46050	WIRE BRIDGE		1
	45	303LL02330	3LL02330	HOLDER WIRE D		4
⊙	46	302K994300	2K994300	PARTS MOTOR PM FEED SP		2
	47	302MN28690	2MN28690	STAY BRIDGE LEFT		1
⊙	48	302MN28400	2MN28400	COVER BRIDGE FRONT		1
⊙	49	302MN28450	2MN28450	COVER TOP RIGHT		1

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙	50	302MN28430	2MN28430	COVER TOP LEFT		1
⊙	51	302MN28440	2MN28440	COVER BRIDGE REAR		1
	52	302K014950	2K014950	SHEET LID G		1
	101	7BB700310H	BB106900	+BIND T.T S SCREW 3X10 SR		
	102	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	103	7BB200410H	BB105700	+BIND T.T P SCREW 4X10		
	104	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	105	7BB282308H	BB111240	+TP-FLAT T.T P SCREW 3X8(BLACK)		
	106	7BB782308H	BB111300	+TP-FLAT T.T S SCREW 3X8 SR(BLACK)		

- Parts with "+" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

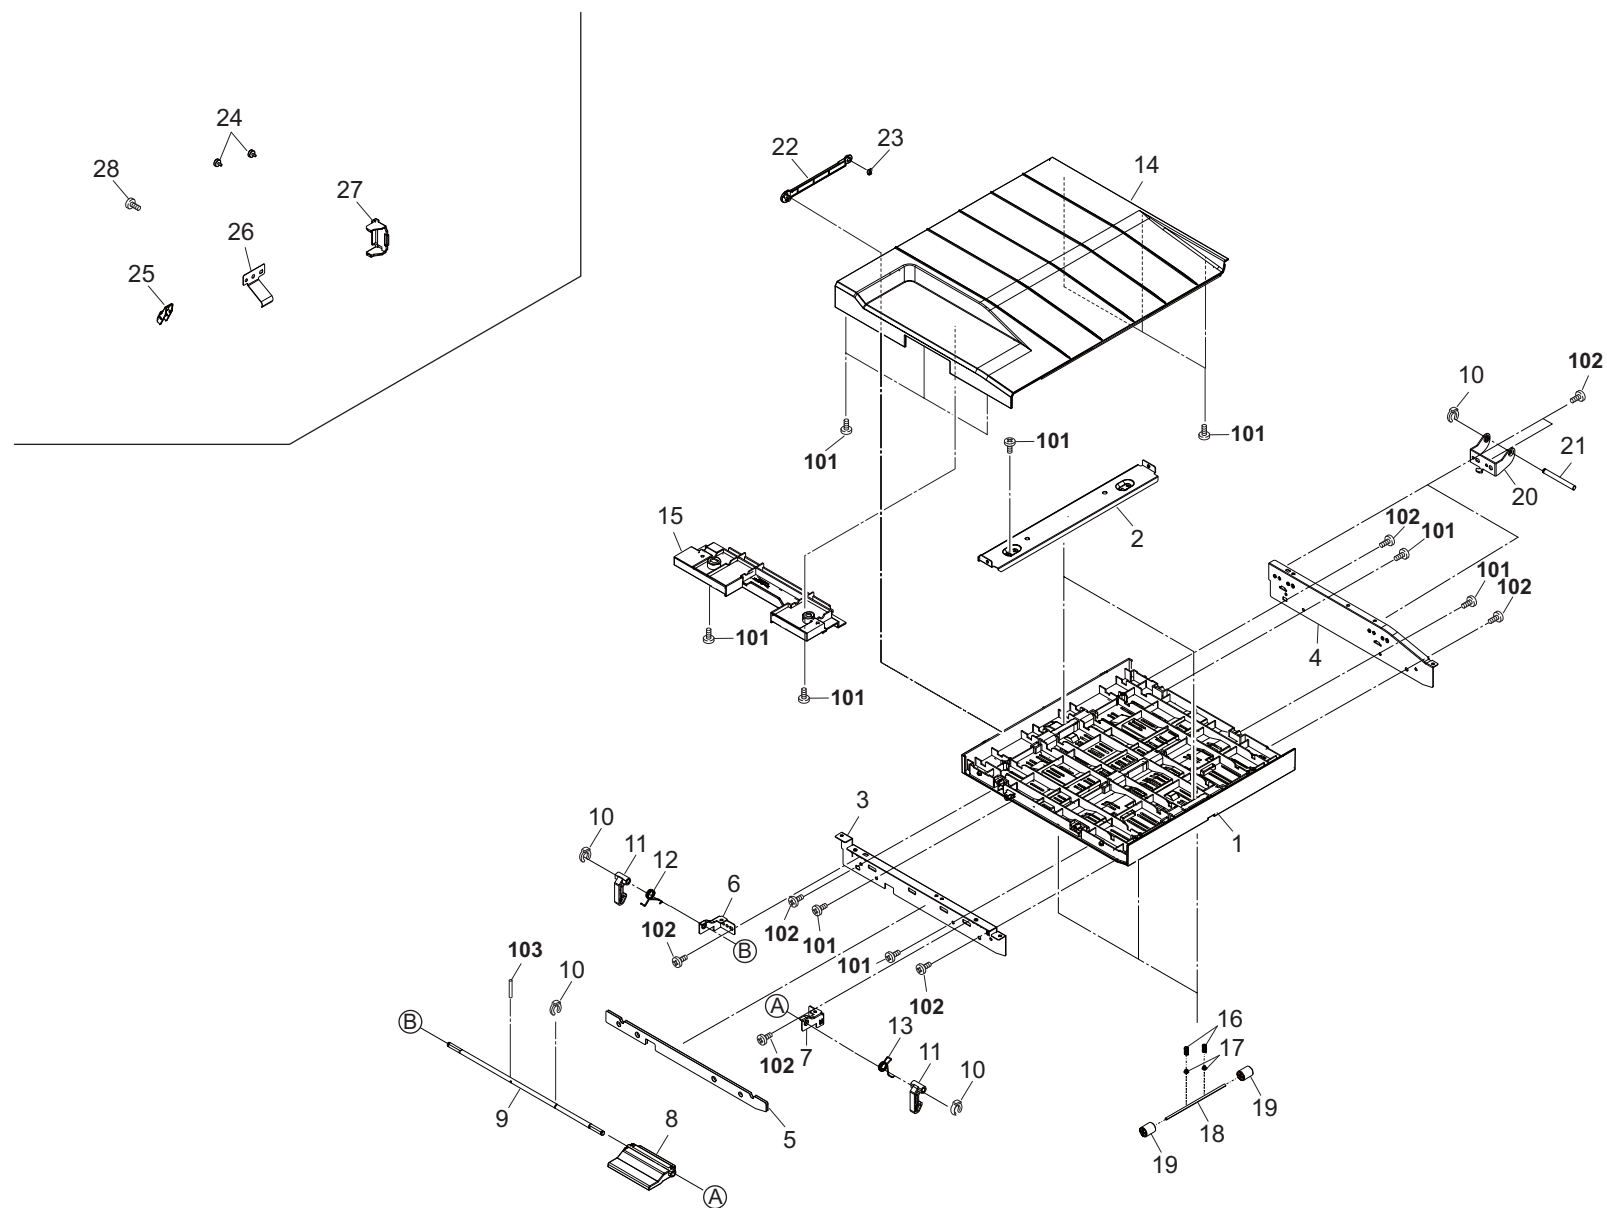


FIG. 2 AK-735 -2

2MN

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
⊙ ⊙	1	302MN28530	2MN28530	GUIDE RELAY UPPER		1
	2	302MN28770	2MN28770	PLATE REINFORCEMENT		2
	3	302MN28580	2MN28580	STAY BRIDGE COVER FRONT		1
	4	302MN28590	2MN28590	STAY BRIDGE COVER REAR		1
	5	302MN28810	2MN28810	SHEET COVER TOP BRIDGE		1
	6	302MN28780	2MN28780	PLATE LEVER LEFT		1
	7	302MN28790	2MN28790	PLATE LEVER RIGHT		1
	8	302MN28750	2MN28750	LEVER COVER BRIDGE		1
	9	302MN28570	2MN28570	SHAFT COVER BRIDGE LEVER		1
	10	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		5
	11	302MN28610	2MN28610	HOOK BRIDGE UPPER		2
	12	302MN28910	2MN28910	SPRING HOOK LEFT		1
	13	302MN28920	2MN28920	SPRING HOOK RIGHT		1
	14	302MN28600	2MN28600	COVER TOP BRIDGE		1
	15	302MN28760	2MN28760	COVER LEVER LOW		1
	16	302F928170	2F928170	SPRING PULLEY		6
	17	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4		6
	18	302K324460	2K324460	SHAFT FEED		3
	19	302F929260	2F929260	PULLEY DU LOW		6
	20	302MN28970	2MN28970	ARM HINGE		2
	21	302MN28980	2MN28980	SHAFT HINGE		2
	22	302MN28680	2MN28680	LEVER BRIDGE UPPER		1
	23	302LF12410	2LF12410	STOPPER 3		1
	24	302MN02250	2MN02250	PIN OPTION BK		2
	25	302MN28990	2MN28990	ATTACHMENT ACT		1
	26	303NB02320	3NB02320	PLATE EARTH L		1
	27	303NB04340	3NB04340	JOINT INTERFACE		1
	28	5MMT263SN012++R	2D903100	SCREW OP / M3 X 8 CRFREE A4		1

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity
	101	7BB200308H	BB105660	+BIND T.T P SCREW 3X8		
	102	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR		
	103	7BP512012B0CH01	BP126440	PARALLEL PIN 2.0X12		

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

INDEX

2MN

	Part.No.	Alternative.	Description	Fig.No.
	2BG22990	2BG22990	CUT WASHER 4	1
	2FM04150	5MVM163DN005	CAP SPRING /B-11 ENCLOSURE A4	1,2
	302F928170	2F928170	SPRING PULLEY	1,2
	302F929260	2F929260	PULLEY DU LOW	2
	302FZ07310	2FZ07310	BUSH CONTACT MPT B	1
	302FZ07540	2FZ07540	HOLDER SHAFT OUT	1
	302HN31590	2HN31590	BUSH DRIVE	1
	302JF22010	2JF22010	PULLEY MIDDLE	1
	302K014950	2K014950	SHEET LID G	1
	302K324460	2K324460	SHAFT FEED	1,2
	302K928190	2K928190	SPRING-TORSION SWITCHBACK	1
	302K931080	2K931080	WIRE STOPPER	1
⊙	302K994300	2K994300	PARTS MOTOR PM FEED SP	1
	302LF12410	2LF12410	STOPPER 3	2
	302LF28060	2LF28060	ACTUATOR RELAY	1
	302LF28130	2LF28130	BELT S2M-Z133	1
	302LF28342	2LF28342	PULLEY P18-S2M	1
	302LF28500	2LF28500	SPRING-EXTENSION EARTH	1
⊙	302LK94080	2LK94080	PARTS PWB BRIDGE ASSY SP	1
	302MN02250	2MN02250	PIN OPTION BK	2
⊙	302MN28400	2MN28400	COVER BRIDGE FRONT	1
⊙	302MN28430	2MN28430	COVER TOP LEFT	1
⊙	302MN28440	2MN28440	COVER BRIDGE REAR	1
⊙	302MN28450	2MN28450	COVER TOP RIGHT	1
	302MN28520	2MN28520	GUIDE RELAY LOWER	1
	302MN28530	2MN28530	GUIDE RELAY UPPER	2
	302MN28540	2MN28540	GUIDE RELAY EXIT UPPER	1
	302MN28550	2MN28550	PLATE BRIDGE DRIVE	1
⊙	302MN28560	2MN28560	GEAR Z43 JOINT	1
	302MN28570	2MN28570	SHAFT COVER BRIDGE LEVER	2
	302MN28580	2MN28580	STAY BRIDGE COVER FRONT	2
	302MN28590	2MN28590	STAY BRIDGE COVER REAR	2
⊙	302MN28600	2MN28600	COVER TOP BRIDGE	2
	302MN28610	2MN28610	HOOK BRIDGE UPPER	2
	302MN28620	2MN28620	PLATE EARTH ROLLER	1
	302MN28630	2MN28630	PLATE EARTH EXIT	1
	302MN28640	2MN28640	GUIDE HARNESS	1
	302MN28660	2MN28660	BELT S2M-Z116	1
	302MN28680	2MN28680	LEVER BRIDGE UPPER	2
	302MN28690	2MN28690	STAY BRIDGE LEFT	1
	302MN28700	2MN28700	GUIDE RELAY UPPER RIGHT	1
	302MN28750	2MN28750	LEVER COVER BRIDGE	2
⊙	302MN28760	2MN28760	COVER LEVER LOW	2
	302MN28770	2MN28770	PLATE REINFORCEMENT	2
	302MN28780	2MN28780	PLATE LEVER LEFT	2
	302MN28790	2MN28790	PLATE LEVER RIGHT	2
	302MN28800	2MN28800	PLATE DRAWER	1
	302MN28810	2MN28810	SHEET COVER TOP BRIDGE	2
	302MN28910	2MN28910	SPRING HOOK LEFT	2
	302MN28920	2MN28920	SPRING HOOK RIGHT	2

	Part.No.	Alternative.	Description	Fig.No.
	302MN28940	2MN28940	MOUNT HINGE	1
	302MN28950	2MN28950	FILM WIRE	1
	302MN28960	2MN28960	BASE HINGE	1
	302MN28970	2MN28970	ARM HINGE	2
	302MN28980	2MN28980	SHAFT HINGE	2
	302MN28990	2MN28990	ATTACHMENT ACT	2
	302MN46050	2MN46050	WIRE BRIDGE	1
	302MN46060	2MN46060	WIRE OPEN SWITCH	1
	302MN46070	2MN46070	WIRE FEED SENSOR 1	1
	302MN46140	2MN46140	WIRE BRIDGE JOINT 3	1
	302MN46200	2MN46200	WIRE FEED SENSOR 2	1
⊙	302MN94010	2MN94010	PARTS ROLLER RELAY MIDDLE SP	1
⊙	302MN94020	2MN94020	PARTS ROLLER RELAY EXIT LOWER SP	1
	303LL02330	3LL02330	HOLDER WIRE D	1
	303NB02320	3NB02320	PLATE EARTH L	2
	303NB04340	3NB04340	JOINT INTERFACE	2
	5MMT263SN012++R	2D903100	SCREW OP / M3 X 8 CRFREE A4	2
	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	1,2
	63212210	63212210	STATIC ELIMINATOR,EJECT	1
	7BE006103R31H01	BE134710	BEARING MF106ZZ	1
⊙	7NXGP1A173LCH01	NX115300	SENSOR OPT.	1
⊙	7SP01000006++H01	SP121020	SW.PUSH	1
	7YZM210006++H01	YZ038000	ACCESS.EDGING	1
	7YZM610001++H01	YZ010230	ACCESS SADDLE	1
	7YZM610007++H01	YZ023340	ACCESS.SADDLE	1
	7YZM610008++H01	YZ037940	ACCESS.SADDLE	1

• Parts with "⊙" indicate regular maintenance parts.

PH-7*A/7C/7D*


Rev.3

—— CONTENTS ——

FIG. 1	PH-7A	2
FIG. 2	PH-7C	4
FIG. 3	PH-7D	6

FIG. 1 PH-7A

3NK-2

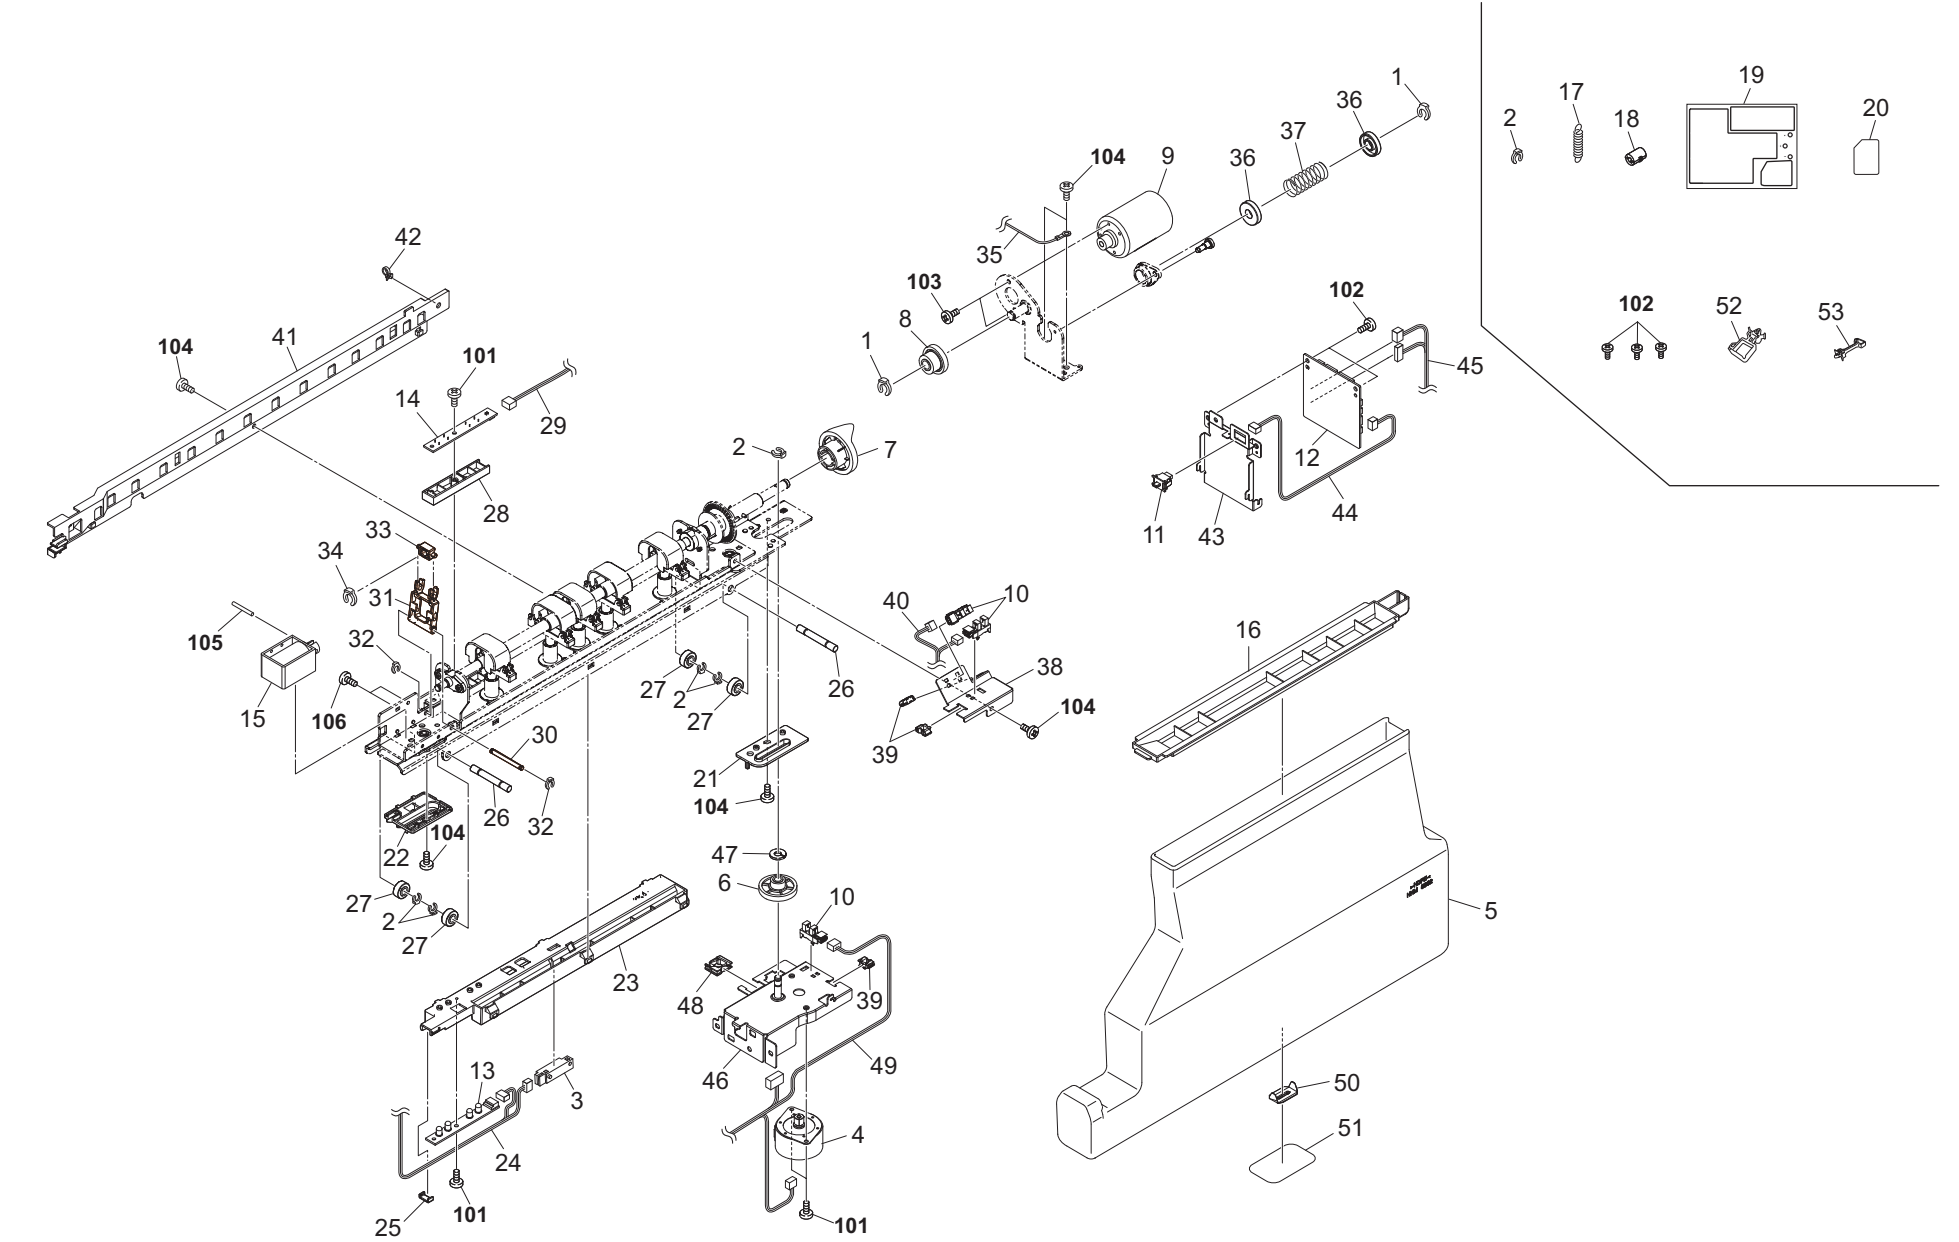


3NK-3

Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		
					120	230	240
50	303H402040	3H402040	GROUND PLATE TANK		1		
51	303H402050	3H402050	FILM GROUND PLATE		1		
52	7YZM610017++H01	YZ049360	ACCESS.SADDLE		1		
53	7YZM610023++H01	YZ128180	ACCESS.SADDLE		1		
101	7BB200308H	BB105660	+BIND T.T P SCREW 3X8				
102	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR				
103	7BB607306H	BB105770	+TP-CUP M SCREW 3X6 R				
104	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR				
105	E0130240	E0130240	SPRING PIN 3X24(SUS)				
106	7BB007305H	BB107020	+TP-CUP M SCREW 3X5				

- Parts with "." are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with ". ." are component parts or sub-assembly with ". ." appearing immediately above them.

FIG. 2 PH-7C

3NK-2

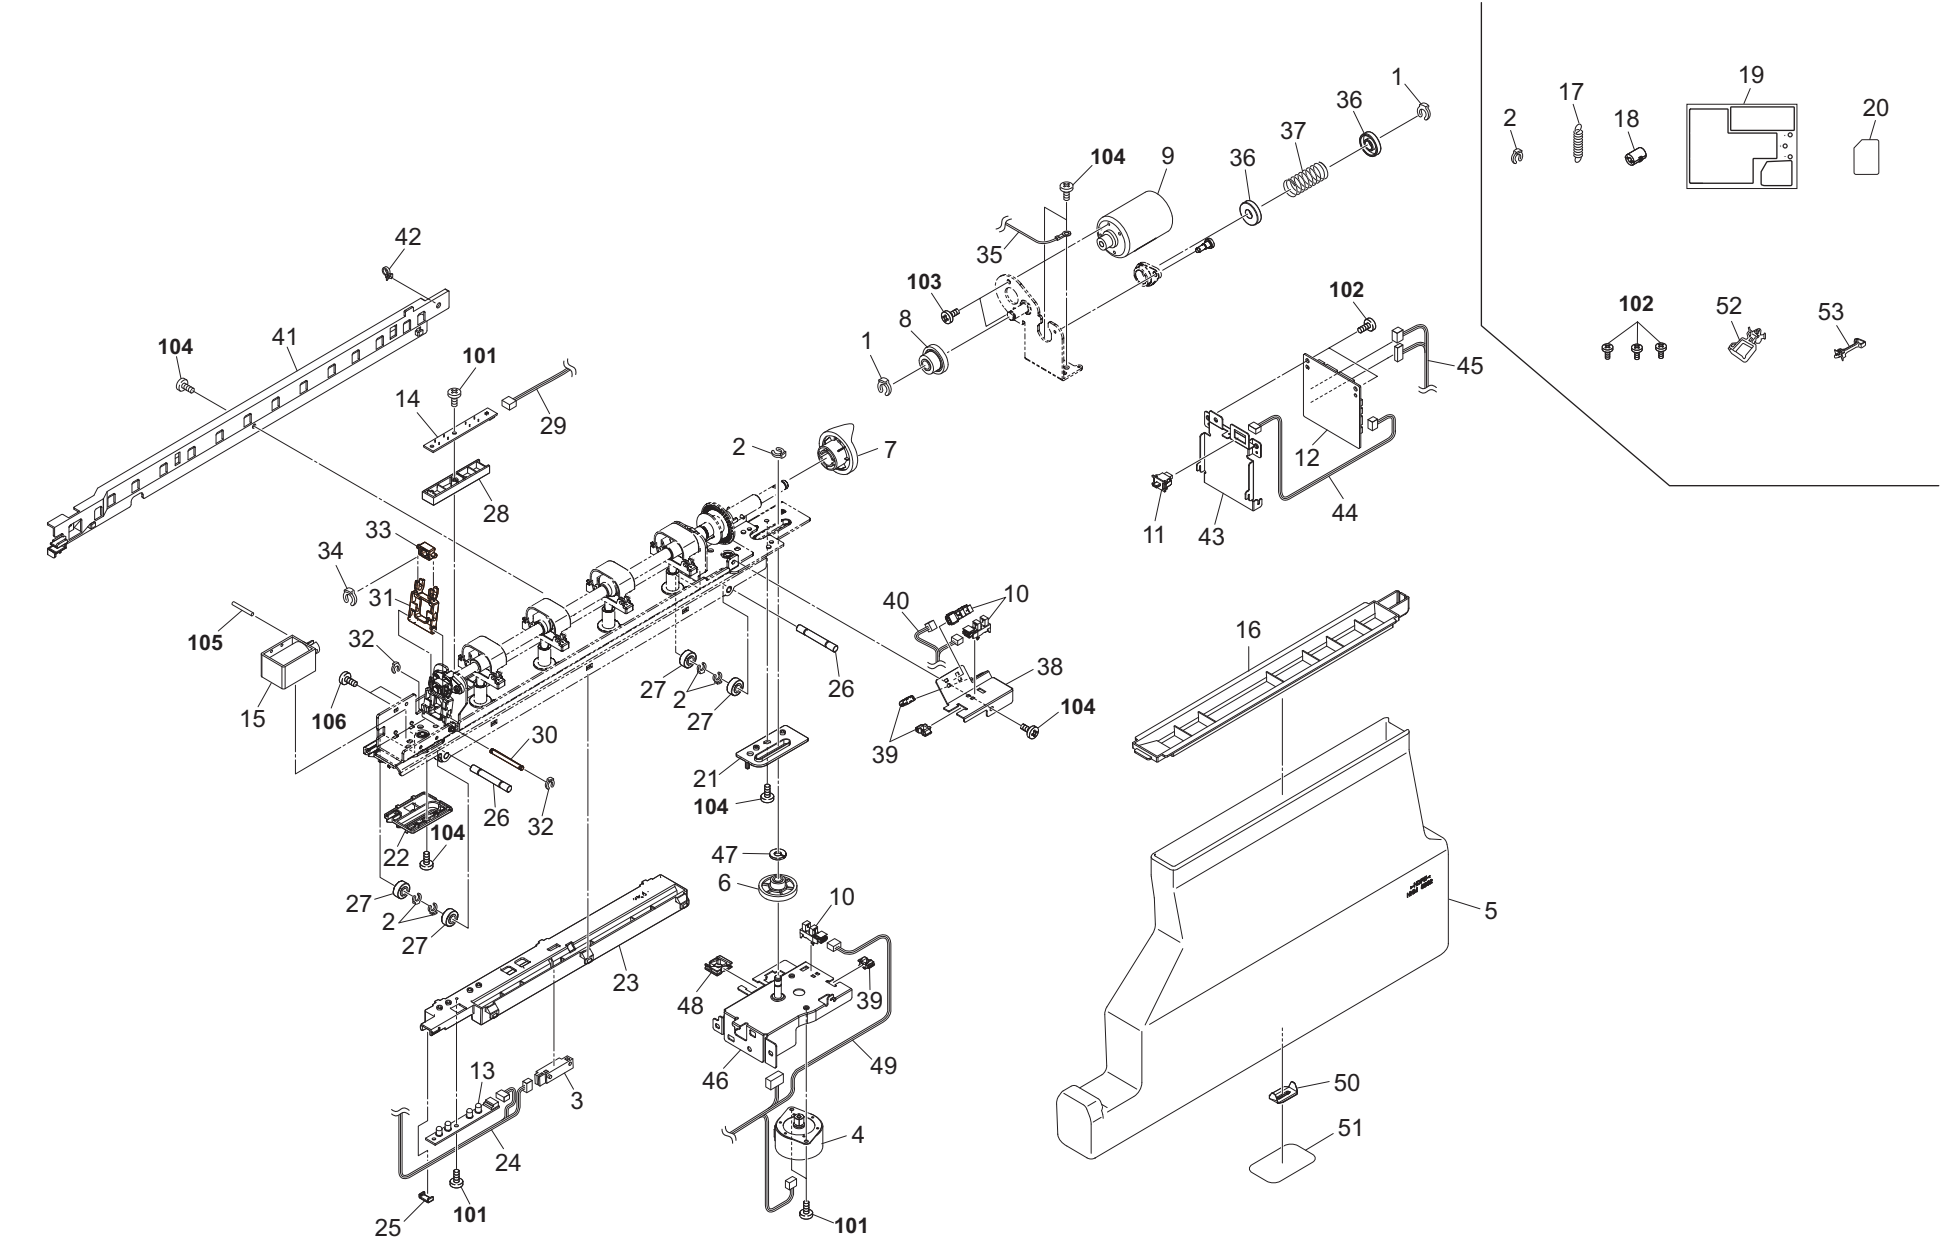

3NK-3

- Parts with "." are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with ". ." are component parts or sub-assembly with "." appearing immediately above them.

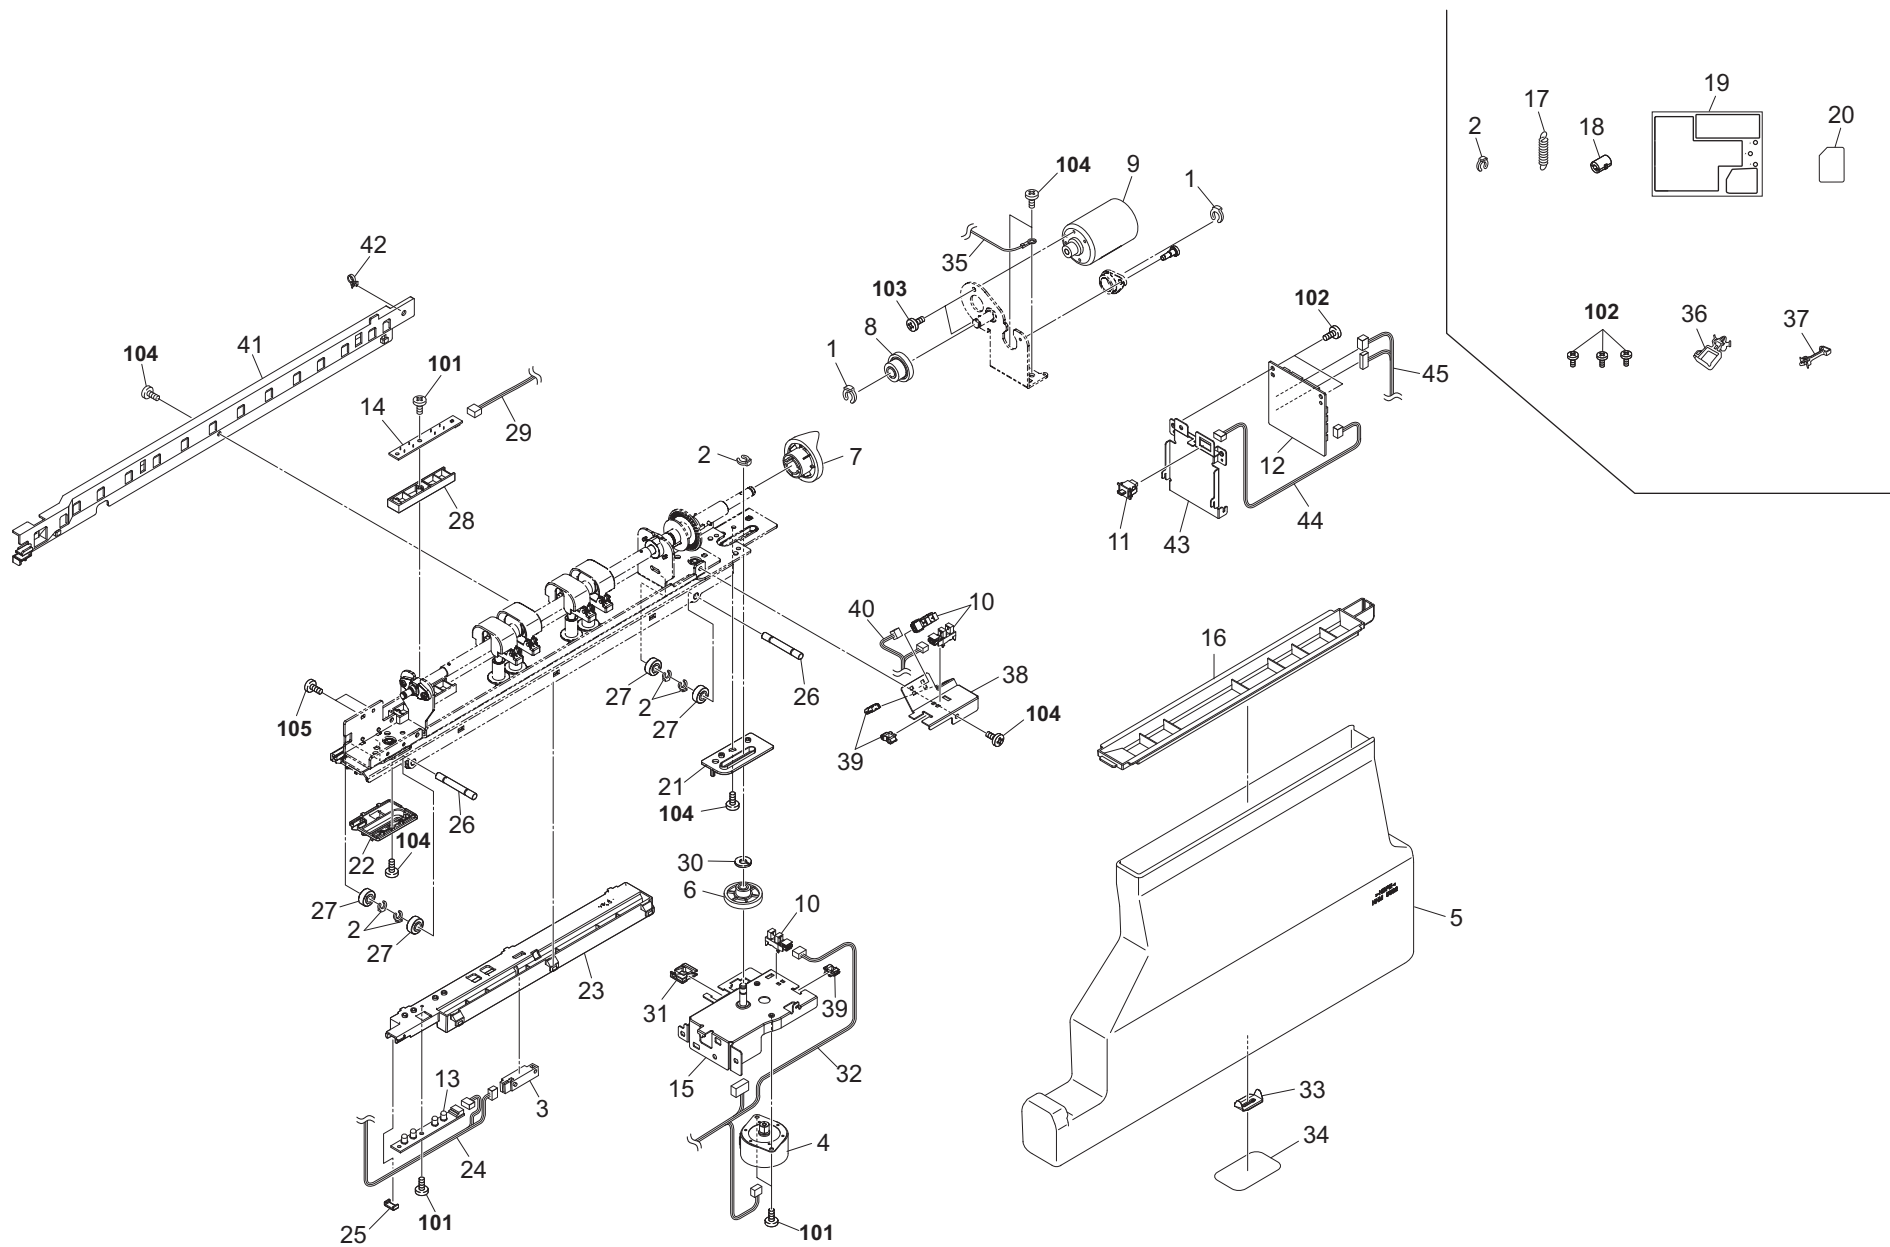


FIG. 3 PH-7D

3NK-3

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		
						120	230	240
	1	2BC06910	2BC06910	STOPPER 6			2	
	2	2BC06980	2BC06980	STOPPER 5			6	
⊙	3	303H327500	3H327500	SENSOR FEED B			1	
⊙	4	303NB94040	3NB94040	PARTS MOTOR-PM MOVING SP			1	
	5	303NK02010	3NK02010	TANK DISPOSAL			1	
⊙	6	303NK31020	3NK31020	GEAR Z63R-Z24S			1	
⊙	7	3H416110	3H416110	GEAR 40 CAM DRIVE			1	
⊙	8	3H416120	3H416120	GEAR 16-51 IDLE			1	
⊙	9	3H427010	3H427010	MOTOR PUNCH			1	
⊙	10	303M894260	3M894260	PARTS SENSOR OPT SP			3	
⊙	11	7SP01000006+H01	SP121020	SW.PUSH			1	
⊙	12	303NK94011	3NK94011	PARTS PWB PUNCH ASSY SP			1	
⊙	13	303NK94020	3NK94020	PARTS PWB SENSOR A ASSY SP			1	
⊙	14	303NK94030	3NK94030	PARTS PWB SENSOR B ASSY SP			1	
	15	303NK31010	3NK31010	MOUNT PUNCH MOVING MOTOR			1	
	16	303NK02020	3NK02020	GUIDE DISPOSAL TANK			1	
	17	303NK02070	3NK02070	SPRING PUNCH			1	
	18	M70CA010	M70CA010	FERRITE CORE,SFT-72SN(TAKEUCHI)			1	
	19	303NK34012	3NK34012	LABEL DISPOSAL TANK			1	
	20	303NK02080	3NK02080	SHEET MOTOR			1	
	21	303NK35080	3NK35080	GUIDE PUNCH FRONT			1	
	22	303NK35090	3NK35090	GUIDE PUNCH REAR			1	
	23	303NK35060	3NK35060	GUIDE WIRE A			1	
	24	303NK46070	3NK46070	WIRE PH UNIT J			1	
	25	303LL02330	3LL02330	HOLDER WIRE D			1	
	26	303NK35100	3NK35100	SHAFT PULLEY			2	
	27	302FG07020	2FG07020	PULLEY,CASSETTE RAIL			4	
	28	303NK35070	3NK35070	COVER PAPER DETECTION SENSOR			1	
	29	303NK46040	3NK46040	WIRE PH PTR			1	
	30	2C904550	2C904550	CUT WASHER 5			1	
	31	7YZM210005++H01	YZ037990	ACCESS.EDGING			1	
	32	303NK46020	3NK46020	WIRE PH MOT			1	
	33	303H402040	3H402040	GROUND PLATE TANK			1	
	34	303H402050	3H402050	FILM GROUND PLATE			1	
	35	303NK46080	3NK46080	WIRE EARTH			1	
	36	7YZM610017++H01	YZ049360	ACCESS.SADDLE			1	
	37	7YZM610023++H01	YZ128180	ACCESS.SADDLE			1	
	38	303NK35040	3NK35040	MOUNT PULSE DETECTION			1	
	39	M2104260	M2104260	EDGING,EDS-0607U(KITAGAWA)			3	
	40	303NK46050	3NK46050	WIRE PH PI			1	
	41	303NK35280	3NK35280	GUIDE WIRE B			1	
	42	7YZM410002++H01	YZ042720	ACCESS.BAND			1	
	43	303NK02030	3NK02030	MOUNT PWB			1	
	44	303NK46060	3NK46060	WIRE PH TANK SW			1	
	45	303NK46010	3NK46010	WIRE PH IF			1	

	Ref. No.	Part.No.	Alternative.	Description	Notes	Quantity		
						120	230	240
	101	7BB200308H	BB105660	+BIND T.T P SCREW 3X8				
	102	7BB700308H	BB105600	+BIND T.T S SCREW 3X8 SR				
	103	7BB607306H	BB105770	+TP-CUP M SCREW 3X6 R				
	104	7BB700408H	BB105640	+BIND T.T S SCREW 4X8 SR				
	105	7BB007305H	BB107020	+TP-CUP M SCREW 3X5				

- Parts with "⊙" indicate regular maintenance parts.
- Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

KYOCERA Document Solutions America, Inc.**Headquarters**

225 Sand Road,
Fairfield, New Jersey 07004-0008, USA
Phone: +1-973-808-8444
Fax: +1-973-882-6000

Latin America

8240 NW 52nd Terrace Dawson Building, Suite 100
Miami, Florida 33166, USA
Phone: +1-305-421-6640
Fax: +1-305-421-6666

KYOCERA Document Solutions Canada, Ltd.

6120 Kestrel Rd., Mississauga, ON L5T 1S8,
Canada
Phone: +1-905-670-4425
Fax: +1-905-670-8116

**KYOCERA Document Solutions
Mexico, S.A. de C.V.**

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco
Chapultepec, Delegacion Miguel Hidalgo,
Distrito Federal, C.P. 11560, México
Phone: +52-555-383-2741
Fax: +52-555-383-7804

KYOCERA Document Solutions Brazil, Ltda.

Av.Tambore,1180 Mod.B-09 CEP 06460-000
Tambore-Barueri-SP, Brazil
Phone: +55-11-4195-8496
Fax: +55-11-4195-6167

**KYOCERA Document Solutions
Australia Pty. Ltd.**

Level 3, 6-10 Talavera Road North Ryde N.S.W, 2113,
Australia
Phone: +61-2-9888-9999
Fax: +61-2-9888-9588

**KYOCERA Document Solutions
New Zealand Ltd.**

1-3 Parkhead Place, Albany, Auckland 1330,
New Zealand
Phone: +64-9-415-4517
Fax: +64-9-415-4597

KYOCERA Document Solutions Asia Limited

16/F.,Mita Centre, 552-566, Castle Peak Road
Tsuenwan, NT, Hong Kong
Phone: +852-2610-2181
Fax: +852-2610-2063

**KYOCERA Document Solutions
(China) Corporation**

8F, No. 288 Nanjing Road West, Huangpu District,
Shanghai,200003, China
Phone: +86-21-5301-1777
Fax: +86-21-5302-8300

**KYOCERA Document Solutions
(Thailand) Corp., Ltd.**

335 Ratchadapisek Road, Bangsue, Bangkok 10800,
Thailand
Phone: +66-2-586-0333
Fax: +66-2-586-0278

**KYOCERA Document Solutions
Singapore Pte. Ltd.**

12 Tai Seng Street #04-01A,
Luxasia Building, Singapore 534118
Phone: +65-6741-8733
Fax: +65-6748-3788

**KYOCERA Document Solutions
Hong Kong Limited**

16/F.,Mita Centre, 552-566, Castle Peak Road
Tsuenwan, NT, Hong Kong
Phone: +852-3582-4000
Fax: +852-3185-1399

**KYOCERA Document Solutions
Taiwan Corporation**

6F., No.37, Sec. 3, Minquan E. Rd.,
Zhongshan Dist., Taipei 104, Taiwan R.O.C.
Phone: +886-2-2507-6709
Fax: +886-2-2507-8432

KYOCERA Document Solutions Korea Co., Ltd.

18F, Kangnam bldg, 1321-1,
Seocho-Dong, Seocho-Gu, Seoul, Korea
Phone: +822-6933-4050
Fax: +822-747-0084

**KYOCERA Document Solutions
India Private Limited**

First Floor, ORCHID CENTRE
Sector-53, Golf Course Road, Gurgaon 122 002,
India
Phone: +91-0124-4671000
Fax: +91-0124-4671001

KYOCERA Document Solutions Europe B.V.

Bloemlaan 4, 2132 NP Hoofddorp,
The Netherlands
Phone: +31-20-654-0000
Fax: +31-20-653-1256

KYOCERA Document Solutions Nederland B.V.

Beechavenue 25, 1119 RA Schiphol-Rijk,
The Netherlands
Phone: +31-20-5877200
Fax: +31-20-5877260

KYOCERA Document Solutions (U.K.) Limited

8 Beacontree Plaza,
Gillette Way Reading, Berkshire RG2 0BS,
United Kingdom
Phone: +44-118-931-1500
Fax: +44-118-931-1108

KYOCERA Document Solutions Italia S.p.A.

Via Verdi, 89/91 20063 Cernusco s/N.(MI),
Italy
Phone: +39-02-921791
Fax: +39-02-92179-600

KYOCERA Document Solutions Belgium N.V.

Sint-Martinusweg 199-201 1930 Zaventem,
Belgium
Phone: +32-2-7209270
Fax: +32-2-7208748

KYOCERA Document Solutions France S.A.S.

Espace Technologique de St Aubin
Route de l'Orme 91195 Gif-sur-Yvette CEDEX,
France
Phone: +33-1-69852600
Fax: +33-1-69853409

KYOCERA Document Solutions Espana, S.A.

Edificio Kyocera, Avda. de Manacor No.2,
28290 Las Matas (Madrid), Spain
Phone: +34-91-6318392
Fax: +34-91-6318219

KYOCERA Document Solutions Finland Oy

Atomitie 5C, 00370 Helsinki,
Finland
Phone: +358-9-47805200
Fax: +358-9-47805390

**KYOCERA Document Solutions
Europe B.V., Amsterdam (NL) Zürich Branch**

Hohlstrasse 614, 8048 Zürich,
Switzerland
Phone: +41-44-9084949
Fax: +41-44-9084950

**KYOCERA Document Solutions
Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch,
Germany
Phone: +49-2159-9180
Fax: +49-2159-918100

KYOCERA Document Solutions Austria GmbH

Eduard-Kittenberger-Gasse 95, 1230 Vienna,
Austria
Phone: +43-1-863380
Fax: +43-1-86338-400

KYOCERA Document Solutions Nordic AB

Esbogatan 16B 164 75 Kista, Sweden
Phone: +46-8-546-550-00
Fax: +46-8-546-550-10

KYOCERA Document Solutions Norge Nuf

Postboks 150 Oppsal, 0619 Oslo,
Norway
Phone: +47-22-62-73-00
Fax: +47-22-62-72-00

KYOCERA Document Solutions Danmark A/S

Ejby Industrivej 60, DK-2600 Glostrup,
Denmark
Phone: +45-70223880
Fax: +45-45765850

KYOCERA Document Solutions Portugal Lda.

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa,
Portugal
Phone: +351-21-843-6780
Fax: +351-21-849-3312

**KYOCERA Document Solutions
South Africa (Pty) Ltd.**

KYOCERA House, Hertford Office Park,
90 Bekker Road (Cnr. Allandale), Midrand, South Africa.
Phone: +27-11-540-2600
Fax: +27-11-466-3050

KYOCERA Document Solutions Russia LLC

Botanichesky pereulok 5, Moscow, 129090,
Russia
Phone: +7(495)741-0004
Fax: +7(495)741-0018

KYOCERA Document Solutions Middle East

Dubai Internet City, Bldg. 17,
Office 157 P.O. Box 500817, Dubai,
United Arab Emirates
Phone: +971-04-433-0412

KYOCERA Document Solutions Inc.

2-28, 1-chome, Tamatsukuri, Chuo-ku
Osaka 540-8585, Japan
Phone: +81-6-6764-3555
<http://www.kyoceradocumentsolutions.com>